N6210.book Page 1 Wednesday, May 18, 2005 10:24 AM

Copyright and Trademark Information

Fujitsu Computer Systems Corporation has made every effort to ensure the accuracy and completeness of this document. However, as ongoing development efforts are continually improving the capabilities of our products, we cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions, or future changes. The absence of a product or service name, slogan, or logo does not constitute a waiver of any trademark or other intellectual property rights relating to that name, slogan, or logo owned by Fujitsu Computer Systems Corporation, its parent, subsidiaries, and affiliated companies.

Fujitsu, the Fujitsu logo, and LifeBook are registered trademarks of Fujitsu Limited.

Intel and Pentium are registered trademarks and Centrino is a trademark of Intel Corporation or its subsidiaries in the United States and other countries.

ExpressCard™ Compliance ID EC100024. The ExpressCard word mark and logo are owned by the Personal Computer Memory Card International Association (PCMCIA) and any use of such marks by Fujitsu Computer Systems Corporation is under license.

MS-DOS and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

PCMCIA is a trademark of the Personal Computer Memory Card International Association.

Memory Stick and Memory Stick Duo are trademarks of Sony, its parent, and/or its affiliates.

Adobe, Acrobat, and Acrobat Reader are either registered trademarks or trademarks of Adobe Systems, Incorporated in the United States and/or other countries.

Dolby Headphone manufactured under license from Dolby Laboratories. Dolby is a trademark of Dolby Laboratories.

Quicken is a registered trademark and/or registered service mark of Intuit, Inc. or one of its subsidiaries in the United States and other countries.

InterVideo and WinDVD are registered trademarks of Intervideo, Inc.

Norton AntiVirus is a registered trademark of Symantec Corporation in the United States and other countries.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

All other trademarks mentioned herein are the property of their respective owners.

Warning

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

Wash hands after handling.

© Copyright 2005 Fujitsu Computer Systems Corporation. All rights reserved. No part of this publication may be copied, reproduced, translated, stored, or transmitted in any electronic form without the written consent of Fujitsu Computer Systems Corporation.

B6FH-6051-01EN-00

DECLARATION OF CONFORMITY

according to FCC Part 15

Responsible Party Name:	Fujitsu Computer Systems Corporation
Address:	1250 E. Arques Avenue (M/S 122) Sunnyvale, CA 94085
Telephone:	(408) 746-6000
Declares that product:	Model Configuration: LifeBook N6210 Complies with Part 15 of the FCC Rules.

This device complies with Part 15 of the FCC rules. Operations are subject to the following two conditions: (1) This device must not be allowed to cause harmful interference, (2) This device must accept any interference received, including interference that may cause undesired operation.

N6210.book Page 2 Wednesday, May 18, 2005 10:24 AM

IMPORTANT SAFETY INSTRUCTIONS

This product requires an AC adapter to operate. Use only a UL Listed I.T.E. AC Adapter with an output rating of 19V DC, with a current of 4.22A.

AC adapter output polarity:

When using your notebook equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water for example, near a bathtub, washbowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using the modem during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the modem to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord

SAVE THESE INSTRUCTIONS

For Authorized Repair Technicians Only

Danger of explosion if Lithium (clock) battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instruction.

For continued protection against risk of fire, replace only with the same type and rating fuse.

System Disposal

Hg LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE, OR FEDERAL LAWS.

N6210.book Page 1 Wednesday, May 18, 2005 10:24 AM

Fujitsu LifeBook® N6000 Series
Table of Contents

1

PREFACE

Preface
About This Guide 3
Fujitsu Contact Information 3
Warranty 3

2

GETTING TO KNOW YOUR LIFEBOOK NOTEBOOK

Overview
Unpacking 7

Locating the Controls and Connectors
Top and Front Components 9
Left-Side Panel Components 10
Right-Side Panel Components 11
Rear Panel Components 12
Bottom Components 14

Status Indicator Panel
Battery Charging Indicator 15
Battery Status Indicator 15
Hard Drive/Optical Drive Access Indicator 15
NumLock Indicator 15
CapsLock Indicator 15
ScrLock Indicator 15

Keyboard
Using the Keyboard 16
Numeric Keypad 16
Windows Keys 16
Cursor Keys 16
Function Keys 17

Volume Control
Controlling the Volume 18

Touchpad Pointing Device
Clicking 19
Double-Clicking 19
Dragging 20
Scrolling 20
Touchpad Control Adjustment 20

3

GETTING STARTED WITH YOUR LIFEBOOK NOTEBOOK

Power Sources
Connecting the AC Adapter 23

Display Panel
Opening the Display Panel 24
Adjusting Display Panel Brightness 24
Closing the Display Panel 24

Starting Your LifeBook Notebook
Power On 25
Boot Sequence 25
BIOS Setup Utility 25
Booting the System 26
Windows Product Activation 26
Registering Your LifeBook Notebook 27
Installing Click Me! 27

Power Management
Power and Suspend/Resume Button 28
Suspend Mode 28
Hibernation (Save-to-disk) Feature 29
Display Timeout 29
Hard Disk Timeout 29
Restarting the System 29
Power Off 29

N6210.book Page 2 Wednesday, May 18, 2005 10:24 AM

4

USER-INSTALLABLE FEATURES

Lithium ion Battery
Recharging the Batteries. 33
Replacing the Battery 34

Optical Drive
Optical Drive Software 35
Loading Media 35
Removing Media 35
Emergency Optical Drive Tray Release 36
Playing Media on the Optical Drive 36
Using the Optical Player Software 36
Using the Media Player Buttons 36
Desktop Control Panel 37
Using Dolby™ Headphone. 38
Using the Drive on Battery Power 38
Auto Insert Notification Function 39

Memory Stick/SD/xD Card Slot
Installing Memory Stick/SD/xD Cards 40
Removing A Memory Stick/SD/xD Card 41

Hard Disk Drive
Formatting the Hard Disk Drive 42

PC Cards/ExpressCards™
Installing PC Cards 43
Removing PC Cards 43
Installing ExpressCards 44
Removing ExpressCards 44

Memory Upgrade Module
Installing a Memory Module 45
Removing a Memory Upgrade Module 46
Checking the Memory Capacity 46

Device Ports
Communications Ports 47
LAN Port 47
IEEE 1394 Jack 47
Universal Serial Bus (USB) 2.0 Ports 47
S-Video Out Port 48
Microphone Jack 48
Headphone Jack. 48
External Monitor Port. 48

5

TROUBLESHOOTING

Troubleshooting
Identifying the Problem 51
Troubleshooting Table 52
Power On Self Test Messages 59
Modem Result Codes. 60

Restoring Your Pre-installed Software
Restoring the Factory Image 61
Automatically Downloading Driver Updates. . . . 62

6

CARE AND MAINTENANCE

Care and Maintenance
LifeBook Notebook 65
Batteries. 66
Floppy Disks and Drives 66
DVDs and CDs. 66
PC Cards 67

7

SYSTEM SPECIFICATIONS

Specifications
Configuration Label 71
Microprocessor 71
Memory. 71
Video. 71
Audio. 71
Mass Storage Devices 71
Features. 71
Device Ports. 72
Power 72
Dimensions 72
Environmental Requirements 72
Popular Accessories 72
Pre-Installed Software 73
Application Descriptions. 73

N6210.book Page 3 Wednesday, May 18, 2005 10:24 AM

8

GLOSSARY/REGULATORY

Glossary
Glossary 77

Regulatory Information
Regulatory Information 81

APPENDIX A: INTEGRATED WIRELESS LAN USER'S GUIDE

Before Using the Wireless LAN
Wireless LAN Modes Using this Device. 86
Wireless Network Considerations 87
Deactivating the WLAN Device 87
Activating the WLAN Device 87

Configuration of the WLAN Device
Flow of Operations. 88
Configuration Using Intel PROSet Utility 88
Connection to the network. 89

Troubleshooting the WLAN
Troubleshooting Table 92

Wireless LAN Glossary
Glossary 93

IP address information
About IP Addresses 95

Specifications
Specifications 96

APPENDIX B: TV TUNER USER'S GUIDE
TV Tuner Applications 99
Introducing the TV Tuner 99
TV Tuner Features 99
Remote Control Features 102
Connecting the TV tuner 103
Getting Started. 105
Setting Up/Skipping Channels 105
Starting/closing Instant MyMedia. 106
Watching TV/Video without Booting Up 106
Copying from an External Device to DVD. 107
RECORDING TV Programs to HDD 107
Recording TV Programs on a DVD 108
Watching Recorded TV/Videos 109
Playing CD/DVDs. 110
Adjusting the Display Setting 115
Troubleshooting and Recovery 116
Specifications 119
Technical Support. 120

INDEX
Index 121

N6210.book Page 4 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 1 Wednesday, May 18, 2005 10:24 AM

1
Preface

N6210.book Page 2 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 3 Wednesday, May 18, 2005 10:24 AM

Preface

ABOUT THIS GUIDE

The LifeBook® N6200 notebook from Fujitsu Computer Systems Corporation provides desktop performance with a fast Intel® Pentium® M processor. The 17" Crystal View WXGA+ high-resolution screen displays vibrant colors with pinpoint sharpness. The high-performance integrated Intel 915PM chipset with ATI graphics and 128 MB of dedicated video memory.

It comes with Microsoft® Windows® XP Home Edition or Windows XP Professional pre-installed.

This manual explains how to operate your LifeBook notebook's hardware and built-in system software.

Conventions Used in the Guide

Keyboard keys appear in brackets.
Example: [Fn], [F1], [ESC], [ENTER] and [CTRL].

Pages with additional information about a specific topic are cross-referenced within the text.
Example: *(See page xx.)*

On screen buttons or menu items appear in bold
Example: Click **OK** to restart your LifeBook notebook.

The information icon highlights information that will enhance your understanding of the subject material.

The caution icon highlights information that is important to the safe operation of your computer or to the integrity of your files. Please read all caution information carefully.

The warning icon highlights information that can be hazardous to either you, your notebook, or your files. Please read all warning information carefully.

FUJITSU CONTACT INFORMATION

Service and Support

You can contact Fujitsu Service and Support the following ways:

- Toll free: 1-800-8Fujitsu (1-800-838-5487)
- E-mail: 8fujitsu@us.fujitsu.com
- Web site: http://www.computers.us.fujitsu.com/support

Before you place the call, you should have the following information ready so that the customer support representative can provide you with the fastest possible solution:

- Product name
- Product configuration number
- Product serial number
- Purchase date
- Conditions under which the problem occurred
- Any error messages that have occurred
- Type of device connected, if any

Fujitsu Online

You can go directly to the online Fujitsu Product catalog for your LifeBook notebook by clicking on the Fujitsu Web links -> LifeBook Accessories Web site URL link, located in the Windows Start menu.

You must have an active internet connection to use the on-line URL links.

You can also reach Fujitsu Service and Support online by clicking on the Fujitsu Service and Support Web site URL link, located in the Fujitsu Web links -> Service and Support Software folder of the Windows Start menu.

To ensure that you always have the most current driver updates related to your system, you should occasionally access the Fujitsu Driver Update (FDU) utility. With FDU, you can choose to automatically or manually go to the Fujitsu site to check for new updates for your system.

The FDU icon should appear in the system tray at the bottom right of your screen (roll the cursor over the icons to find the correct one). If the FDU icon does not appear in the system tray, it can be started by going to [Start] -> All Programs, and clicking on Fujitsu Driver Update; this will create the icon automatically.

WARRANTY

Depending upon the configuration of your LifeBook notebook, your system is backed by either a one-year or three-year International Limited Warranty. Check the information that came with your LifeBook notebook for further warranty terms and conditions.

N6210.book Page 4 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 5 Wednesday, May 18, 2005 10:24 AM

2

Getting to Know Your LifeBook Notebook

N6210.book Page 6 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 7 Wednesday, May 18, 2005 10:24 AM

Figure 2-1. LifeBook N6200 Series

Overview

This section describes the components of your Fujitsu LifeBook N6200 Series notebook. We strongly recommend that you read it before using your LifeBook notebook, even if you are already familiar with notebook computers.

UNPACKING

When you receive your LifeBook notebook, unpack it carefully, and compare the parts you have received with the items listed below.

For a pre-configured model you should have:

- LifeBook N6200 Series notebook computer
- Lithium ion battery, pre-installed
- AC adapter with AC power cord *(Figure 2-2)*
- Phone/Modem (RJ-11) telephone cable
- Drivers and Applications Restore CD
- Restore DVD
- Getting Started Guide
- User's Guide (this guide)
- International Limited Warranty Brochure
- Microsoft-associated materials

Depending upon the configuration of your system, one or more of the following items may also be included in the box:*

- Application CDs for third-party software
- Additional battery

** Note that if your notebook has an optional TV tuner device, additional items are included, as itemized in "Introducing the TV Tuner" on page 99.*

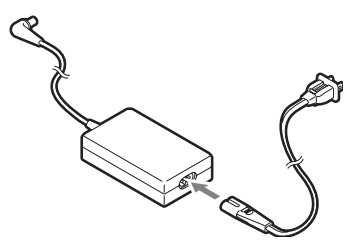

Figure 2-2. AC Adapter

N6210.book Page 8 Wednesday, May 18, 2005 10:24 AM

Locating the Controls and Connectors

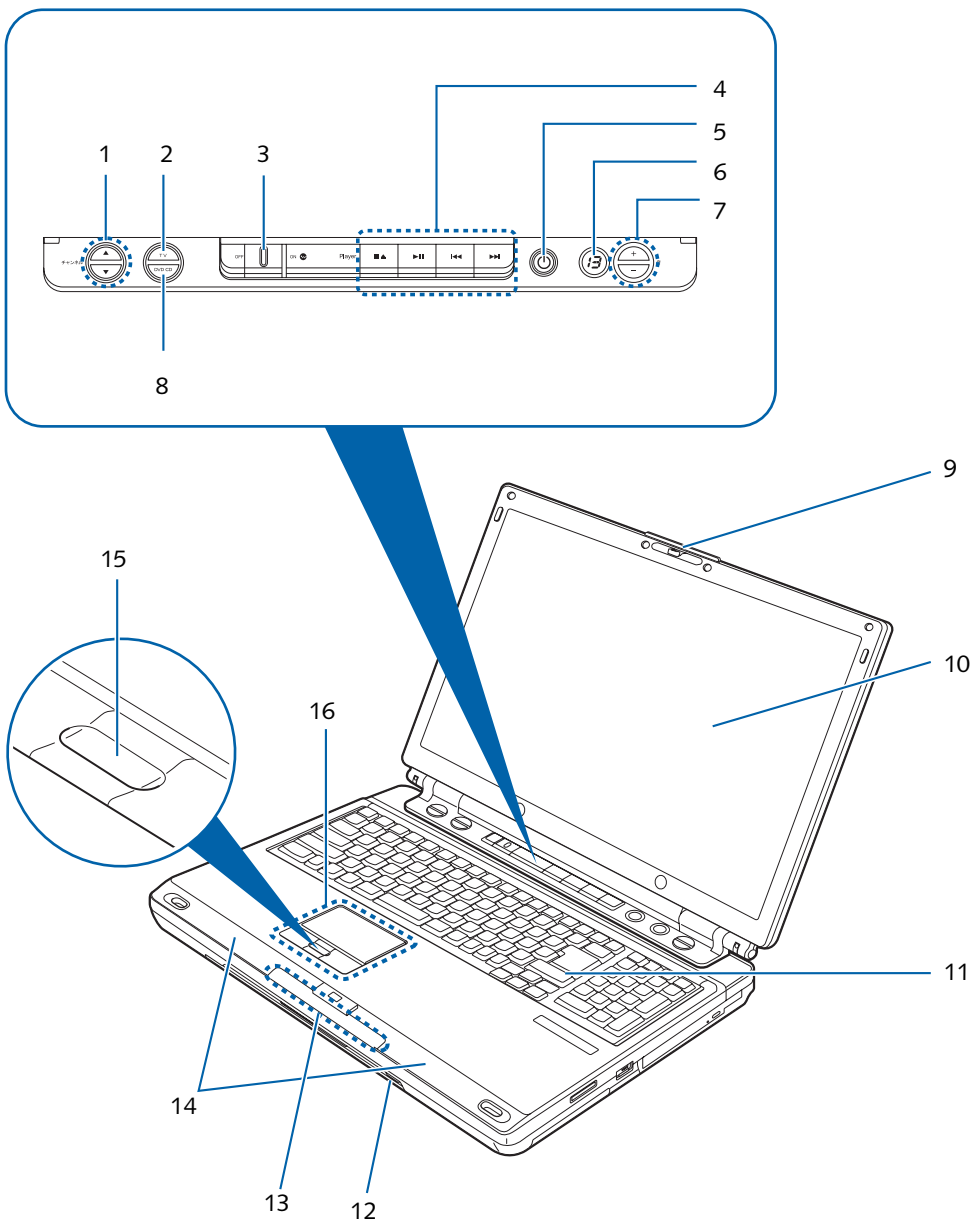

Figure 2-3. LifeBook notebook, display open

1 Channel Button*
2 TV Button*
3 Wireless LAN Switch
4 Media Player Buttons
5 Power/Suspend/Resume Button
6 Volume Level
7 Volume Control
8 DVD/CD Button
9 Display Panel Latch
10 Display Panel
11 Keyboard
12 Remote Control IR Port*
13 Status Indicator Panel
14 Stereo Speakers
15 Scrolling Button
16 Touchpad Pointing Device

* Present on models with optional TV Tuner only.

N6210.book Page 9 Wednesday, May 18, 2005 10:24 AM

TOP AND FRONT COMPONENTS

The following is a brief description of your LifeBook notebook's top and front components.

Channel Button

The channel button is present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

TV Button

The TV button is present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

Wireless LAN Switch

The Wireless LAN On/Off Switch turns the wireless LAN on and off. *(See Integrated Wireless LAN* User's Guide on page 83 for more information)*

Media Player Buttons

The LifeBook Media Player buttons allow you to control the media player when your unit is on. *(See LifeBook Application/Media Player Panel on page 22 for more information)*

Power/Suspend/Resume Button

The Power/Suspend/Resume button allows you to suspend notebook activity without powering off, resume your notebook from suspend mode, and power on your LifeBook notebook when it has been shut down. *(See Power On on page 25 for more information)* and *(See Power and Suspend/Resume Button on page 28 for more information)*

Volume Level

The volume level indicator shows the current volume level. *(See Controlling the Volume on page 18 for more information)*

Volume Control

The volume control button is used to adjust the volume while watching or listening to a DVD or CD, or watching TV with the optional TV tuner. *(See Controlling the Volume on page 18 for more information)*

DVD/CD Button

The DVD/TV button is present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

Display Panel Latch

The display panel latch locks and releases the display panel.

Display Panel

The display panel is a color LCD panel with back lighting for the display of text and graphics.

Keyboard

A full-size keyboard with dedicated Windows keys. *(See Using the Keyboard on page 16 for more information)*

Remote Control IR Port

The remote control infrared port is present only on LifeBook models with an optional TV tuner, and only controls the TV tuner remote control. *(See TV Tuner User's Guide on page 99 for more information)*

Status Indicator Panel

The Status Indicator Panel displays symbols that correspond with a specific component of your LifeBook notebook. *(See Status Indicator Panel on page 15 for more information)*

Stereo Speakers

The built-in boxless dual speakers provide stereo sound. Additionally, there is a subwoofer located on the bottom of the system. *(See Bottom Components on page 14 for more information)*

Scrolling Button

The scrolling button lets you navigate quickly through a document without having to use the window scroll bars. *(See Scrolling on page 20 for more information)*

Touchpad Pointing Device

The pointing device is a Touchpad that allows you simple cursor control. *(See Touchpad Pointing Device on page 19 for more information)*

N6210.book Page 10 Wednesday, May 18, 2005 10:24 AM

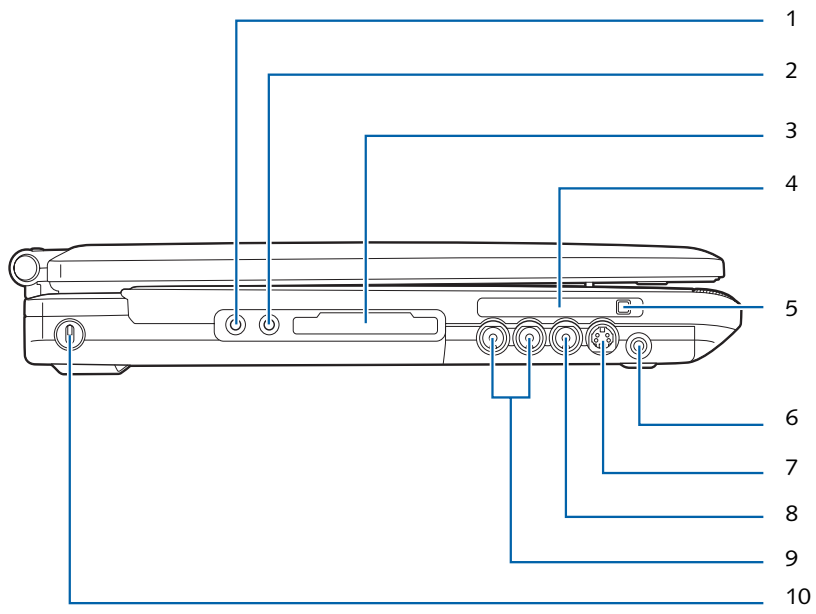

Figure 2-4. LifeBook notebook left-side panel

1 Microphone Jack
2 Headphone Jack
3 ExpressCard Slot
4 PC Card Slot
5 PC Card Eject Button
6 Antenna Mini-Jack*
7 S-Video Input Port*
8 Video Input Jack (composite)*
9 Audio Input Jacks*
10 Anti-Theft Lock Slot

* Present on models with optional TV Tuner only.

LEFT-SIDE PANEL COMPONENTS

Following is a brief description of your LifeBook notebook's left-side components.

Microphone Jack

The microphone jack allows you to connect an external stereo microphone. *(See Microphone Jack on page 48 for more information)*

Headphone Jack

This jack allows you to connect headphones or powered external speakers. *(See Microphone Jack on page 48 for more information)*

ExpressCard Slot

The ExpressCard Slot allows you to install an ExpressCard. *(See PC Cards/ExpressCards™ on page 43 for more information)*

PC Card Slot

The PC Card Slot allows you to install a Type I or Type II PC Card. *(See PC Cards/ExpressCards™ on page 43 for more information)*

PC Card Eject Button

The PC Card eject buttons are used to eject a PC Card from the PC Card slot. *(See PC Cards/ExpressCards™ on page 43 for more information)*

Antenna Mini-Jack

The antenna mini-jack is present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

S-Video Input Port

The S-Video input port is present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

Video Input Jack (composite)

The video input jack (composite) is present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

Audio Input Jacks

The audio input jacks are present only on LifeBook models with an optional TV tuner. *(See TV Tuner User's Guide on page 99 for more information)*

Anti-theft Lock Slot

The anti-theft lock slot allows you to attach an optional physical lock down device.

N6210.book Page 11 Wednesday, May 18, 2005 10:24 AM

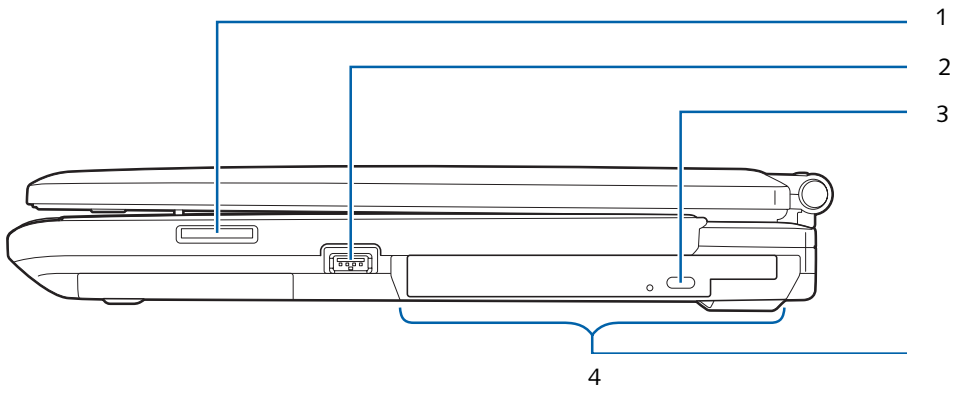

Figure 2-5. LifeBook notebook right-side panel

1 Memory Stick/SD/xD Card Slot
2 USB 2.0 Port
3 Optical Drive Eject Button
4 Optical Drive

RIGHT-SIDE PANEL COMPONENTS

Following is a brief description of your LifeBook notebook's right-side components.

Memory Stick/SD/xD Card Slot

The Memory Stick/Secure Digital (SD)/xD card slot allows you to install a flash memory card for data storage. This architecture allows you to transfer data between a variety of different digital devices. *(See Installing Memory Stick/SD/xD Cards on page 40 for more information)*

When installing a Memory Stick, SD, or xD card in the slot, be sure the card label is **facing downward.** When installed, a Memory Stick will extend approximately half an inch from the edge of the notebook chassis.

USB 2.0 Ports

The four USB ports (one on the right side panel and three on the rear panel) allow you to connect Universal Serial Bus (USB) 2.0 or USB 1.1 devices. *(See Universal Serial Bus (USB) 2.0 Ports on page 47 for more information)*

Optical Drive Eject Button

The optical drive eject button is used to eject the media tray.

Optical Drive

One of several different drives can be installed depending upon the configuration of your system. *(See Optical Drive on page 35 for more information)*.

N6210.book Page 12 Wednesday, May 18, 2005 10:24 AM

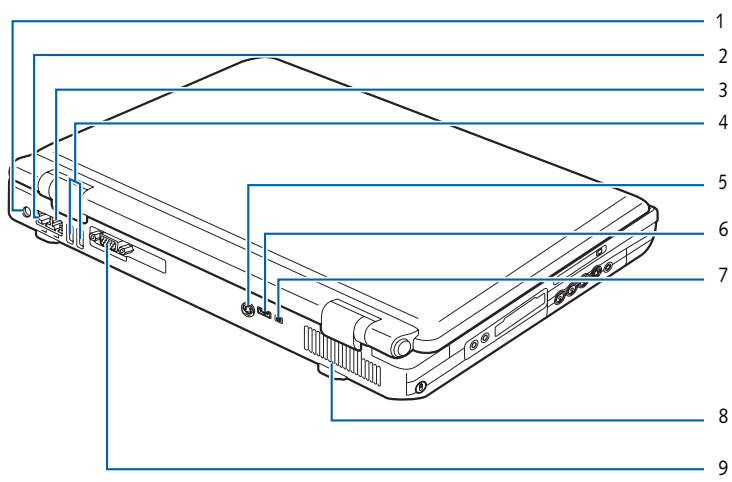

Figure 2-6. LifeBook notebook back panel

1 DC In Jack
2 LAN Port
3 Modem Port
4 USB Ports
5 S-Video Out Port
6 USB Port
7 IEEE 1394 Port
8 Air Vents
9 External Monitor Port

REAR PANEL COMPONENTS

Following is a brief description of your LifeBook notebook's rear panel components.

DC Power Jack

The DC power jack allows you to plug in the AC adapter to power your LifeBook notebook and charge the internal Lithium ion battery.

LAN Port

The LAN port is designed to accept a Local Area Network (LAN) RJ-45 jack. *(See Communications Ports on page 47 for more information)*

Modem Port

The modem port is designed to accept a Modem (RJ-11) telephone jack for the multi-national internal 56K modem. *(See Communications Ports on page 47 for more information)*

The internal modem is not intended for use with Digital PBX systems. Do not connect the modem to a digital PBX as it may cause serious damage to the internal modem or your LifeBook notebook. Consult your PBX manufacturer's documentation for details. Some hotels have Digital PBX systems. Be sure to find out BEFORE you connect your modem. Third-party hardware is available to allow modem-to-PBX interface.

The internal modem is designed to the ITU-T V.90 standard. Its maximum speed of 53000bps is the highest allowed by FCC, and its actual connection rate depends on the line conditions. The maximum upload speed is 33600bps.

USB 2.0 Ports

The four USB ports (one on the right side panel and three on the rear panel) allow you to connect Universal Serial Bus (USB) 2.0 or USB 1.1 devices. *(See Universal Serial Bus (USB) 2.0 Ports on page 47 for more information)*

S-Video Out Port

The S-Video out port is used to transmit a high resolution video signal to a compatible TV or VCR. *(See S-Video Out Port on page 48 for more information)*

IEEE 1394 Port

The IEEE 1394 port is used to connect Firewire devices (such as digital cameras) to your LifeBook notebook. *(See IEEE 1394 Jack on page 47 for more information)*

N6210.book Page 13 Wednesday, May 18, 2005 10:24 AM

Air Flow Vents

The air flow vents assist in proper cooling of the system.

To protect your notebook from damage and to optimize system performance, be sure to **keep all air all vents unobstructed**, **clean, and clear of debris**. This may require periodic cleaning, depending upon the environment in which the system is used.

Do not operate the notebook in areas where the air vents can be obstructed, such as in tight enclosures or on soft surfaces like a bed or cushion.

External Monitor Port

The external monitor port allows you to connect an external monitor. *(See External Monitor Port on page 48 for more information)*

N6210.book Page 14 Wednesday, May 18, 2005 10:24 AM

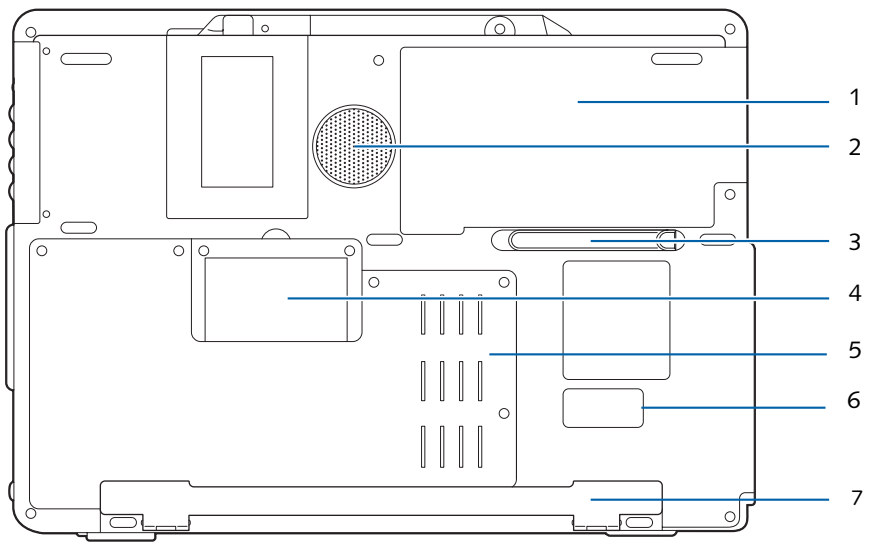

Figure 2-7. LifeBook notebook bottom panel

1 Lithium ion Battery Bay
2 Subwoofer
3 Battery Latch
4 Memory Compartment Cover
5 Configuration Label (approximate location)
6 Air Flow Vents
7 Tilt Foot

BOTTOM COMPONENTS

Following is a brief description of your LifeBook notebook's bottom panel components.

Lithium ion Battery Bay

The battery bay contains the internal Lithium ion battery. It can be opened for the removal of the battery when stored over a long period of time or for swapping a discharged battery with a charged Lithium ion battery. *(See Lithium ion Battery on page 33 for more information)*

Subwoofer

The subwoofer speaker provides bass-range sound to supplement the stereo speakers, resulting in high-quality audio.

Battery Latch

Allows your to secure the Lithium ion Battery in the battery bay.

Memory Compartment Cover

Your LifeBook notebook comes with high speed DDR2-533 SO-DIMM memory. The memory upgrade compartment allows you to expand the system memory capacity of your LifeBook notebook, thus improving overall performance. Note: The memory compartment cover also covers the location of the wireless LAN device; the memory location is outlined with a dotted line in the illustration above. *(See Memory Upgrade Module on page 45 for more information)*

Air Flow Vents

The air flow vents assist in proper cooling of the system.

To protect your notebook from damage and to optimize system performance, be sure to **keep all air all vents unobstructed**, **clean, and clear of debris**. This may require periodic cleaning, depending upon the environment in which the system is used.

Do not operate the notebook in areas where the air vents can be obstructed, such as in tight enclosures or on soft surfaces like a bed or cushion.

Tilt Foot

The tilt foot allows you to modify the angle of the keyboard to optimize typing and viewing comfort.

N6210.book Page 15 Wednesday, May 18, 2005 10:24 AM

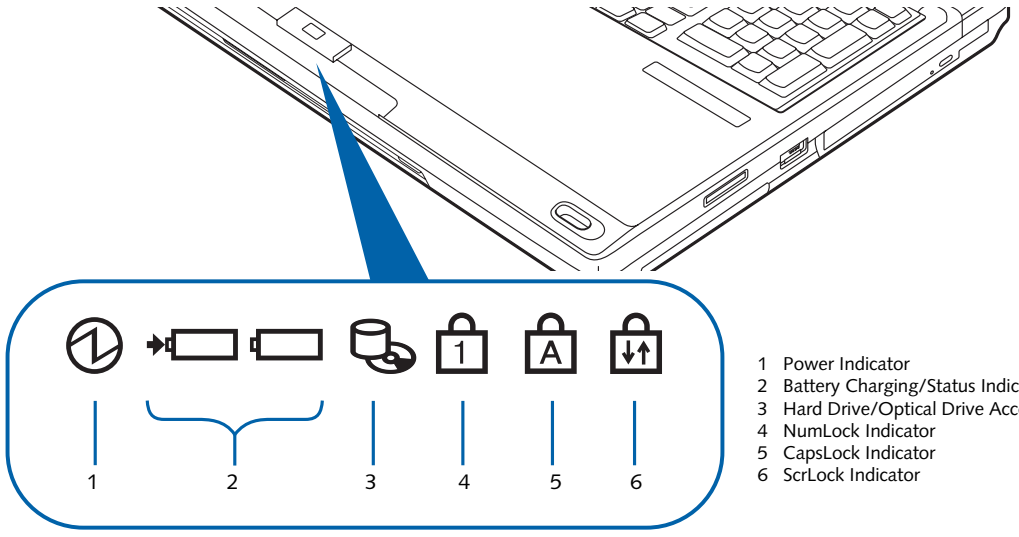

1 Power Indicator
2 Battery Charging/Status Indicators
3 Hard Drive/Optical Drive Access
4 NumLock Indicator
5 CapsLock Indicator
6 ScrLock Indicator

Figure 2-8. Status Indicator Panel/Volume LEDs

Status Indicator Panel

The Status Indicator panel is located just above the keyboard. Within this panel are symbols that correspond to specific components of your LifeBook notebook. These symbols tell you how each of those components is operating. *(Figure 2-8)*

BATTERY CHARGING INDICATOR

The Battery Charging indicator displays whether or not the Lithium ion battery is currently being charged.

LED Condition	Charging Status of Battery
Green, solid	Fully charged or no battery installed.
Orange, solid	Being charged
Orange, blinking	Charging suspended because battery temperature too high.
Off	Not charging because AC adapter is not connected.

BATTERY STATUS INDICATOR

This indicator shows how much charge is available within the installed battery.

LCD Condition	Battery Charge Level
Green, solid	Between 50% and 100% charged
Orange, solid	Between 13% and 49% charged
Red, solid	Between 0% and 12% charged
Red, blinking	There is a problem with the battery
Off	No battery is installed or the system is shut off.

HARD DRIVE/OPTICAL DRIVE ACCESS INDICATOR

The Hard Drive/Optical Drive Access indicator states whether your internal hard drive or optical drive are being accessed.

NUMLOCK INDICATOR

The NumLock indicator shows that the internal keyboard is set in ten-key numeric keypad mode.

CAPSLOCK INDICATOR

The CapsLock indicator shows that your keyboard is set to type in all capital letters.

SCRLOCK INDICATOR

The ScrLock indicator shows that your scroll lock is active.

N6210.book Page 16 Wednesday, May 18, 2005 10:24 AM

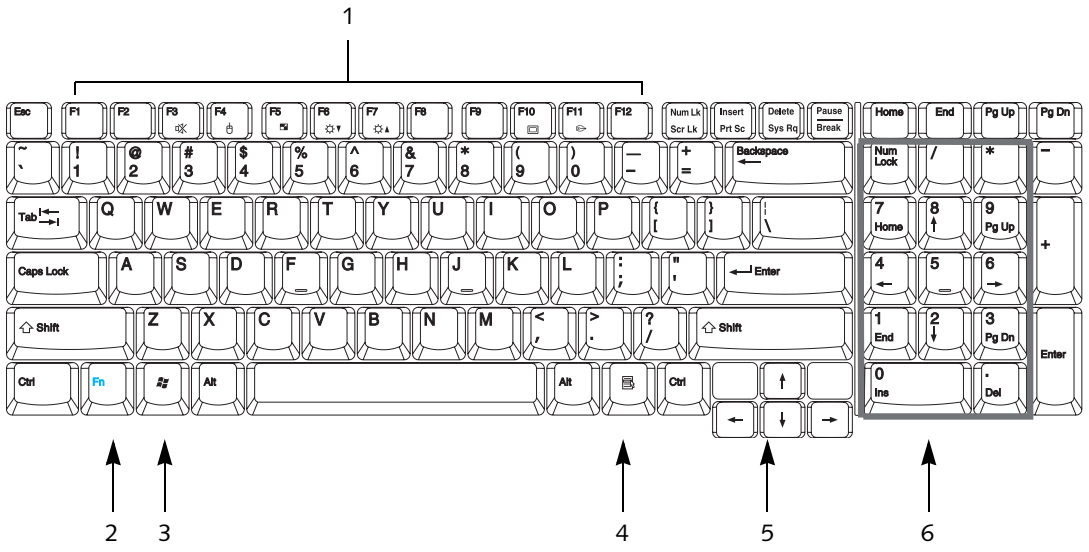

Figure 2-9. Keyboard

1 Function Keys
2 [Fn] Key
3 Start Key
4 Application Key
5 Cursor Keys
6 Numeric Keypad (surrounded by thick gray line)

Keyboard

USING THE KEYBOARD

Your Fujitsu LifeBook notebook has an integrated 103-key keyboard. The keys perform all the standard functions of a keyboard, including the Windows keys and other special function keys. This section describes the following keys.

- **Numeric keypad:** Your LifeBook notebook has a ten-key numeric keypad which allows certain keys to serve dual purposes, both as numeric/mathematical keys and navigation keys. The ability to toggle between the numerical keys and navigation keys is controlled through the [NumLk] key.
- **Cursor keys:** Your keyboard contains four arrow keys for moving the cursor or insertion point to the right, left, up, or down within windows, applications and documents.
- **Function keys:** The keys labeled [F1] through [F12] are used in conjunction with the [Fn] key to produce special actions that vary depending on what program is running.
- **Windows keys:** These keys work with your Windows operating system and function the same as the onscreen Start menu button, or the right button on your pointing device.

NUMERIC KEYPAD

The right-hand section of the keyboard serves as a numeric keypad. To activate the keypad functions, press the [NumLk] button. Using the keypad keys, you can enter numerals 0 through 9, perform addition (+), subtraction (-), multiplication (*), or division (/), and enter decimal points (.) using the keys designated as ten-key function keys. When [NumLk] is not active, you can use the numeric keypad to navigate (Home, End, Page Up, Page Down, left, right, up, down). The keys in the numeric keypad are marked on the front edge of the key to indicate their secondary functions.

WINDOWS KEYS

Your notebook has two Windows keys: a Start key and an Application key. The Start key displays the Start menu, and functions the same as your onscreen Start menu button. The Application key functions the same as your right mouse button and displays shortcut menus for the selected item. (Refer to your Windows documentation for more information regarding the Windows keys.)

CURSOR KEYS

The cursor keys are the four arrow keys on the keyboard which allow you to move the cursor up, down, left and right in applications. In programs such as Windows Explorer, it moves the "focus" (selects the next item up, down, left, or right).

N6210.book Page 17 Wednesday, May 18, 2005 10:24 AM

FUNCTION KEYS

Your LifeBook notebook has 12 function keys, F1 through F12. The functions assigned to these keys differ for each application. You should refer to your software documentation to find out how these keys are used.

The [Fn] key provides extended functions for the notebook and is always used in conjunction with another key.

Icon	Keys	Description
	[Fn+F3]	Pressing [F3] while holding [Fn] will toggle the Audio Mute on and off.
	[Fn+F4]	Pressing [F4] while holding [Fn] will toggle the touchpad on and off. (This function key combination only works if the BIOS setting for Advanced -> Keyboard/Mouse Features -> Internal Pointing Device is set to Manual Setting.)
	[Fn+F5]	Pressing [F5] while holding [Fn] allows you to toggle between video compensation and no compensation. (Video compensation controls spacing on the display. When it is enabled, displays with less than 1024 x 768 or 800 x 600 pixel resolution will still cover the entire screen.)
	[Fn+F6]	Pressing [F6] repeatedly while holding [Fn] will lower the brightness of your display.
	[Fn+F7]	Pressing [F7] repeatedly while holding [Fn] will increase the brightness of the display.
	[Fn+F10]	Pressing [F10] while holding [Fn] allows you to change your selection of where to send your display video. Each time you press the key combination you will step to the next choice. The choices, in order, are: built-in display panel only, both built-in display panel and external monitor or external monitor only.
	[Fn+F11]	[Fn+F11]: Pressing [F11] while holding down [Fn] allows you to toggle S-Video Output off and on.

N6210.book Page 18 Wednesday, May 18, 2005 10:24 AM

Volume Control

Your LifeBook notebook has multiple volume controls which interact with each other.

- Any software that contains audio files will also contain a volume control of its own. If you install an external audio device that has an independent volume control, the hardware volume control and the software volume control will interact with each other. It should be noted that if you set your software volume to Off, you will override the external volume control setting.
- Using the Fn+F8 and Fn+F9 combinations to control volume will override software volume controls.

CONTROLLING THE VOLUME

Volume Control Button

Volume can be controlled using the Volume Control button above the keyboard, to the right.*(Figure 2-10)*

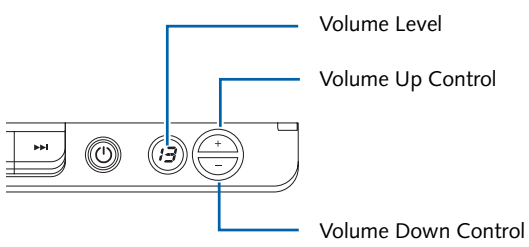

Figure 2-10 Volume Control

To increase the volume, press the upper portion of the Volume Control button; to decrease the volume, press the lower portion of the Volume Control button.

The current volume level is indicated in the Volume Level indicator. The volume level ranges from 1 to 15.

Other Ways to Control Volume

Aside from the Volume Control button, the volume can be controlled in several other ways:

- Volume can be set from within the Volume Control on the Taskbar.
- Volume can be controlled with the [F8] and [F9] function keys. Pressing [F8] repeatedly while holding [Fn] will decrease the volume of your notebook. Pressing [F9] repeatedly while holding [Fn] will increase the volume of your notebook.
- Volume can be controlled by many volume controls that are set within individual applications.
- Certain external audio devices you might connect to your system may have hardware volume controls.

Each source discussed above puts an upper limit on the volume level that must then be followed by the other sources.

We recommend that you experiment with the various volume controls to discover the optimal sound level.

N6210.book Page 19 Wednesday, May 18, 2005 10:24 AM

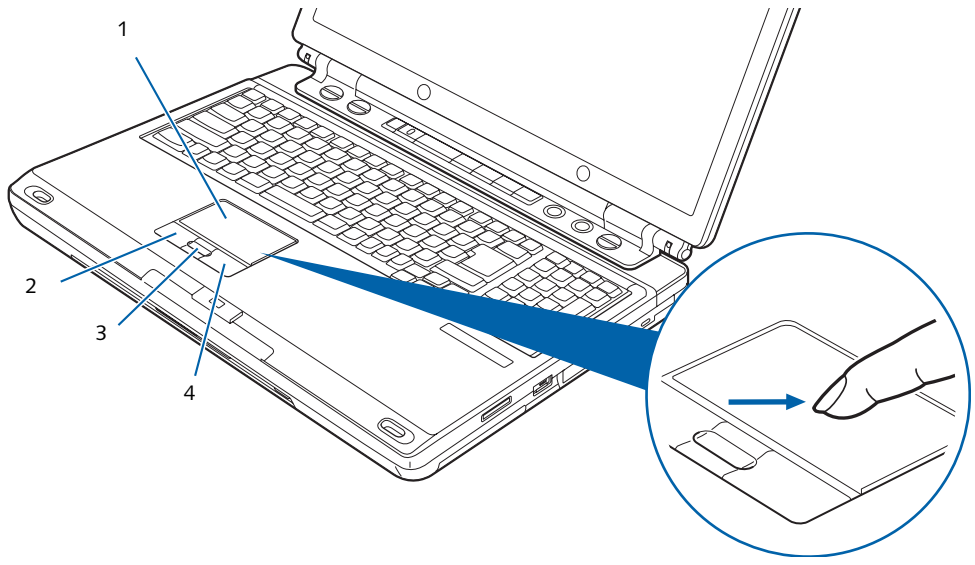

Figure 2-11. Touchpad Pointing Device

1 Cursor Control
2 Left Button
3 Scroll Button
4 Right Button

Touchpad Pointing Device

The Touchpad pointing device is built into your notebook. It is used to control the movement of the pointer to select items on your display panel. The Touchpad is composed of a cursor control, a left and right button, and an up-and-down scroll button. The cursor control works the same way a mouse does, and moves the cursor around the display. It only requires light pressure with the tip of your finger, and the more pressure you use, the faster the cursor will move. The left and right buttons function the same as mouse buttons. The actual functionality of the buttons may vary depending on the application that is being used. The up-and down scroll buttons allow you to quickly navigate up and down a screen. *(Figure 2-11)*

An external mouse can be connected to the USB port on your notebook, and be used simultaneously with the Touchpad. However, if you boot the system with an external mouse connected the Touchpad will be disabled or enabled depending on your BIOS settings. *(See BIOS Setup Utility on page 25 for more information)*

CLICKING

Clicking means pushing and releasing a button. To left-click, move the cursor to the item you wish to select, press the left button once, and then immediately release it. To right-click, move the mouse cursor to the item you wish to select, press the right button once, and then immediately release it. You also have the option to perform the clicking operation by tapping lightly on the Touchpad once. *(Figure 2-12)*

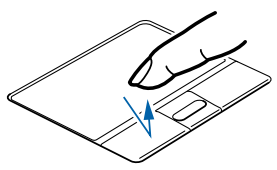

Figure 2-12. Clicking

DOUBLE-CLICKING

Double-clicking means pushing and releasing the left button twice in rapid succession. This procedure does not function with the right button. To double-click, move the cursor to the item you wish to select, press the left button twice, then immediately release it. You also have the option to perform the double-click operation by tapping lightly on the Touchpad twice. *(Figure 2-13)*

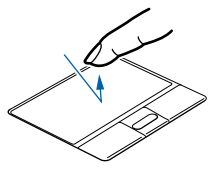

Figure 2-13. Double-clicking

If the interval between clicks is too long, the double-click will not be executed.

N6210.book Page 20 Wednesday, May 18, 2005 10:24 AM

DRAGGING

Dragging means pressing and holding the left button, while moving the cursor. To drag, move the cursor to the item you wish to move. Press and hold the left button while moving the item to its new location and then release it. Dragging can also be done using the Touchpad. First, tap the Touchpad twice over the item you wish to move making sure to leave your finger on the pad after the final tap. Next, move the object to its new location by moving your finger across the Touchpad, and then release your finger. *(Figure 2-14)*

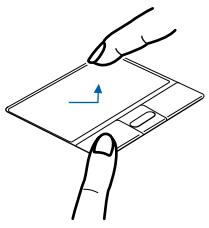

Figure 2-14. Dragging

SCROLLING

Using the scroll buttons allows you to scroll up and down a page easily without using the window scroll bars. To move up a page, press the upper part of the button. To move down a page, use the lower part of the button. *(Figure 2-15)*

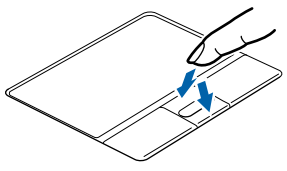

Figure 2-15. Scrolling

TOUCHPAD CONTROL ADJUSTMENT

The Windows Control Panel allows you to customize your Touchpad with selections made from within the Mouse Properties dialog box.

N6210.book Page 21 Wednesday, May 18, 2005 10:24 AM

3
Getting Started

N6210.book Page 22 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 23 Wednesday, May 18, 2005 10:24 AM

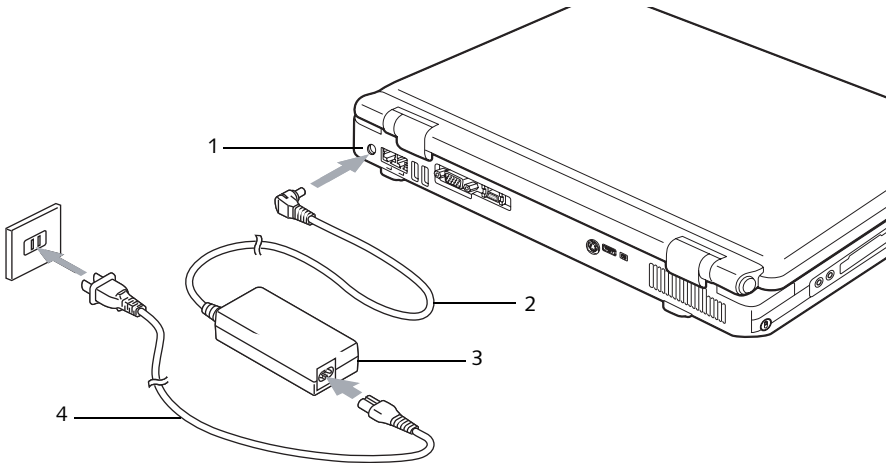

Figure 3-1. Connecting the AC Adapter

1 DC Power Jack
2 DC Output Cable
3 AC Adapter
4 AC Cable

Power Sources

Your Fujitsu LifeBook notebook has two possible power sources: a Lithium ion battery or an AC adapter.

CONNECTING THE AC ADAPTER

The AC adapter provides power for operating your LifeBook notebook and is used to charge the batteries.

Connecting the AC Adapter

1. Plug the DC output cable into the DC power jack of your LifeBook notebook.
2. Plug the AC cable into the AC adapter.
3. Plug the AC cable into an AC electrical outlet. *(Figure 3-1)*

Switching from AC Adapter Power to Battery Power

1. Be sure that you have a charged battery installed.
2. Unplug the AC adapter.

- When you run the N6200 Series LifeBook on battery power, by default, the CPU will slow down approximately by half in order to optimize battery life. This feature can be enabled or disabled in the BIOS. Use an AC Adapter whenever possible.
- The Lithium ion battery is not charged upon purchase. Initially, you will need to connect the AC adapter to use your LifeBook notebook.

N6210.book Page 24 Wednesday, May 18, 2005 10:24 AM

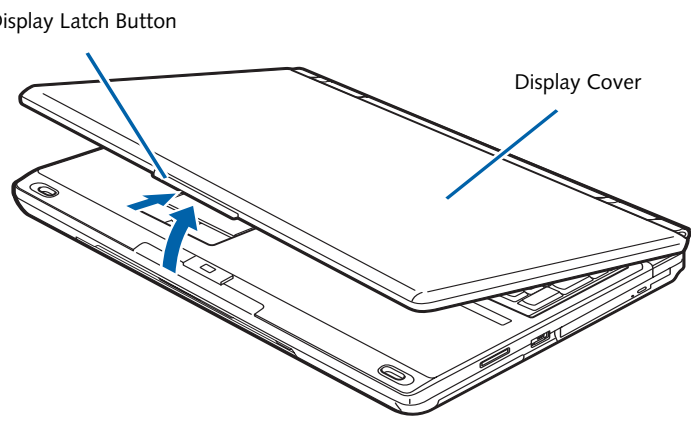

Figure 3-2. Opening the Display Panel

Display Panel

Your Fujitsu LifeBook notebook contains a display panel that is backlit for easier viewing in bright environments and maintains top resolution through the use of active-matrix technology.

OPENING THE DISPLAY PANEL

1. Push the display latch button to release the locking mechanism.
2. Lift the display panel backwards, being careful not to touch the screen, until it is at a comfortable viewing angle.

ADJUSTING DISPLAY PANEL BRIGHTNESS

Once you have turned on your LifeBook notebook, you may want to adjust the brightness level of the screen to a more comfortable viewing level. To adjust the display brightness, use the Function keys on the keyboard.

Using the Keyboard to Change Display Brightness

- [Fn+F6]: Pressing this key combination repeatedly will lower the brightness of your display.
- [Fn+F7]: Pressing this key combination repeatedly will increase the brightness of the display.

- If using AC power, your LifeBook notebook's brightness setting is set to its highest level by default. If using battery power, the brightness setting is set to its middle level by default.
- The higher the brightness level, the more power the LifeBook notebook will consume and the faster your batteries will discharge. For maximum battery life, set the brightness level as low as possible.

CLOSING THE DISPLAY PANEL

1. Holding the edge of your display panel, pull it forward until it is flush with the body of your LifeBook notebook.
2. Push down until you hear a click. This will engage the locking mechanism and prevent your display panel from opening unexpectedly.

N6210.book Page 25 Wednesday, May 18, 2005 10:24 AM

Starting Your LifeBook Notebook

POWER ON

Power and Suspend/Resume Button

The Power and Suspend/Resume button is used to power on your LifeBook notebook, to resume from Standby or Save-to-Disk mode or to place your notebook in Standby or Save-to-Disk mode. (You can also use the button to power down the system by holding it down for approximately five seconds. This can be useful if the system is "hung up". This shouldn't be used as the normal means of shutdown, however.) You can also turn off your notebook by choosing **Shut Down** from the Windows Start menu.

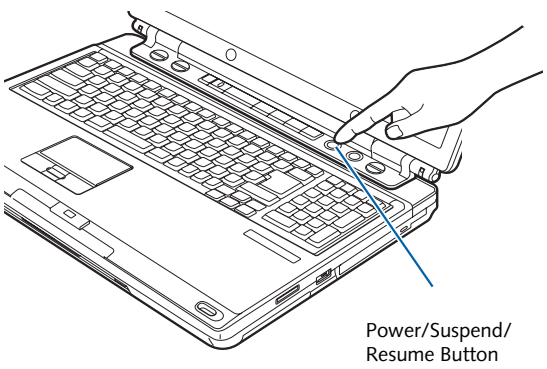

Figure 3-3. Powering Up the System

Once you have connected your AC adapter or charged the internal Lithium ion Battery, you can press this button to power up your notebook. *(Figure 3-3)*

When you turn on your notebook be sure you have a power source. This means that the battery is installed and charged, or the AC adapter is connected and has power.

Do not carry the notebook around with power on or subject it to vibration or shocks; doing so could damage the notebook.

When you Power On your notebook, it will perform a Power On Self Test (POST) to check the internal parts and configuration for correct functionality. If a fault is found, your notebook will emit an audio warning and/or an error message will be displayed. *(See Power On Self Test Messages on page 59 for more information)*. Depending on the nature of the problem, you may be able to continue by starting the operating system or by entering the BIOS setup utility and revising the settings.

After satisfactory completion of the Power On Self Test (POST), your notebook will load your operating system.

Never turn off your notebook during the Power On Self Test (POST) or it will cause an error message to be displayed when you turn your notebook on the next time. *(See Power On Self Test Messages on page 59 for more information)*

BOOT SEQUENCE

The procedure for starting-up your notebook is termed the Bootup sequence and involves your notebook's BIOS. When your notebook is first turned on, the main system memory is empty, and it needs to find instructions to start up your notebook. This information is in the BIOS program. Each time you power up or restart your notebook, it goes through a boot sequence which displays a Fujitsu logo until the operating system is loaded. During booting, your notebook is performing a standard boot sequence including a Power On Self Test (POST). When the boot sequence is completed without a failure and without a request for the BIOS Setup Utility, the system displays the operating system's opening screen.

The boot sequence is executed when:

- You turn on the power to your LifeBook notebook.
- You restart your LifeBook notebook from the Windows Shut Down dialog box.
- The software initiates a system restart. Example: When you install a new application.
- You reset the system by pressing the three keys [CTRL+ALT+DEL].

BIOS SETUP UTILITY

The BIOS Setup Utility is a program that sets up the operating environment for your notebook. Your BIOS is set at the factory for normal operating conditions, therefore there is no need to set or change the BIOS' environment to operate your notebook.

The BIOS Setup Utility also allows you to configure such features as the System Data Security feature parameters, such as passwords.

Entering the BIOS Setup Utility

To enter the BIOS Setup Utility do the following:

1. Turn on or restart your LifeBook notebook.
2. Press the [F2] key once the Fujitsu logo appears on the screen; this will open the main menu of the BIOS Setup Utility with current settings displayed.
3. Press the right or left arrow keys to scroll through the other setup menus to review or alter the current settings. Additional navigational information is located at the bottom of the BIOS screen.

N6210.book Page 26 Wednesday, May 18, 2005 10:24 AM

BIOS Guide

A guide to your notebook's BIOS is available online at our service and support Web site at **http://www.computers.us.fujitsu.com/support**. Once there, select Support, then Notebooks under User's Guides. Select LifeBook BIOS Guides from the pull-down menu for your LifeBook series. If you are unsure of your notebook's BIOS number, refer to your packing slip.

If your data security settings require it, you may be asked for a password before the BIOS main menu will appear.

BOOTING THE SYSTEM

We strongly recommend that you not attach any external devices and or put a CD or floppy disk in any drive until you have gone through the initial power on sequence.

When you turn on your LifeBook notebook for the first time, it will display a Fujitsu logo on the screen. If you do nothing, the system will load the operating system, and then the Windows Welcome will begin.

Designed to accommodate the needs of users in many different countries, Windows needs to be configured the first time you use it. Windows has three parts:

- Getting Started: You have the opportunity to enter custom information for your configuration file and setup your modem so that your LifeBook notebook will be prepared to dial out.
- Registration: Easy online registration for Windows with Microsoft, and for your notebook with Fujitsu.
- Windows License Agreement and Final Settings: You have the opportunity to review the Windows License Agreement.

Getting Started

Read the instructions on the screens carefully and fill in the information as directed. You will be asked for such items as the country in which you live, your first and last name, and about how you dial out from where you will be using your notebook. For the modem settings, enter your current location information where you will be using your notebook. If you are not connected to a phone line and plan to register at a later time, click the **Skip** button, and you will go directly to the condition of use page.

Once you have set up your notebook to dial out, Windows will make a free telephone call which will test these settings. If the call is unsuccessful, you will be returned to the phone settings page where you may try to fix them. If you are unable to fix the settings please contact Fujitsu Service and Support. *(See Fujitsu Contact Information on page 3 for more information)*.

Registration

If your connection is successful, you will go to a Registration Confirmation page. On this page enter the requested information, then check the box at the bottom to register your copy of Windows with Microsoft. Once you have finished, click the **Next** button to continue.

If you do not register at this time you can do it later simply by double-clicking on the **LifeBook Registration** icon on your desktop and following the instructions.

You will then go through the Fujitsu registration process. Follow the instructions on the screens, and enter all of the necessary information. Be as specific as possible so that if you need help the service and support team will be able to serve you better.

Final Settings

The first part of your final settings is the Windows End User License Agreement. Read the agreement carefully. When you finish reading you must accept or reject the terms of the agreement and then click on the **Next** button.

If you reject the terms of the license agreement you will be asked to review the license agreement for information on returning to Windows or to shut down your LifeBook notebook.

WINDOWS PRODUCT ACTIVATION

On systems with Windows XP as an operating system, it has already been pre-installed and pre-activated when you receive the system.

If you need to re-install Windows XP (e.g., after making significant configuration changes), it may be necessary to reactivate the operating system. To do so, use the following information.

- After re-installing Windows XP, you have thirty days to activate it. Product activation ensures that you are the only authorized user of this copy of Windows.
- Until you activate the product, you will be prompted whenever you turn on the system that activation is required. Follow the on-screen directions to activate your operating system. The product only needs to be activated once, unless significant hardware changes are made to your system.
- Note that Product Activation and Registration are not the same thing. Registration is optional, whereas Product Activation is a required procedure.

N6210.book Page 27 Wednesday, May 18, 2005 10:24 AM

REGISTERING YOUR LIFEBOOK NOTEBOOK

How do I register?

With Windows, it is a part of the Windows Welcome process. If you do not register during the Welcome process you can double-click on the LifeBook Registration icon on your desktop and then follow the instructions.

Make sure you have connected a phone line to your modem and you have Internet access before you use E-Registration.

You may also register on our Web site:

us.fujitsu.com/computers

You will need to be set up with an Internet Service Provider (ISP) to use this option.

INSTALLING CLICK ME!

The first time you boot up your system, you will see an icon called Click Me! on the desktop. When you click the icon, your system will automatically build the icon tray in the bottom right of the screen. These icons provide links to utilities that you will frequently access.

The icon is automatically deleted after you launch Click Me! and restart the system.

There may be additional third-party applications that are not installed by the ClickMe! utility. For more information, refer to your Getting Started Guide.

FUJITSU DRIVER UPDATE UTILITY

Your system has a convenient tool called the Fujitsu Driver Update (FDU) utility. With FDU, you can choose to automatically or manually go to the Fujitsu site to check for new updates for your system. For more information about the FDU utility, refer to “Automatically Downloading Driver Updates” on page 62.

N6210.book Page 28 Wednesday, May 18, 2005 10:24 AM

Power Management

Your LifeBook notebook has many options and features for conserving battery power. Some of these features are automatic and need no user intervention, such as those for the internal modem. However, others depend on the parameters you set to best suit your operating conditions, such as those for the display brightness. Internal power management for your LifeBook notebook may be controlled from settings made in your operating system.

Besides the options available for conserving battery power, there are also some things that you can do to prevent your battery from running down as quickly. For example, you can create an appropriate power saving profile, put your notebook into Suspend mode when it is not performing an operation, and you can limit the use of high power devices. As with all mobile, battery powered computers, there is a trade-off between performance and power savings.

POWER AND SUSPEND/RESUME BUTTON

When your LifeBook notebook is active, the Power and Suspend/Resume button can be used to manually put your notebook into Suspend mode. Push the Power and Suspend/Resume button when your notebook is active, but not actively accessing anything, and immediately release the button. You will hear two short beeps and your system will enter Suspend mode.

If your notebook is suspended, pushing the Power and Suspend/Resume button will return your notebook to active operation. You can tell whether or not your system is in Suspend mode by looking at the Power indicator which is part of the Suspend/Resume button. *(See Figure 2-8 on page 15 for location)* If the indicator is visible and not flashing, your LifeBook notebook is fully operational. If the indicator is both visible and flashing, your notebook is in Suspend mode. If the indicator is not visible at all, the power is off or your notebook is in Save-to-Disk (Hibernation) mode. *(See Hibernation (Save-to-disk) Feature on page 29 for more information)*

SUSPEND MODE

Suspend or Standby mode saves the contents of your LifeBook notebook's system memory during periods of inactivity by maintaining power to critical parts. This mode will turn off the CPU, the display, the hard drive, and all of the other internal components except those necessary to maintain system memory and allow for restarting. Your LifeBook notebook can be put in Suspend mode by:

- Pressing the Power/Suspend/Resume button when your system is turned on.
- Selecting Standby from the Windows Shut Down menu.
- Timing out from lack of activity.
- Allowing the battery to reach the Dead Battery Warning condition.

Your LifeBook notebook's system memory typically stores the file(s) on which you are working, open application(s) information, and any other data required to support the operation(s) in progress. When you resume operation from Suspend mode, your LifeBook notebook will return to the point where it left off. You must use the Power and Suspend/Resume button to resume operation, and there must be an adequate power source available, or your LifeBook notebook will not resume.

- If you are running your notebook on battery power, be aware that the battery continues to discharge while your notebook is in Suspend mode, though not as fast as when fully operational.
- Disabling the Suspend/Resume button prevents it from being used to put your LifeBook notebook in Suspend or Save-to-Disk mode. The resume function of the button cannot be disabled.
- The Suspend or Hibernation (Save-to-Disk) mode should not be used with certain PC Cards. Check your PC Card documentation for more information.
- When PC Cards or external devices are in use, Hibernation (Save-to-Disk) mode cannot return to the exact state prior to suspension because all of the peripheral devices will be re-initialized when the system re-starts.
- If your notebook is actively accessing information when you enter the Suspend or Hibernation (Save-to-Disk) mode, changes to open files are not lost. The files are left open and memory is kept active during Suspend mode, or the memory is transferred to the internal hard drive during Hibernation mode.
- The main advantage of using the Hibernation (Save-to-Disk) function is that power is not required to maintain your data. This is particularly important if you will be leaving your LifeBook notebook in a suspended state for a prolonged period of time. The drawback of using Hibernation mode is that it lengthens the power down and power up sequences and resets peripheral devices.
- Your system is set to use the Max Battery power scheme when running on battery power. If you change the power scheme to a different profile, your battery life may vary.

N6210.book Page 29 Wednesday, May 18, 2005 10:24 AM

HIBERNATION (SAVE-TO-DISK) FEATURE

The Hibernation feature saves the contents of your LifeBook notebook's system memory to the hard drive as a part of the Suspend/Resume mode. You can enable or disable this feature.

Enabling or Disabling the Hibernation Feature

The default setting is not enabled. To enable or disable the Hibernation feature follow these easy steps:

1. From the **Start** menu, select **Control Panel**.
2. From the **Control Panel**, select **Power Options**.
3. Select **Hibernation** tab. Select the box to enable or disable this feature.

Using the Hibernation Feature

1. From the **Start** menu, select **Control Panel**.
2. From the **Control Panel**, select **Power Options**.
3. Select **Advanced** tab, then select **Hibernate** from the pull-down menu for Power buttons.

DISPLAY TIMEOUT

The Video Timeout is one of the power management parameters. This feature saves power by turning off the display if there is no keyboard or pointer activity for the user selected timeout period. Any keyboard or pointer activity will cause the display to restart automatically. This feature is independent of the Power and Suspend/Resume button and can be enabled and disabled in Windows.

HARD DISK TIMEOUT

The Hard Disk Timeout is another one of the power management parameters. This feature saves power by turning off the hard drive if there is no hard drive activity for the user selected timeout period. Any attempt to access the hard drive will cause it to restart automatically. This feature is independent of the Power and Suspend/Resume button and can be enabled and disabled in Windows.

RESTARTING THE SYSTEM

If your system is on and you need to restart it, be sure that you use the following procedure.

1. Click the **Start** button, and then click **Turn Off Computer**.
2. Select the **Restart** option from within the Windows Shut Down dialog box.
3. Click **OK** to restart your LifeBook notebook. Your notebook will shut down and then reboot.

Turning off your LifeBook notebook without exiting Windows or turning on your notebook within 10 seconds of the notebook being shut off may cause an error when you start the next time.

Never turn off your LifeBook notebook while an application is running. Close all files, exit all applications, and shut down your operating system prior to turning off the power with the power switch. If files are open when you turn the power off, you will lose any changes that have not been saved, and may cause disk errors.

POWER OFF

Before turning off the power by choosing Shut Down from the Start menu, check that the Hard Drive, Optical Drive, and PC Card access indicators are all Off. *(See Figure 2-8 on page 15)* If you turn off the power while accessing a disk or PC Card there is a risk of data loss. To assure that your LifeBook notebook shuts down without error, use the Windows shut down procedure.

Using the correct procedure to shut down from Windows allows your LifeBook notebook to complete its operations and turn off power in the proper sequence to avoid errors. The proper sequence is:

1. Click the **Start** button, and then click **Turn Off Computer**.
2. Select the **Shut Down** option from within the Windows Shut Down dialog box.
3. Click **Turn Off** to shut down your LifeBook notebook.

If you are going to store your notebook for a month or more see Care and Maintenance Section.

N6210.book Page 30 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 31 Wednesday, May 18, 2005 10:24 AM

4

User-Installable Features

N6210.book Page 32 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 33 Wednesday, May 18, 2005 10:24 AM

Lithium ion Battery

Your Fujitsu LifeBook notebook has a Lithium ion battery that provides power for operating your notebook when no external power source is available. The rechargeable battery is durable and long lasting, but should not be exposed to extreme temperatures, high voltages, chemicals or other hazards. For information on maximizing your battery life, refer to the section entitled "Power Management" on page 28.

The Lithium ion battery operating time may become shorter if it is used under the following conditions:

- Your system is set to use the Max Battery power scheme when running on battery power. If you change the power scheme to a different profile, your battery life may vary.
- When used at temperatures that exceed a low of 5°C (40°F) or a high of 35°C (95°F). Extreme temperatures not only reduce charging efficiency, but can also cause battery deterioration. The charging icon on the Status Indicator panel will flash when you try to charge a battery that is outside its operating temperature range. *(See Battery Charging Indicator on page 15 for more information)*
- When using a high current device such as a modem, DVD/CD-RW drive, DVD writer, or hard drive, using the AC adapter will conserve your battery life.

- Do not leave a faulty battery in your LifeBook notebook. It may damage your AC adapter or your notebook itself. It may also prevent operation of your notebook by draining all available current into the bad battery.
- Under federal, state, or local law it may be illegal to dispose of batteries by putting them in the trash. Please take care of our environment and dispose of batteries properly. Check with your local government authority for details regarding recycling or disposing of old batteries. If you cannot find this information elsewhere, contact your support representative at: 1-800-8FUJITSU (1-800-838-5487).

Actual battery life will vary based on factors such as screen brightness, applications, features, power management settings, battery condition and other customer preferences. DVD/CD-RW, DVD- writer, or hard drive usage may also have a significant impact on battery life. Battery charging capacity is reduced as the battery ages. If your battery is running low quickly, you should replace it.

RECHARGING THE BATTERIES

If you want to know the condition of the primary Lithium ion battery, check the Battery Status indicator located on the Status Indicator panel. The indicator changes as the battery level changes.

The Lithium ion battery is recharged internally using the AC adapter. To recharge the battery make sure the battery that needs to be charged is installed in your LifeBook notebook and connect the AC adapter.

Make sure the Battery Charging indicator and the percentage charge is shown inside the Battery Status icon on the Status Indicator Panel.

There is no memory effect on the Lithium ion battery therefore you do not need to discharge the battery completely before recharging. The charge times will be significantly longer if your LifeBook notebook is in use while the battery is charging. If you want to charge the battery more quickly, put your LifeBook into Suspend mode, or turn it off while the adapter is charging the battery. *(See Power Management on page 28 for more information on Suspend mode and shutdown procedure)*

Using high current devices such as a modem or frequent optical drive accesses may prevent complete charging.

Low Battery State

When the battery is running low, a low battery notification message will appear. If you do not respond to the low battery message, the batteries will continue to discharge until they are too low to operate. When this happens, your LifeBook notebook will go into Suspend mode. There is no guarantee that your data will not be lost once the notebook reaches this point.

Note that you can change the state in which the battery goes into Suspend mode in the Power properties of the Control Panel.

To prevent loss of data, you should save all your active data and put your notebook into Suspend mode when the low battery message appears, until you can provide a new power source. When you are in Suspend mode, there must always be at least one power source active. If you turn off the power with the power/suspend/resume button, or remove all power sources while your notebook is in Suspend mode, any data that has not been saved to the hard drive will be lost. You should provide power to your notebook from an AC power adapter as soon as possible.

N6210.book Page 34 Wednesday, May 18, 2005 10:24 AM

Dead Battery Suspend mode shows on the Status indicator just like the normal Suspend mode. Once your LifeBook notebook goes into Dead Battery Suspend mode you will be unable to resume operation until you provide a source of power from an AC adapter. Once you have provided power, you will need to press the Suspend/Resume button to resume operation. In the Dead Battery Suspend mode, your data can be maintained for some time, but if a power source is not provided promptly, the Power indicator will stop flashing and go out, meaning that you have lost the data that was not stored. Once you provide power, you can continue to use your LifeBook notebook while the adapter is charging the battery.

Shorted Batteries

The Status Indicator panel displays the battery status via the Battery Status indicator to show the charge level available in that battery. If the display is flashing red, it means that the battery is damaged and must be replaced so it does not damage any other parts of your LifeBook notebook.

REPLACING THE BATTERY

With the purchase of an additional battery, you can have a fully charged spare to swap with one that is not charged.

Follow the steps below to replace a battery *(Figure 4-1)*:

1. Have a charged battery ready to install.
2. Shut down your notebook and disconnect the AC adapter.
3. Turn the system over.
4. Slide the battery release latch to the right.
5. Lift the battery and remove it from the bay.

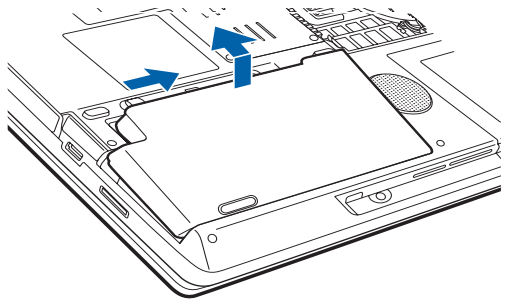

Figure 4-1. Removing the Battery

6. Place a charged battery into the bay and press it down until the latches click into place.
7. Plug in the AC adapter and turn the power on.

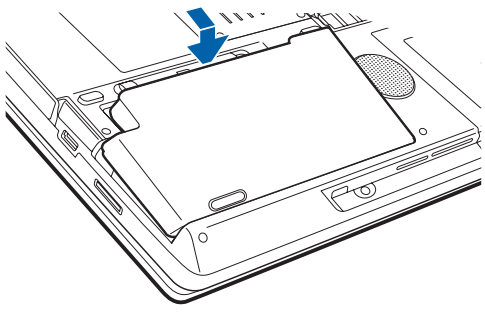

Figure 4-2. Installing the Battery

N6210.book Page 35 Wednesday, May 18, 2005 10:24 AM

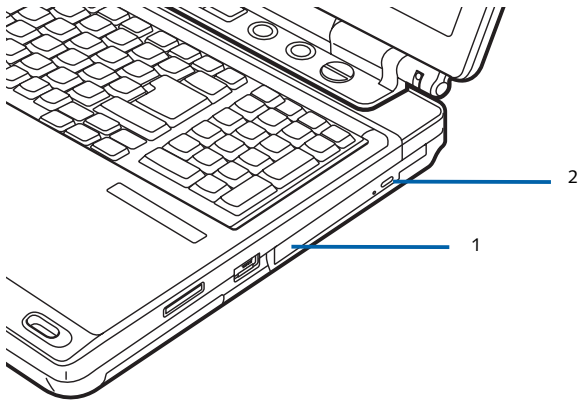

Figure 4-3. Optical Drive

1 DVD/CD Holder Tray
2 DVD/CD Eject Button

Optical Drive

Your Fujitsu LifeBook notebook contains an optical drive which is either a Dual-Layer Multi-Format DVD Writer or a DVD/CD-RW combo player. A Multi-Format DVD Writer allows you to play CDs and DVDs, record CD-Rs and CD-RWs, and record DVD+R DLs, DVD+/-Rs, DVD+/-RWs, and DVD-RAMs. A DVD/CD-RW combo drive allows you to write data onto recordable CDs in addition to all of the standard DVD drive functions.

OPTICAL DRIVE SOFTWARE

DVD/CD-RW Combo model only: With the combo drive, you can play DVD movies, read audio CDs, and write data onto recordable CD-R or CD-RW discs.

Dual-Layer Multi-Format DVD Writer model only: With this drive, you can play CDs and DVDs, record CD+/-Rs and CD+/-RWs, and record DVD+R DLs, DVD+/-R, DVD-RWs and DVD-RAMs.

- **Prior to using your Optical Drive, you must install the Optical Player software.** Refer to the applicable readme file on the Driver Applications CD-ROM for instructions on installing your Optical Player software.
- You should periodically check the Fujitsu Web site at: **us.fujitsu.com/computers** for current updated drivers.
- Prolonged use of the optical drive, such as watching a DVD movie, will substantially reduce your battery life.

Do not operate your optical drive unless your LifeBook notebook is sitting on a flat surface. Using a drive when the system is not level may damage the drive or prevent proper operation.

LOADING MEDIA

To load a disc into your optical drive, follow these steps:

1. Push and release the eject button on the front of the optical drive to open the holder tray. The tray will come out of the notebook a short distance.
2. Gently pull the tray out until a media disc can easily be placed in the tray.

There may be a protective sheet in the tray from when it was shipped; please make sure it is removed before operating the drive, otherwise your drive may be damaged.

3. Place the media into the tray, label side up, with the hole in the center of the disc. Snap the disc onto the raised circle in the center of the tray.
4. Gently push the holder tray back in until you hear a click. *(Figure 4-4)*

If you have disabled the Auto Insert Notification Function, you will have to start the drive from your desktop, since your notebook will not automatically recognize that media has been loaded.

REMOVING MEDIA

1. Push and release the eject button on the front of the optical drive. This will stop the drive and the holder tray will come out of the notebook a short distance.
2. Gently pull the tray out until the disc can easily be removed from the tray.
3. Carefully remove the media disc from the holder tray.
4. Gently push the holder tray back in until you hear a click.

N6210.book Page 36 Wednesday, May 18, 2005 10:24 AM

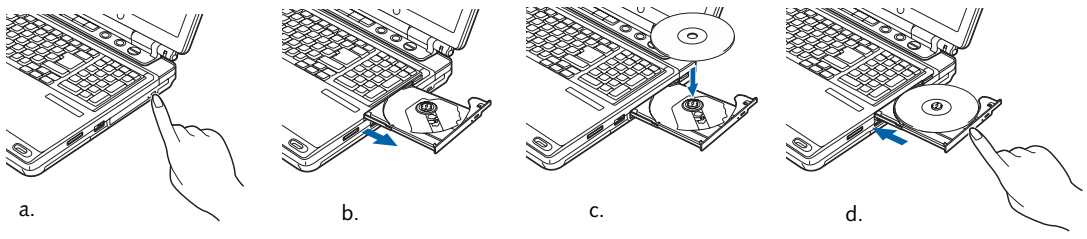

Figure 4-4. Loading Media

EMERGENCY OPTICAL DRIVE TRAY RELEASE

If for some reason the eject button fails, you can open the media tray with a paper clip inserted into the eject hole in the far right side of the front of the tray. Straighten one side of a paper clip and push it gently into the hole. The tray will pop out a short distance.

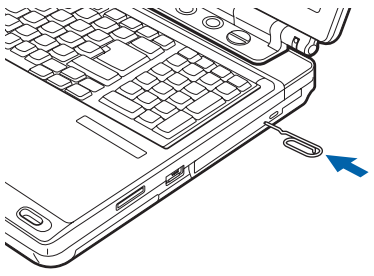

Figure 4-5. Emergency Removal of a CD/DVD

PLAYING MEDIA ON THE OPTICAL DRIVE

There are three ways to operate the optical drive:

- Using the Optical Player Software
- Using the Media Player Buttons
- Using the Desktop Control Panel

USING THE OPTICAL PLAYER SOFTWARE

Prior to using your optical drive, you must install the optical player software. For details on using your optical player software, refer to the software Help file.

Starting a DVD Movie

1. Insert the DVD into the notebook's optical drive. If the CD AutoRun feature activates, skip Step 2.
2. The first time you insert a movie into the DVD/CD-RW tray, you will be prompted to select what you want the system to do when discs are inserted (e.g., start automatically or wait for a prompt). Until you make a selection, you will receive the same prompt whenever you insert a disc.
3. Click **OK** to close the About DVD Player Performance dialog box and the movie will begin. After you make your selections, the WinDVD control panel will appear whenever you insert a disc.

Opening the DVD/CD-RW Drive Control Panel

With most DVD-ROMs, you have the option of altering how the movie should play and what you wish to view. You can do this by using the DVD/CD-RW Combo Drive control panel and the mouse.

To open a dropdown menu for options, right-click on the movie screen.

Using the Optical Drive Control Panel

The WinDVD optical drive software allows you to watch the movie much like a VCR player. You have the option to pause, rewind, fast-forward and stop the movie at any point.

1. To Pause the movie, click the ⏸ button.
2. To Rewind the movie, click the ◀◀ button to rewind to a specific portion of the movie, or the ⏮ button to return to the opening screen.
3. To Fast-forward the movie, click the ▶▶ button to forward to a specific portion of the movie, or the⏭ button to jump to the ending credits.
4. To Stop the movie, click the ■ button.

Exiting the Optical Player

1. Click on the ✕ located in the upper right corner of the title bar.

USING THE MEDIA PLAYER BUTTONS

The media player buttons are another way to use your LifeBook notebook's optical drive as a media player.

- If you shut down from Windows while the media player is playing a CD or DVD, it will stop.
- You cannot go into Suspend Mode or Hibernation (Save-to-Disk) Mode while the media player is playing a CD or DVD.
- The media player will only play when the system is powered on.

N6210.book Page 37 Wednesday, May 18, 2005 10:24 AM

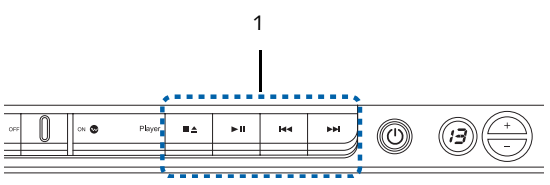

1- Media Player Buttons

Figure 4-6. Media Player Buttons

There is no configuration required for media player operation. The buttons are pre-configured to work like a normal media player. The buttons will operate as follows:

Stop/Eject: Press this button once to stop a CD or DVD that is playing. Press it twice to eject the disc.

Play/Pause: Press this button to start playing a CD or DVD starting at the beginning. While the disc is playing, press it to pause. Press it again to continue.

- If you press the play button and nothing happens, there is no disc in the media player drive, you have other than a media disc in the drive, or system is not powered on.
- Because of the Windows auto-insertion function, discs will start playing immediately after they are inserted if your LifeBook notebook is on. This will not happen if you are using the media player in Suspend mode.

Fast Backward: Press this button once to skip one track back.

Fast Forward: Press this button once to skip forward one track.

DESKTOP CONTROL PANEL

Your LifeBook notebook includes a desktop control panel for your notebook's desktop that you can use at any time. You can use this panel to operate the media drive.

To use the desktop control panel:

1. Click on **Start**.
2. Click on **All Programs**.
3. Click on **LifeBook Application Panel**.
4. Click on **CD Player**.

The desktop control panel will appear in the corner of your screen.

To close the panel:

1. Click on the "**x**" button.

To minimize the panel:

2. Click on the "-" button.

You can select from four appearances for your desktop control panel. Simply double-click on the track display area of the panel, and a menu will appear which will allow you to select from a pull down menu. On the same pop-up are three other options: "Always on top", "Continuous Play", and "Disable Stop/Eject Button CD Removal". If you click on "Always on top" the desktop controls will always be seen on your screen, no matter what other application you are running. If you click on "Continuous Play", your media player will automatically start over at the beginning of the disc in the drive as soon as it finishes the last track. If you click on "Disable Stop/Eject Button CD Removal", the disc will not be ejected automatically when the Stop/Eject button is pressed.

You can move the desktop control panel to anywhere on your desktop. Drag it by clicking on the track number display, holding it down, and dragging the control panel. When you place it where you would like, release the mouse button.

- If you have your display set to 256 colors, the basic display will appear no matter which one you select. You will need to set your display colors to more than 256 in order to select other display appearances.
- When you close the media player's desktop control panel, it will stop the audio media player. Press the Play button if you would like to continue listening, and the media player will restart at track 1.

N6210.book Page 38 Wednesday, May 18, 2005 10:24 AM

Disabling and Enabling the Application Panel

To disable the LifeBook Application Panel, follow these easy steps:

Performing the following steps disables the LifeBook Application Panel buttons only when playing CD's; DVD's can still be run with the LifeBook Application Panel. Even when the buttons are disabled, discs can still be run using the Desktop Control Panel.

1. Click on **Start**.
2. Click on **All Programs**.
3. Click on **LifeBook Application Panel**.
4. Click on **Stop Application Panel**.

To reactivate, follow the same procedure, except for step 4. Click on **Start Application Panel** instead.

Every time you start Windows, the LifeBook Application Panel is activated, even if you deactivated it before you shut down.

Application Panel Setup

- If you insert a CD which has both audio and data tracks into the media player drive, the media player may fail to play the first audio track.
- The Volume Up, Volume Down and Mute controls for the media player desktop control panel adjusts the volume of the disc audio line only. It does not adjust your LifeBook notebook's master software volume control.
- The media player desktop control panel is designed to be displayed in High Color (16-bit) or in True Color (24-bit or more). If you have your LifeBook notebook's display set for 256 colors or less Media Player will display in a "basic" mode.

USING DOLBY™ HEADPHONE

The Dolby Headphone utility lets you enjoy multi-channel sound sources, such as movies, with realistic surround sound using *conventional* stereo headphones. Dolby Headphone is a signal processing system that enables your stereo headphones to realistically portray the sound of a five-speaker playback system.

- Media discs which do not have the Dolby Surround 5:1 symbol will not support Dolby Headphone.
- After making changes to Dolby Headphone and clicking OK, wait at least 10 seconds before making another change in order to allow the system to stabilize.

To use the Dolby Headphone feature, perform the following steps:

1. Insert the disc in the optical drive tray. When you do so, WinDVD will start automatically.
2. Place your cursor over the Fujitsu logo on the WinDVD control panel and click on it. If the disc supports Dolby Surround 5.1, a drop down menu appears.
3. Verify that Dolby headphones is checked on the menu. If you do not want it active, select Disable.

USING THE DRIVE ON BATTERY POWER

Since optical drives consume a lot of power, your overall battery life will be shorter when operating the optical drive continuously (such as watching a DVD movie). Many movie run-times are longer than your LifeBook notebook can support on a single battery. If you are watching a DVD movie on battery power you may need to swap in an additional, charged battery or attach AC power during the movie to view it in its entirety.

Prolonged use of the optical drive, such as watching a DVD movie, will substantially reduce your battery life. Many movie run-times are longer than your system can support on a single battery. If you are watching a DVD movie on battery power you may need to swap in an additional, charged battery or attach AC power during the movie to view it in its entirety.

An additional battery is recommended if you will be watching DVD movies on battery power. If you don't have an additional battery, you may purchase one either on-line at: **us.fujitsu.com/computers** or call 1-877-372-3473.

To Watch a Movie on Battery Power:

1. Have an additional fully-charged battery or your AC adapter ready for use.
2. Start watching your DVD movie.
3. When the low battery warning occurs, immediately stop the movie and exit the optical player.

If you don't stop the optical drive quickly and the notebook attempts to auto-suspend (critical battery low state) the notebook will shut down improperly. If this occurs, you will need to power the system up with the power/suspend/resume button and follow any instructions that appear.

4. Manually place your notebook into suspend mode by depressing the Suspend button. Plug in a power adapter and replace the discharged battery with an additional fully-charged battery. If you do not have

N6210.book Page 39 Wednesday, May 18, 2005 10:24 AM

an additional battery, you may use the AC power adapter as your power source to continue watching the movie while recharging the installed battery.

5. Resume your notebook by pressing the Suspend button again. This step is not required if you attached AC power without entering suspend mode.
6. Restart your optical drive, locate and skip to the chapter of the movie you were last watching.
7. Continue watching your DVD movie.

Some shorter DVD movies may not require you to swap batteries or attach AC power to complete them. However, it is best to be prepared since actual battery life while operating the optical drive cannot be guaranteed.

AUTO INSERT NOTIFICATION FUNCTION

The Auto Insert Notification function allows your LifeBook notebook to automatically start a DVD/CD as soon as it is inserted in the optical drive and the tray is closed. Your notebook will begin playing an audio DVD/CD or will start an application if the DVD/CD includes an auto run file.

To prevent a CD from playing automatically as soon as it is inserted, refer to the related help file for your specific operating system.

N6210.book Page 40 Wednesday, May 18, 2005 10:24 AM

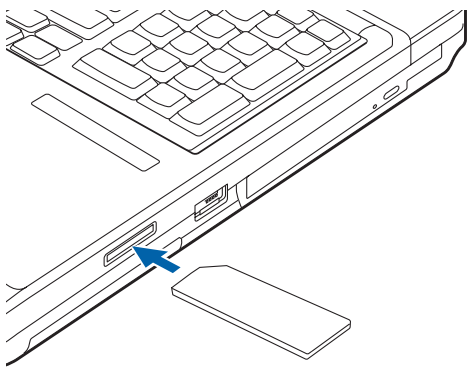

Note: A Memory Stick is used for illustration purposes. Be sure the card label is facing downward.

Figure 4-7. Installing a Memory Stick/SD Card

Memory Stick/Secure Digital/xD Card Slot

Your LifeBook notebook supports the following memory cards, on which you can store and transfer data to and from a variety of digital devices. These cards use flash memory architecture, which means they don't need a power source to retain data.

- SD Memory Card
- Memory Stick Media
- Memory Stick Select Media
- Memory Stick Duo Media
- Memory Stick PRO Media
- xD Picture Cards

- Some of the media in the above list may have more features than others.
- Memory Stick PRO's high-speed data rate when using a parallel interface is not supported.
- An adapter is required for Memory Stick Duo.
- Copyright Protection Technology cannot be used.
- MultiMedia Cards (MMC) and Secure MMC are not supported.

Memory Stick is a flash memory technology developed by Sony Electronics. Memory Stick allows you to record, transfer and share digital content, such as digital pictures, movies, music, voice, and computer data and applications.

Secure Digital (SD) Cards are very similar to Memory Sticks, but they are shorter. Like the Memory Stick, SD Cards allow portable storage among a variety of devices, such as cell phones, GPS systems, digital cameras, and PDAs. SD Cards transfer data quickly, with low battery consumption. Like the memory stick, it uses flash memory architecture.

xD Cards work the same as Memory Sticks and SD Cards, but they are much smaller than either one. Using an xD Card in the slot requires an adapter. xD Cards are primarily used to store and transfer images with devices such as cell phones.

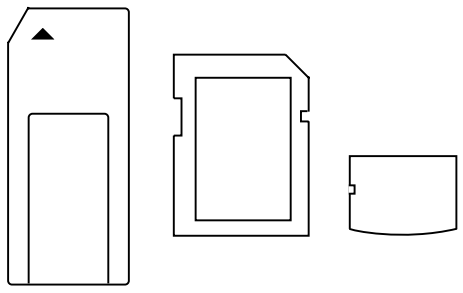

Figure 4-8. Memory Stick, Secure Digital, and xD Cards

INSTALLING MEMORY STICK/SD/XD CARDS

Memory Sticks, SD Cards, and xD Cards are installed in the Memory Stick/SD/xD Card slot *(Figure 4-7)*. To install a Memory Stick, SD Card or xD Card, follow these steps:

- Installing or removing a Memory Stick, SD Card, or xD Card during your notebook's shutdown or bootup process may damage the card and/or your notebook.
- Do not insert a card into a slot if there is water or any other substance on the card as you may permanently damage the card, your LifeBook notebook, or both.

N6210.book Page 41 Wednesday, May 18, 2005 10:24 AM

When installing a Memory Stick, SD, or xD card in the slot, be sure the card label is **facing downward.** When installed, a Memory Stick will extend approximately half an inch from the edge of the notebook chassis.

1. See your Memory Stick, SD Card, or xD Card manual for instructions on the installation of your card. Memory Stick Duo Cards require an adapter.
2. Make sure there is no card currently in the slot. If there is, see Removing a Memory Stick/SD/xD Card.
3. Install the card in an adapter, if required.
4. Insert your card into the slot with the product label **facing down**.
5. Push the card firmly into the slot until it is seated in the connector. Memory Sticks will extend from the slot approximately half an inch when installed.

REMOVING A MEMORY STICK/SD/XD CARD

To remove a Memory Stick, SD Card, or xD Card, follow these easy steps:

See your card manual for specific instructions on the removal of your card. Some cards may require your LifeBook notebook to be in Suspend Mode or Off while removing them.

Push the Memory Stick, SD Card, or xD Card adapter in until it unlatches. It will then eject from the slot for removal.

N6210.book Page 42 Wednesday, May 18, 2005 10:24 AM

Hard Disk Drive

Your Fujitsu LifeBook notebook hard disk drive capacity is dependent on which model you are using. Some LifeBook notebooks may also contain a second hard disk drive in addition to the primary hard disk drive. *(See Specifications on page 71 for more information)*

FORMATTING THE HARD DISK DRIVE

The internal hard disk drive is formatted, or initialized, at the factory. You do not need to format it under normal circumstances. If you decide to reformat due to corruption or upgrade, please refer to your operating system documentation for the correct procedure.

You should not reformat your hard disk unless you are instructed to do so by Technical Support. Reformatting the hard disk drive will erase all of the data currently stored on it, including the operating system and installed programs.

Before you reformat your hard disk drive, please note:

- Any data that currently resides on your hard disk drive must be backed-up to floppy disks or other data storage media, or it will be permanently lost. These back-up disks can then be used to reinstall and restore your data. *(See your operating system manual for more information on backing-up your data files)*
- All application software that is installed on the hard disk drive, must be reinstalled from the original source.

N6210.book Page 43 Wednesday, May 18, 2005 10:24 AM

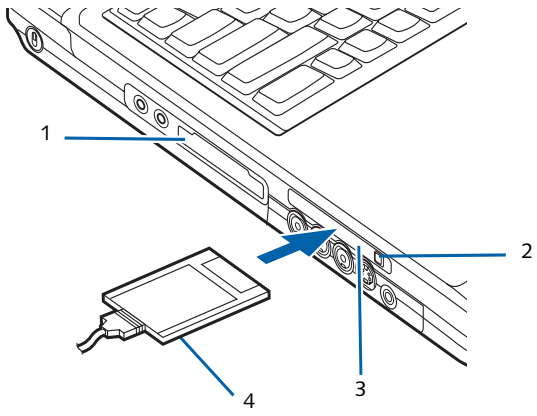

1 ExpressCard Slot
2 PC Card Eject Button
3 PC Card Slot
4 PC Card

Figure 4-9. Installing/Removing PC Cards

PC Cards/ExpressCards™

Your LifeBook notebook supports Type I and Type II PC Cards and ExpressCards™, in separate dedicated slots. With these cards you can perform a variety of functions depending on which type of card you install. You can install one or two cards at a time, depending on its type. PC Cards should be installed in the right slot, and ExpressCards in the left slot. *(Figure 4-9)*

Some available PC/ExpressCards:

- Wireless LAN PC Cards (Type II)
- Local area network (LAN) cards (Type II)
- IDE solid-state disk cards (Type II)
- SCSI cards (Type II)
- PC Cards that conform to PCMCIA 2.1 or CardBus

For further information, refer to the instructions supplied with your card(s).

INSTALLING PC CARDS

PC Cards are installed in the PC Card slot *(Figure 4-9)*. To install a PC Card, follow these steps:

- When you receive your system, there may be "dummy cards" installed in the card slots. Before installing a PC Card or ExpressCard, remove the dummy cards in accordance with the "Removing PC Cards" section. When you do not have a card installed in the slots, be sure to re-install the dummy cards to prevent the system from being contaminated.
- You may be required to log on as an Administrator or member of the Administrator's Group to complete this procedure. If the computer is connected to a network, network policy settings may also prevent you from completing this procedure.

- Installing or removing a PC Card during your LifeBook notebook's shutdown or bootup process may damage the card and/or your LifeBook notebook.
- Do not insert a PC Card into a slot if there is water or any other substance on the card as you may permanently damage the card, the notebook, or both.

1. See your PC Card manual for instructions on the installation of your card. Some cards may require that your notebook is off while installing them.
2. Make sure there is no PC Card currently in the slot. If there is, see Removing PC Cards.
3. If the eject button is extended, press it until it clicks.
4. Insert the card into the slot with the label facing up.
5. Push the card firmly into the slot until it is seated in the connector.

REMOVING PC CARDS

See your PC Card manual for specific instructions on removing your card. Some cards may require your notebook to be in Suspend Mode or Off during removal.

- Windows has a shutdown procedure for PC Cards that must be followed before removing a card. (Review your operating system manual for the correct procedure.) It is good practice to remove devices using the Unplug or Eject Hardware icon in the system tray.
- If the dialog box states that the device cannot be removed, you must save all of your open files, close any open applications and shut down your notebook.

2. Unlock the card from the slot by pressing the eject button. When pressed, the button will pop out.

N6210.book Page 44 Wednesday, May 18, 2005 10:24 AM

3. Firmly press the button again until it is flush with the notebook. This will eject the card slightly out of the slot allowing you to remove the card.

If the PC Card has an external connector and cable, do not pull the cable when removing the card.

INSTALLING EXPRESSCARDS

There are two different width ExpressCards: 34 mm and 54 mm ("ExpressCard 34" and "ExpressCard 54"). The connector inside the slot is located on the left-hand side of the slot. If you insert a 34 mm card, be sure to align it with the left side of the slot when inserting it.

ExpressCards are installed in the ExpressCard slot (the top slot). *(Figure 4-10)*.

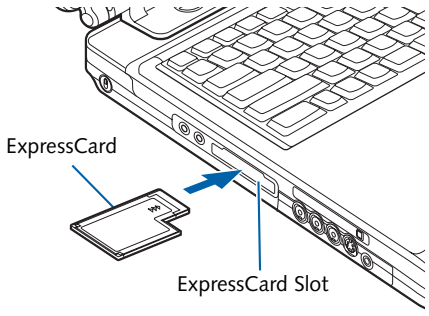

An ExpressCard 54 is used in the illustration.

Figure 4-10. Installing/Removing ExpressCards

- Installing or removing an ExpressCard during your notebook's shutdown or bootup process may damage the card and/or your notebook.
- Do not insert an ExpressCard into a slot if there is water or any other substance on the card as you may permanently damage the card, your notebook, or both.

- When you receive your system, there may be "dummy cards" installed in the card slots. Before installing a card, remove the dummy cards in accordance with the "Removing PC Cards" section. When you do not have a card installed in the slots, be sure to re-install the dummy cards to prevent the system from being contaminated.
- You may be required to log on as Administrator or a member of the Administrator's Group to complete this procedure. If your computer is connected to a network, network policy settings may also prevent you from completing this procedure.

See your ExpressCard manual for instructions on the installation of your card. Some cards may require that your notebook is off while installing them.

To install an ExpressCard, follow these steps:

1. Make sure there is no ExpressCard currently in the slot. If there is, see Removing ExpressCards.
2. Insert your ExpressCard into the slot with the product label facing up. If you are inserting a 34 mm card, be sure to align it with the left side of the slot when inserting it.
3. Push the card firmly into the slot until it is seated in the connector.

REMOVING EXPRESSCARDS

See your ExpressCard manual for specific instructions on removing your card. Some cards may require your notebook to be in Suspend Mode or Off during removal.

- Windows has a shutdown procedure for ExpressCards that must be followed before removing a card. (Review your operating system manual for the correct procedure.) It is good practice to remove devices using the Unplug or Eject Hardware icon in the system tray.
- If the dialog box states that the device cannot be removed, you must save all of your open files, close any open applications and shut down your notebook.

To remove an ExpressCard, press the card into the slot. This will cause the card to be ejected slightly out of the slot allowing you to remove the card.

N6210.book Page 45 Wednesday, May 18, 2005 10:24 AM

Memory Upgrade Module

Your LifeBook notebook has two memory slots, and the system comes with 256 MB, 512 MB, or 1 GB of factory-installed memory. If you have a module installed in only one slot, you can increase your LifeBook notebook's memory capacity by installing another memory upgrade module in the empty slot or by increasing the size of the single installed module. The minimum amount of memory in your system is 256 MB; the maximum amount is 2 GB (two 1 GB modules).

Your notebook supports dual-channel memory. Dual-channel memory can have a significant effect upon your system's performance. In order to support dual-channel memory, two DIMM modules must be installed in your computer.

Memory upgrades must be PC2-4200 DDR2-533 SO-DIMM modules. To ensure 100% compatibility, we recommend that you only purchase additional memory from the Fujitsu on-line accessory store at: **us.fujitsu.com/computers**.

Do not remove any screws from the memory upgrade module compartment, except the ones specifically shown in the directions for installing and removing the memory upgrade module.

INSTALLING A MEMORY MODULE

1. Turn off power to your LifeBook notebook using the power/suspend/resume button, and remove any power adapter.
2. Make sure that all the connector covers are closed.

The memory upgrade module can be severely damaged by electrostatic discharge (ESD). Be sure you are properly grounded when handling and installing the module.

3. Turn the LifeBook notebook bottom side up, with the front panel toward you.
4. Remove the screws at the front of the memory upgrade module compartment. *(Figure 4-11)*
5. Remove the cover by tilting the front edge up and then pulling forward until the tabs on the cover are free.

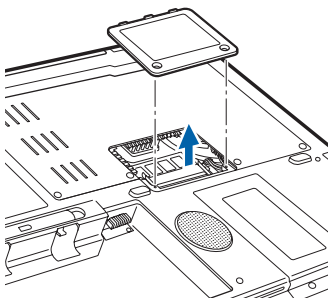

Figure 4-11. Opening the Memory Upgrade Compartment

6. Remove the memory upgrade module from the static guarded sleeve.
7. Align the memory upgrade module with the part side up. Align the connector edge of the memory upgrade module with the connector slot in the compartment. The connector will be pointing toward the rear of the LifeBook notebook.
8. Insert the memory upgrade module at a 45° angle. Press the connector edge of the module firmly down and into the connector until it lodges under the retaining clip. You will hear a click when it is properly in place. *(Figure 4-12)*

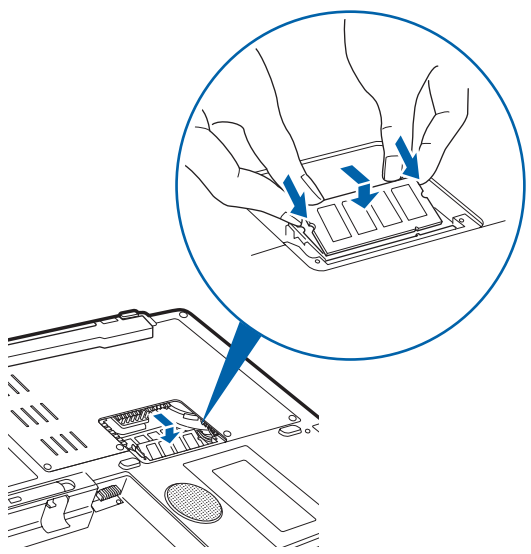

Figure 4-12. Installing a Memory Upgrade Module

9. Replace the cover by hooking the tabs under the rear edge of the compartment opening and tilting down until flush with the bottom of your notebook.
10. Replace the screws.

The memory upgrade module is not something you should routinely remove from your notebook. Once it is installed, you should leave it in place unless you want to increase system memory capacity.

N6210.book Page 46 Wednesday, May 18, 2005 10:24 AM

REMOVING A MEMORY UPGRADE MODULE

1. Perform steps 1 through 5 of Installing a Memory Upgrade Module.
2. Pull the clips sideways away from each side of the memory upgrade module at the same time.
3. While holding the clips out, remove the module from the slot by lifting it up and pulling towards the rear of your LifeBook notebook. *(Figure 4-13)*

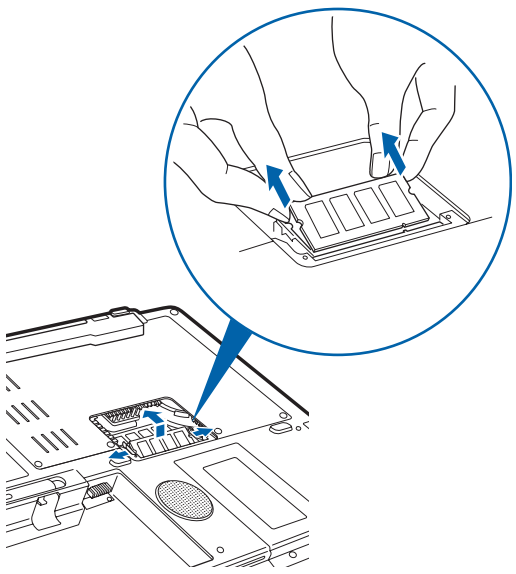

Figure 4-13. Removing a Memory Upgrade Module

4. Store the memory upgrade module in a static guarded sleeve.
5. Replace the cover by following steps 9 and 10 of Installing a Memory Upgrade Module.

After installing your added memory module, you must complete the Resetting the Save-to-Disk Parameters procedure in order for the Save-to-Disk mode to operate properly on your LifeBook notebook. *(See Hibernation (Save-to-disk) Feature on page 29 for more information)*

CHECKING THE MEMORY CAPACITY

Once you have changed the system memory capacity by either adding or removing a memory upgrade module, be sure to check that your notebook has recognized the change.

You can check the memory capacity by clicking [Start] -> Control Panel, then double-clicking the System icon. Select the General tab and check the amount of memory under "Computer."

If the total memory displayed is incorrect, check that your memory upgrade module is properly installed. *(If the module is properly installed and the capacity is still not correctly recognized, see Troubleshooting on page 54.*

N6210.book Page 47 Wednesday, May 18, 2005 10:24 AM

Device Ports

Your LifeBook notebook comes equipped with multiple ports to which you can connect an external device including: disk drives, keyboards, modems, printers, etc.

COMMUNICATIONS PORTS

Your LifeBook has a Modem jack (RJ-11) and a LAN jack (RJ-45) to accommodate external communications.

Modem (RJ-11) Telephone Jack

The modem (RJ-11) telephone jack is used for your internal modem. To connect the telephone cable follow these easy steps: *(Figure 4-14)*

1. Align the connector with the port opening.
2. Push the connector into the port until it is seated.
3. Plug the other end of the telephone cable into a telephone outlet.

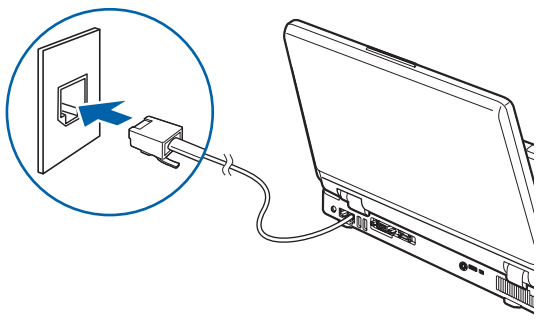

Figure 4-14. Connecting the Modem

Do not connect the internal modem to a Digital PBX as it may cause serious damage to the modem or your LifeBook notebook. It should be noted that some hotels use the Digital PBX systems, please be sure to find out BEFORE you connect your modem. Consult your PBX manufacturer's documentation for more information.

The internal modem is designed to the ITU-T V.90 standard. Its maximum speed of 53000bps is the highest allowed by the FCC, and its actual connection rate depends on the line conditions. The maximum speed is 33600bps at upload.

LAN PORT

This port allows you to connect a LAN (RJ-45) cable for high-speed network or broadband connections (e.g., DSL, cable modem). *(Figure 4-15)*

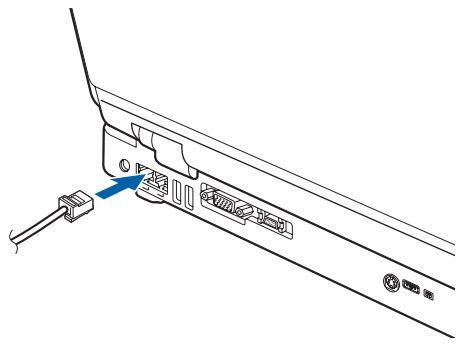

Figure 4-15. Connecting the LAN

IEEE 1394 JACK

The 4-pin IEEE 1394 (Firewire) jack is a high-speed interface (400 Mbps) that can be used to transfer large amounts of data between your notebook and a Firewire peripheral such as a digital camera, external hard drive, or video camera. Hot-swappable and plug-n-play, it is much faster than USB 1.1, CardBus, or parallel port. In order to connect a 1394 device, follow these steps: *(Figure 4-16)*

The 1394 port in this system uses a four-pin configuration. If you intend to interface with devices which have a six-pin configuration, you will need to purchase an adapter.

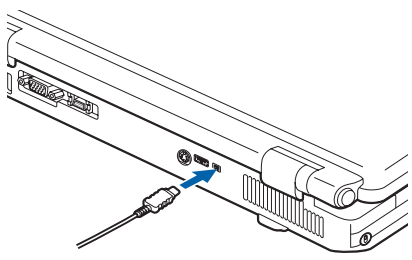

Figure 4-16. IEEE 1394 Interface

UNIVERSAL SERIAL BUS (USB) 2.0 PORTS

The four Universal Serial Bus (USB) 2.0 ports allow you to connect USB devices such as game pads, pointing devices, keyboards and speakers. There is one USB 2.0 port on the right side, and three on the rear panel. *(Figure 4-17)*

USB 2.0 is downward-compatible with USB 1.1 devices, so older USB devices will work with these ports. USB 2.0 is a much faster design, running forty times faster than USB 1.1. To connect a USB device follow these steps:

1. Align the connector with the port opening.
2. Push the connector into the port until it is seated.

N6210.book Page 48 Wednesday, May 18, 2005 10:24 AM

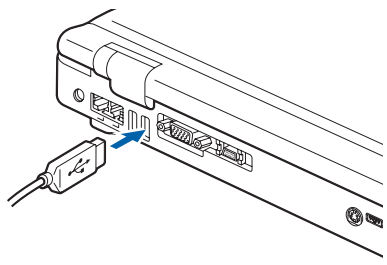

Figure 4-17. Connecting a USB Device

S-VIDEO OUT PORT

The S-Video port allows you to connect and use directly any S-Video device, such as a VCR or television. The S-Video standard provides for a higher quality picture than Composite. In order to connect an S-Video device, follow these easy steps: *(Figure 4-18)*

1. Align the connector with the port opening.

2. Push the connector into the port until it is seated.

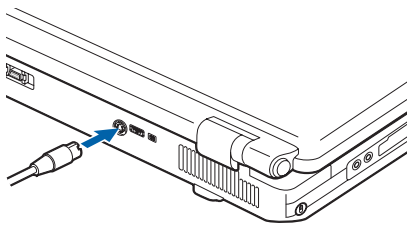

Figure 4-18. S-Video Jack

- There are several types of cables for connecting a digital electronic device (e.g., MD player) to the digital audio-out connector, depending on the connector type. The connector on your computer is a Optical Mini Plug (3.5mm diameter mini plug)
- The frequency of the digital sound output from the SPDIF output connector is selectable as 48.0 kHz or 44.1 kHz. If a sampling rate converter is not installed in your digital electronic device (e.g., MD player), recording is not possible. See the device user manual for more details.
- The sound recorded through connecting a digital electronic device (e.g., MD player) to the SPDIF output connector cannot be used as digital output. All output data from the SPDIF output connector has copyright protection information included.

MICROPHONE JACK

The microphone jack allows you to connect an external stereo microphone. Your microphone must be equipped with a 1/8"(3.5 mm) mono mini-plug in order to fit into the microphone jack of your LifeBook notebook. In order to connect a microphone follow these easy steps:

1. Align the connector with the port opening.
2. Push the connector into the port until it is seated.

HEADPHONE JACK

The headphone jack allows you to connect headphones or powered external speakers. In order to connect headphones or speakers follow these easy steps:

1. Align the connector with the port opening.
2. Push the connector into the port until it is seated.

If you plug headphones into the headphone jack, you will disable the built-in stereo speakers.

EXTERNAL MONITOR PORT

The external monitor port allows you to connect an external monitor. In order to connect an external monitor follow these easy steps:

1. Align the connector with the port opening.
2. Push the connector into the port until it is seated.
3. Tighten the two hold-down screws, located on each end of the connector.

Pressing the [Fn] + [F10] keys allows you to change your selection of where to send your display video. Each time you press the key combination, you will
step to the next choice, starting with the built-in display panel only, moving to the external monitor only, finally moving to both the built-in display panel and an external monitor.

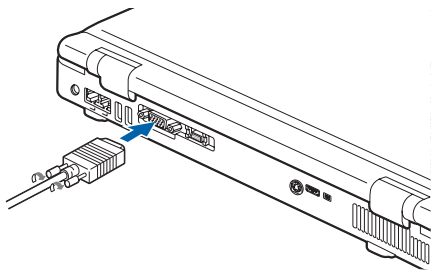

Figure 4-19. External Monitor Connection

N6210.book Page 49 Wednesday, May 18, 2005 10:24 AM

5
Troubleshooting

N6210.book Page 50 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 51 Wednesday, May 18, 2005 10:24 AM

Troubleshooting

Your LifeBook notebook is sturdy and subject to few problems in the field. However, you may encounter simple setup or operating problems that you can solve on the spot, or problems with peripheral devices, that you can solve by replacing the device. The information in this section helps you isolate and resolve some of these straightforward problems and identify failures that require service.

IDENTIFYING THE PROBLEM

If you encounter a problem, go through the following procedure before pursuing further troubleshooting:

1. Turn off your LifeBook notebook.
2. Make sure the AC adapter is plugged into your LifeBook notebook and to an active AC power source.
3. Make sure that any card installed in the PC Card slot is seated properly. You can also remove the card from the slot, thus eliminating it as a possible cause of failure.
4. Make sure that any devices connected to the external connectors are plugged in properly. You can also disconnect such devices, thus eliminating them as possible causes of failure.
5. Turn on your LifeBook notebook. Make sure it has been off at least 10 seconds before you turn it on.
6. Go through the boot sequence.
7. If the problem has not been resolved, refer to the Troubleshooting Table, that follows, for more detailed troubleshooting information.

If you keep notes about what you have tried, your support representative may be able to help you more quickly by giving additional suggestions over the phone.

8. If you have tried the solutions suggested in the Troubleshooting Table without success, contact your support representative:

- Toll free: 1-800-8Fujitsu (1-800-838-5487)
  E-mail: 8fujitsu@us.fujitsu.com/computers
  Web site:
  http://www.computers.us.fujitsu.com/support

Before you place the call, you should have the following information ready so that the customer support representative can provide you with the fastest possible solution:

- Product name
- Product configuration number
- Product serial number
- Purchase date
- Conditions under which the problem occurred
- Any error messages that have occurred
- Type of device connected, if any

See the Configuration Label on the bottom of your LifeBook notebook for configuration and serial numbers.

Do not return a failed LifeBook notebook to Fujitsu until you have received a Return Material Authorization (RMA) number from a support representative.

N6210.book Page 52 Wednesday, May 18, 2005 10:24 AM

SPECIFIC PROBLEMS

Using the Troubleshooting Table

When you have problems with your LifeBook notebook, try to find the symptoms under the Problem column of the troubleshooting table for the feature giving you difficulty.

TROUBLESHOOTING TABLE

You will find a description of common causes for that symptom under the column Possible Cause and what, if anything, you can do to correct the condition under Possible Solutions. All possible causes or solutions may not apply to your LifeBook notebook.

Problem	Page
Audio Problems	page 52
DVD/CD-ROM Drive Problems	page 52
Hard Drive Problems	page 53
Keyboard or Mouse Problems	page 53
Memory Problems	page 54
Modem Problems	page 54
Parallel, Serial and USB Device Problems	page 54
PC Card Problems	page 54
Power Failures	page 55
Shutdown and Start-up Problems	page 56
Video Problems	page 57

Problem	Possible Cause	Possible Solutions
Audio Problems		
There is no sound coming from the built-in speakers.	The volume is turned too low.	Adjust the volume control on your notebook.
	The software volume control is set too low.	Adjust the sound volume control settings in your software, operating system and applications.
	Headphones are plugged into your notebook.	Plugging in headphones disables the built-in speakers, remove the headphones.
	BIOS audio settings are incorrect.	Set the BIOS setup utility to the default values within the Multimedia Device Configuration menu. *(See BIOS Setup Utility on page 25 for more information)*
	Software driver is not configured correctly.	Refer to your application and operating system documentation for help.
DVD/CD-ROM Drive Problems		
Notebook fails to recognize DVD/CDs.	DVD/CD is not pushed down onto center circle of the drive.	Open the DVD/CD-ROM tray and re-install the disk properly.
	DVD/CD-ROM tray is not latched shut.	Push on the front of the DVD/CD-ROM tray until it latches.
	Setup utility is set to something other than DVD/CD-ROM or Auto for the Secondary Master Controller.	Revise BIOS settings for the Secondary Master Controller. *(See BIOS Setup Utility on page 25 for more information)*
	Wrong drive designator was used for DVD/CD in the application.	Verify that the drive designator used by the application is the same as that used by the operating system. When the operating system is booted from a DVD/CD, drive designations are automatically adjusted.
	Windows DVD/CD Auto Insert Notification function is disabled.	Start the DVD/CD from the desktop or application software or re-enable the Windows DVD/CD Auto Insert Notification function. *(See Auto Insert Notification Function on page 39 for more information)*
	DVD/CD is dirty or defective.	Wipe DVD/CD with a non-abrasive CD cleaning cloth and reinsert. If it still will not work try another DVD/CD in the drive.

N6210.book Page 53 Wednesday, May 18, 2005 10:24 AM

Problem	Possible Cause	Possible Solutions
LifeBook notebook fails to auto-play DVD movie.	DVD Player Software is not installed.	Install DVD Player Software using the DVD Application.
	Country designator could be set incorrectly.	Select the DVD player software from the programs list and right-click on the window. Select Properties and verify that the region selected is "USA, Canada."
The DVD/CD-ROM Access indicator on the Status Indicator Panel blinks at regular intervals when no disk is in the tray or the DVD drive is not installed.	The Windows DVD/CD Auto Insert Notification function is active and is checking to see if a DVD/CD is ready to run.	This is normal. However, you may disable this feature. *(See Auto Insert Notification Function on page 39 for more information)*
Hard Drive Problems		
You cannot access your hard drive.	The setup utility is incorrectly set for your internal hard drive.	Set Primary Master correctly in the BIOS. *(See BIOS Setup Utility on page 25 for more information)*
	The wrong drive designator was used by an application when a bootable CD-ROM was used to start the notebook.	Verify drive designator used by application is in use by the operating system. When the operating system is booted from a CD, drive designations are automatically adjusted.
	Security is set so your operating system cannot be started without a password.	Verify your password and security settings.
	The hard disk drive has crashed.	Contact Fujitsu or your local authorized reseller for a replacement hard disk drive.
Keyboard or Mouse Problems		
The built-in keyboard does not seem to work.	Your application has locked out your keyboard.	Try to use your integrated pointing device to restart your system. If this fails, turn your notebook off using the power/suspend/resume button, wait 10 seconds or more, and then turn it back on.
	The NumLk key is set.	Press the NumLk key to reset it.
You have installed an external keyboard or mouse, and it doesn't work.	Your external device is not properly installed.	Reinstall your device. *(See Device Ports on page 47 for more information)*
	Your operating system is not set up with the correct driver for that device.	Check your device and operating system documentation and activate the proper driver.
You have connected an external keyboard or a mouse and it seems to be locking up the system.	Your operating system software is not set up with the correct driver for that device.	Check your device and operating system documentation and activate the proper driver.
	Your system has crashed.	Try to restart your LifeBook notebook. If that fails, turn off the power using the power/suspend/resume button, wait at least 10 seconds, and then power on.

N6210.book Page 54 Wednesday, May 18, 2005 10:24 AM

Problem	Possible Cause	Possible Solutions
Memory Problems		
Your Power On screen, or Main menu of the BIOS setup utility information, does not show the correct amount of installed memory.	Your memory upgrade module is not properly installed.	Remove and reinstall your memory upgrade module. *(See Memory Upgrade Module on page 45 for more information)*
	You have a memory failure.	Check for Power On Self Test (POST) messages. *(See Power On Self Test Messages on page 59 for more information)*
Modem Problems		
Messages about modem operation.	Messages about operation are generated by whichever modem application is in use.	See your application software documentation for additional information.
USB Device Problems		
You have installed a USB device, but your LifeBook notebook does not recognize the device, or the device does not seem to work properly.	The device is not properly installed.	Remove and reinstall the device. *(See Device Ports on page 47 for more information)*
	The device may have been installed while an application was running, so your notebook is not aware of its installation.	Close the application and restart your LifeBook notebook.
	Your software may not have correct software driver active.	See your software documentation and activate the correct driver.
	You may have the wrong I/O address selected for your device.	See your device documentation and software documentation to determine the required I/O address. Change the settings in the BIOS setup utility. *(See BIOS Setup Utility on page 25 for more information)*
	Your device and another device are assigned the same I/O address.	Check all I/O addresses located within the BIOS setup utility and any other installed hardware or software to make sure there are no duplications.
PC Card Problems		
A card inserted in the PC Card slot does not work or is locking up the system.	The card is not properly installed.	Remove and reinstall the card. *(See Removing PC Cards on page 43 for more information)*
	Your software may not have the correct driver active.	See your software documentation and activate the correct driver.
	The card may have been installed while an application was running, so your notebook is not aware of its installation.	Close the application and restart your LifeBook notebook.
	You may have the wrong I/O address selected for your PC Card device.	See your PC Card documentation to determine the required I/O address. Change the settings in the BIOS. *(See BIOS Setup Utility on page 25 for more information)*
	Your PC Card device and another device are assigned the same I/O address.	Check all I/O addresses located within the BIOS setup utility and any other installed hardware or software to make sure there are no duplications.

N6210.book Page 55 Wednesday, May 18, 2005 10:24 AM

Problem	Possible Cause	Possible Solutions
Power Failures		
You turn on your LifeBook notebook and nothing seems to happen.	The installed primary battery is discharged, there's no second battery installed or there is no AC adapter installed.	Check the Status Indicator Panel to determine the presence and condition of the batteries. *(See Status Indicator Panel on page 15 for more information)* Install a charged battery or a Power adapter.
	The battery is installed but is faulty.	Use the Status Indicator panel to verify the presence and condition of the batteries. *(See Status Indicator Panel on page 15 for more information)* If a battery is indicating a short, remove that battery and operate from another power source or replace that battery.
	The battery or batteries are low.	Check the Status Indicator Panel to determine the presence and condition of the batteries. *(See Status Indicator Panel on page 15 for more information)* Use a Power adapter to operate until a battery is charged or install a charged battery.
	The AC adapter is not plugged in properly.	Verify that your adapter is connected correctly. *(See Power Sources on page 23 for more information)*
	The Power adapter has no power from the AC outlet.	Move the AC cord to different outlet, check for a line switch or tripped circuit breaker for the AC outlet.
	The AC adapter is faulty.	Try a different Power adapter.
Your LifeBook notebook turns off all by itself.	The power management parameters are set for auto timeouts which are too short for your operating needs.	Press any button or key on the keyboard, or move the mouse. If that fails, push the Power/Suspend/Resume button. Check your power management settings, or close your applications and go to the Power Savings menu of the setup utility to adjust the timeout values to better suit your operation needs.
	You are operating on battery power only and ignored a low battery alarm until the battery is at the dead battery state and your machine has gone into Dead Battery Suspend mode.	Install a power adapter and then push the Power and Suspend/Resume button. *(See Power Sources on page 23 for more information)*
	Your power adapter has failed or lost its power source.	Make sure the adapter is plugged in and the outlet has power.
	You have a battery failure.	Verify the condition of the batteries using the Status Indicator panel, and replace or remove any batteries that are shorted. *(See Status Indicator Panel on page 15 for more information)*
Your LifeBook notebook will not work on battery alone.	The installed batteries are dead.	Replace the battery with a charged one or install an AC adapter.
	No batteries are installed.	Install a charged battery.
	The batteries are improperly installed.	Verify that the batteries are properly connected by re-installing them.
	Your installed batteries are faulty.	Verify the condition of the batteries using the Status Indicator panel and replace or remove any batteries that are shorted. *(See Status Indicator Panel on page 15 for more information)*

N6210.book Page 56 Wednesday, May 18, 2005 10:24 AM

Problem	Possible Cause	Possible Solutions
The batteries seem to discharge too quickly.	You are running an application that uses a great deal of power due to frequent hard drive or DVD/CD-ROM access, or use of a modem or LAN PC card.	Use both the primary battery and an optional second battery and/or use a power adapter for this application when at all possible.
	The power savings features may be disabled.	Check the power management and/or setup utility settings in the Power Savings menu and adjust according to your operating needs.
	The brightness is turned all the way up.	Turn down the brightness adjustment. The higher the brightness the more power your display uses.
	The batteries are very old.	Replace the batteries.
	The batteries have been exposed to high temperatures.	Replace the batteries.
	The batteries are too hot or too cold.	Restore the notebook to normal operating temperature. The Status Indicator panel Charging icon will flash when the battery is out of operating range.
Shutdown and Startup Problems		
The Power and Suspend/ Resume button does not work.	The Power and Suspend/ Resume button is disabled from the Power -> Advanced submenu of the setup utility.	Enable the button from the setup utility.
	You did not hold the button in long enough.	Hold the button longer. This may need to be a few seconds if your application is preventing the CPU from checking for button pushes.
	There may be a conflict with the application software.	Close all applications and try the button again.
The system powers up and displays power-on information, but fails to load the operating system.	The boot sequence settings of the setup utility are not compatible with your configuration.	Set the operating source by pressing the [ESC] key while the Fujitsu logo is on screen or use the [F2] key and enter the setup utility and adjust the source settings from the Boot menu. *(See BIOS Setup Utility on page 25 for more information)*
	You have a secured system requiring a password to load your operating system.	Make sure you have the right password. Enter the setup utility and verify the Security settings and modify them accordingly. *(See BIOS Setup Utility on page 25 for more information)*
	Internal hard drive was not detected.	Use the BIOS setup utility or Primary Master submenu, located within the Main menu, to try to auto detect the internal hard drive.
Your system display won't turn on when the system is turned on or when the system has resumed.	The system may be password-protected.	Check the status indicator panel to verify that the Security icon is blinking. If it is blinking, enter your password.
An error message is displayed on the screen during the notebook (boot) sequence.	Power On Self Test (POST) has detected a problem.	See the POST messages to determine the meaning and severity of the problem. Not all messages are errors; some are status indicators. *(See Power On Self Test Messages on page 59 for more information)*

N6210.book Page 57 Wednesday, May 18, 2005 10:24 AM

Problem	Possible Cause	Possible Solutions
Your notebook appears to change setup parameters when you start it.	BIOS setup changes were not saved when you exited the BIOS setup utility, returning it to previous settings.	Make sure you select **Save Changes And Exit** when exiting the BIOS setup utility.
	The BIOS CMOS hold-up battery has failed.	Contact your support representative for repairs. This is not a user serviceable part but has a normal life of 3 to 5 years.
Video Problems		
The display is blank when you turn on your notebook.	Something is pushing on the Closed Cover switch.	Clear the Closed Cover switch. *(See Figure on page 8 for location)*
	The display angle and brightness settings are not adequate for your lighting conditions.	Press the [Fn] + [F7] keys repeatedly until you have the desired brightness.
	The LifeBook notebook is set for an external monitor only.	Pressing [F10] while holding down the [Fn] key allows you to change your selection of where to send your display video. Each time you press the combination of keys you will step to the next choice. The choices, in order are: built-in display only, external monitor only, both built-in display and external monitor.
	The power management timeouts may be set for very short intervals and you failed to notice the display come on and go off again.	Press any button or key on the keyboard, or move the mouse to restore operation. If that fails, push the Power and Suspend/Resume button. (The display may be shut off by Standby mode, Auto Suspend or Video Timeout.)
The notebook turned on with a series of beeps and your display is blank.	Power On Self Test (POST) has detected a failure which does not allow the display to operate.	Contact your support representative.
Your system display won't turn on when the system is turned on or when the system has resumed.	The system may be password-protected.	Check the status indicator panel to verify that the Security icon is blinking. If it is blinking, enter your password.
The display goes blank by itself after it is used.	Something is pushing on the Closed Cover switch.	Check the Closed Cover switch. *(See Figure on page 8 for location)*
	The notebook has gone into Video timeout, Standby mode, Suspend mode or Save-to-Disk mode because you have not used it for a period of time.	Press any button or key on the keyboard, or move the mouse to restore operation. If that fails, push the power/suspend/resume button. Check your power management settings, or close all applications and go to Power Savings in the setup utility to adjust the timeout values to suit your operation needs. *(See BIOS Setup Utility on page 25 for more information)*
	The power management timeouts may be set for very short intervals and you failed to notice the display come on and go off again.	Press any button or key on the keyboard, or move the mouse to restore operation. If that fails, push the Power and Suspend/Resume button. (The display may be shut off by Standby Mode, Auto Suspend or Video Timeout.)

N6210.book Page 58 Wednesday, May 18, 2005 10:24 AM

Problem	Possible Cause	Possible Solutions
The built-in display does not close.	A foreign object, such as a paper clip, is stuck between the display and the keyboard.	Remove all foreign objects from the keyboard.
The built-in display has bright or dark spots.	If the spots are very tiny and few in number, this is normal for a large LCD display.	This is normal; do nothing.
	If the spots are numerous or large enough to interfere with your operation needs.	Display is faulty; contact your support representative.
You have connected an external monitor and it does not come on.	Your external monitor is not compatible with your LifeBook notebook.	See your monitor documentation and the External Monitor Support portions of the Specifications section on page 71.
The application display uses only a portion of your screen and is surrounded by a dark frame.	You are running an application that does not support 800 x 600 pixel resolution display and display compression is enabled.	Display compression gives a clearer but smaller display for applications that do not support 800 x 600 pixel resolution. You can fill the screen but have less resolution by changing your display compression setting, (See Video Features submenu, located within the Advanced menu of the BIOS.) *(See BIOS Setup Utility on page 25 for more information)*
You have connected an external monitor and it does not display any information.	Your BIOS setup is not set to enable your external monitor.	Toggle the video destination by pressing [Fn] and [F10] together, or check the BIOS setup and enable your external monitor. (See Video Features submenu, located within the Advanced Menu of the BIOS.) *(See BIOS Setup Utility on page 25 for more information)*
	Your external monitor is not properly installed.	Reinstall your device. *(See External Monitor Port on page 48 for more information)*
	Your operating system software is not set up with the correct driver for that device.	Check your device and operating system documentation and activate the proper driver.
Miscellaneous Problems		
Error message is displayed on the screen during the operation of an application.	Application software often has its own set of error message displays.	See your application manual and help displays screens for more information. Not all messages are errors some may simply be status.

N6210.book Page 59 Wednesday, May 18, 2005 10:24 AM

POWER ON SELF TEST MESSAGES

The following is an alphabetic list of error-and-status messages that Phoenix BIOS and/or your operating system can generate and an explanation of each message. Error messages are marked with an *. The most common errors are marked with a #. If an error message is displayed that is not in this list, write it down and check your operating system documentation both on screen and in the manual. If you can find no reference to the message and its meaning is not clear, contact your support representative for assistance.

nnnn Cache SRAM Passed
Where nnnn is the amount of system cache in kilobytes successfully tested by the Power On Self Test. (This can only appear if you have an SRAM PC Card installed.)

***Diskette drive A error or Diskette drive B error**
Drive A: or B: is present but fails the BIOS Power On Self Test diskette tests. Check to see that the drive is defined with the proper diskette type in the Setup Utility, *(See BIOS Setup Utility on page 25 for more information)* and that the diskette drive is installed correctly. If the disk drive is properly defined and installed, avoid using it and contact your support representative.

***Extended RAM Failed at offset: nnnn**
Extended memory not working or configured improperly. If you have an installed memory upgrade module, verify that the module is properly installed. If it is properly installed, check your Windows Setup to be sure it is not using unavailable memory until you can contact your support representative.

nnnn Extended RAM Passed
Where nnnn is the amount of memory in kilobytes successfully tested.

***Failing Bits: nnnn The hex number nnnn**
This is a map of the bits at the memory address (in System, Extended, or Shadow memory) which failed the memory test. Each 1 (one) in the map indicates a failed bit. This is a serious fault that may cause you to lose data if you continue. Contact your support representative.

***Fixed Disk x Failure or Fixed Disk Controller Failure (where x = 1-4)**
The fixed disk is not working or not configured properly. This may mean that the hard drive type identified in your setup utility does not agree with the type detected by the Power On Self Test. Run the setup utility to check for the hard drive type settings and correct them if necessary. If the settings are OK and the message appears when you restart the system, there may be a serious fault which might cause you to lose data if you continue. Contact your support representative.

***Incorrect Drive A type – run SETUP**
Type of floppy drive A: not correctly identified in Setup. This means that the floppy disk drive type identified in your setup utility does not agree with the type detected by the Power On Self Test. Run the setup utility to correct the inconsistency.

***Incorrect Drive B type – run SETUP**
Type of floppy drive B: not correctly identified in Setup. This means that the floppy disk drive type identified in your setup utility does not agree with the type detected by the Power On Self Test. Run the setup utility to correct the inconsistency.

***Invalid NVRAM media type**
Problem with NVRAM access. In the unlikely case that you see this message you may have some display problems. You can continue operating but should contact your support representative for more information.

***Keyboard controller error**
The keyboard controller test failed. You may have to replace your keyboard or keyboard controller but may be able to use an external keyboard until then.

***Keyboard error**
Keyboard not working. You may have to replace your keyboard or keyboard controller but may be able to use an external keyboard until then. Contact your support representative.

***Keyboard error nn**
BIOS discovered a stuck key and displays the scan code for the stuck key. You may have to replace your keyboard but may be able to use an external keyboard until then. Contact your support representative.

***Monitor type does not match CMOS – Run SETUP**
Monitor type not correctly identified in Setup. This error probably means your BIOS is corrupted, run the setup utility and set all settings to the default conditions. If you still get this error, contact your support representative.

#*Operating system not found
Operating system cannot be located on either drive A: or drive C:. Enter the setup utility and see if both the fixed disk, and drive A: are properly identified and that the boot sequence is set correctly. Unless you have changed your installation greatly, the operating system should be on drive C:. If the setup utility is correctly set, your hard drive may be corrupted and your system may have to be reinstalled from your back up media.

***Parity Check 1 nnnn**
Parity error found in the system bus. BIOS attempts to locate the address and display it on the screen. If it cannot locate the address, it displays ????. This is a potentially data-destroying failure. Contact your support representative.

N6210.book Page 60 Wednesday, May 18, 2005 10:24 AM

***Parity Check 2 nnnn**
Parity error found in the I/O bus. BIOS attempts to locate the address and display it on the screen. If it cannot locate the address, it displays ????. This is a potentially data destroying failure. Contact your support representative.

#*Press <F1> to resume, <F2> to SETUP
Displayed after any recoverable error message. Press the [F1] key to continue the boot process or the [F2] key to enter Setup and change any settings.

#*Previous boot incomplete – Default configuration used
Previous Power On Self Test did not complete successfully. The Power On Self Test will load default values and offer to run Setup. If the previous failure was caused by incorrect values and they are not corrected, the next boot will likely fail also. If using the default settings does not allow you to complete a successful boot sequence, you should turn off the power with the power/suspend/resume button and contact your support representative.

***Real time clock error**
Real-time clock fails BIOS test. May require board repair. Contact your support representative.

***Shadow RAM Failed at offset: nnnn**
Shadow RAM failed at offset nnnn of the 64k block at which the error was detected. You are risking data corruption if you continue. Contact your support representative.

nnnn Shadow RAM Passed
Where nnnn is the amount of shadow RAM in kilobytes successfully tested.

***System battery is dead – Replace and run SETUP**
The BIOS CMOS RAM memory hold up battery is dead. This is part of your BIOS and is a board mounted battery which requires a support representative to change. You can continue operating but you will have to use setup utility default values or reconfigure your setup utility every time you turn off your LifeBook notebook. This battery has an expected life of 2 to 3 years.

System BIOS shadowed
System BIOS copied to shadow RAM.

***System CMOS checksum bad – run SETUP**
BIOS CMOS RAM has been corrupted or modified incorrectly, perhaps by an application program that changes data stored in BIOS memory. Run Setup and reconfigure the system.

***System RAM Failed at offset: nnnn**
System memory failed at offset nnnn of in the 64k block at which the error was detected. This means that there is a fault in your built-in memory. If you continue to operate, you risk corrupting your data. Contact your support representative for repairs.

nnnn System RAM Passed
Where nnnn is the amount of system memory in kilobytes successfully tested.

***System timer error**
The timer test failed. The main clock that operates the computer is faulty. Requires repair of system board. Contact your support representative for repairs.

UMB upper limit segment address: nnnn
Displays the address of the upper limit of Upper Memory Blocks, indicating released segments of the BIOS memory which may be reclaimed by a virtual memory manager.

Video BIOS shadowed
Video BIOS successfully copied to shadow RAM.

MODEM RESULT CODES

The operating system and application software that is factory installed detects the modem characteristics and provides the necessary command strings to operate the modem. The internal modem operation is controlled by generic AT commands from the operating system and application software. The standard long form result codes may, in some cases, be displayed on your screen to keep you informed of the actions of your modem. The operating system and application software may suppress display of the result codes.

Examples of result codes are:

- OK
- NO CARRIER
- NO DIALTONE
- CONNECT 53000 (Connection complete at 53,000 bps.)
- ERROR
- FAX
- RING (This means an incoming call.)
- BUSY
- NO ANSWER

When using the internal modem with applications that are not factory installed refer to the application documentation.

N6210.book Page 61 Wednesday, May 18, 2005 10:24 AM

Restoring Your Pre-installed Software

The Drivers and Applications Restore (DAR) DVD contains sets of device drivers and Fujitsu utilities (in specific directories) that are unique to your computer configuration for use as documented below.

If you have access to the internet, visit the Fujitsu Support web site at: http://www.computers.us.fujitsu.com/support to check for the most current information, drivers and hints on how to perform recovery and system updates.

Re-Installing Individual Drivers and Applications

The Drivers and Applications CD can be used to selectively re-install drivers and/or applications that may have been un-installed or corrupted.

There may be certain free third-party applications pre-installed on your system that are not on the DAR CD. The latest versions of the applications can be downloaded from the third-party's website.

To re-install drivers and/or applications:

1. Boot up the system and insert the DAR CD after Windows has started. A Fujitsu Installer screen is displayed after the CD is inserted.
2. After reading the License Agreement, click [I agree].
3. A window will appear containing a list of applications, drivers, and utilities that you can install from the Drivers and Applications CD.

The components listed are color-coded in terms of their install status. Blue indicates that the component can be installed. Green indicates that the component needs to be installed separately. Grey indicates a component that is already installed; grey items can be reinstalled, but prior to installation you will receive a reminder that the component is already installed.

4. In the list, check off all the components you want to install. If you want to install all components, click [Select All]. Clicking [Select All] will select all of the blue-coded components; you must select grey and green components separately.
5. Once you have selected the components you wish to install, click [Install Selected Subsystems]; the components will be installed.
6. After the components are installed, click [OK], then click [Yes] when asked if you want to reboot the system.

RESTORING THE FACTORY IMAGE

The Restore Disc only restores the primary hard disk drive. If you have an optional second hard disk drive installed, **it will not be restored** using these utilities.

The Restore Disc that came with your system contains two utilities:

- The **Recovery** utility allows you to restore the original contents of the C: drive.
- The **Hard Disk Data Delete** utility on this disc is used to delete all data on your hard disk and prevent it from being reused. Do not use the Hard Disk Data Delete utility unless you are absolutely certain that you want to erase your entire hard disk, including all partitions.

- The use of this disc requires that you have a device capable of reading DVDs attached to your system. If you do not have a built-in DVD player, you will need to attach an external player. For more information on available external devices, visit our Web site at: **us.fujitsu.com/computers**.
- This disc can only be used with the system with which it was purchased.

BOOT Priority Change

Before restoring an image, you must first verify that your system is set up to boot from the DVD drive. To verify/change the boot-up priority (rather than booting-up from the hard drive or an external floppy disk drive), perform the following steps:

1. Start your system and press the [F2] key when the Fujitsu logo appears. You will enter the BIOS Setup Utility.
2. Using the arrow keys, go to the Boot menu.
3. Arrow down to the Boot Device Priority submenu. Press [Enter].
4. If "Optical Media Drive" or "CD-ROM Drive" is not at the top of the list, arrow down to the drive in the list, and press the space bar (or the + key) to move it to the top of the list. (The system attempts to boot from the devices in the order in which they are

N6210.book Page 62 Wednesday, May 18, 2005 10:24 AM

listed.). Note that the BIOS for some systems will indicate "CD-ROM Drive", even when a DVD drive is connected.

5. If you have an *external* DVD drive connected, proceed to the next step; otherwise, proceed to step 7.
6. If you have an external DVD drive connected:
   - Select the Advanced menu in the BIOS window.
   - Scroll down to the USB Features submenu and press the Enter key to open it.
   - If Legacy USB Support is disabled, press the space bar to enable it.
   - Scroll down to SCSI SubClass Support and press the space bar to enable it.
7. Press [F10], then click on [Yes] to exit the BIOS Setup Utility and return to the boot process.

After you have changed the boot priority, you can restore a backup image when you are booting up.

Procedure

1. Turn on the power to your system.
2. Ensure that you have a device that can read DVDs either installed in your system or attached externally to it.
3. Insert the Restore Disc into the drive tray.
4. Reboot your system.
5. After the system reboots, follow the instructions that appear to either restore your system image or erase all data from your hard disk.

AUTOMATICALLY DOWNLOADING DRIVER UPDATES

Your system has a convenient tool called the Fujitsu Driver Update (FDU) utility. With FDU, you can choose to automatically or manually go to the Fujitsu site to check for new updates for your system.

The FDU icon should appear in the system tray at the bottom right of your screen (roll the cursor over the icons to find the correct one). If the FDU icon does not appear in the system tray, it can be started by going to [Start] -> All Programs, and clicking on Fujitsu Driver Update; this will create the icon automatically.

To invoke the FDU menu, right-click on the FDU icon. The menu contains the following items:

- **Check for updates now**
  Allows for manual driver update search. The first time it is used, you are prompted to agree to a user agreement. After clicking on the icon, the FDU automatically connects with the Fujitsu site to check for updates and downloads them. While downloading, the icon has a red bar through it, indicating that it cannot be used while the download is in process. When the update is complete, a message appears informing you of the fact.
- **Enable Automatic Update Notifications**
  Automatically searches for new updates on a regular basis (approximately every 3 days).
- **Show update history**
  Brings up a screen that displays a history of updates that have been made via the FDU.
- **About Fujitsu Driver Update**
  Displays the FDU version number and copyright information
- **Fujitsu Driver Update Readme**
  Displays the FDU readme.

N6210.book Page 63 Wednesday, May 18, 2005 10:24 AM

6
Care and Maintenance

N6210.book Page 64 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 65 Wednesday, May 18, 2005 10:24 AM

Care and Maintenance

If you use your LifeBook notebook carefully, you will increase its life and reliability. This section provides some tips for looking after the notebook and its devices.

Electrical equipment may be hazardous if misused. Operations of this product or similar products, must always be supervised by an adult. Do not allow children access to the interior of any electrical products and do not permit them to handle any cables.

LIFEBOOK NOTEBOOK

Caring for your Notebook

- Your LifeBook notebook is a durable but sensitive electronic device. Treat it with care.
- Make a habit of transporting it in a carrying case.
- Do not attempt to service the computer yourself. Always follow installation instructions closely.
- To protect your notebook from damage and to optimize system performance, be sure to **keep all air all vents unobstructed**, **clean, and clear of debris**. This may require periodic cleaning, depending upon the environment in which the system is used.
- Do not operate the notebook in areas where the air vents can be obstructed, such as in tight enclosures or on soft surfaces like a bed or cushion.
- Keep it away from food and beverages.
- If you accidentally spill liquid on your notebook:
  - Turn it off and position it so the liquid can run out.
  - Let it dry out for 24 hours, or longer if needed.
  - If your notebook will not boot after it has dried out, call your support representative.
- Do not use your LifeBook notebook in a wet environment (near a bathtub, swimming pool).
- Always use the AC adapter and batteries that are approved for your LifeBook notebook.
- Avoid exposure to sand, dust and other environmental hazards.
- Do not expose your LifeBook notebook to direct sunlight for long periods of time as temperatures above 140° F (60° C) may damage your notebook.
- Keep the covers closed on the connectors and slots when they are not in use.
- Do not put heavy or sharp objects on the computer.
- If you are carrying your LifeBook notebook in a briefcase, or any other carrying case, make sure that there are no objects in the case pressing on the lid.
- Do not drop your LifeBook notebook.
- Do not touch the screen with any sharp objects.

Cleaning your LifeBook notebook

- Always disconnect the power plug. (Pull the plug, not the cord.)
- Clean your LifeBook notebook with a damp, lint-free cloth. Do not use abrasives or solvents.
- Use a soft cloth to remove dust from the screen. Never use glass cleaners.

Storing your LifeBook notebook

- If storing your LifeBook notebook for a month or longer, turn your LifeBook off and remove all Lithium ion batteries.
- Store your LifeBook notebook and batteries separately. If you store your notebook with a battery installed, the battery will discharge, and battery life will be reduced. In addition, a faulty battery might damage your notebook.
- Store your notebook in a cool, dry location. Temperatures should remain between 13ºF (-25ºC) and 140ºF (60ºC).

Traveling with your LifeBook notebook

- Do not transport your LifeBook notebook while it is turned on.
- Do not check your LifeBook notebook as baggage. Carry it with you.
- When traveling with the hard drive removed, wrap the drive in a non-conducting materials (cloth or paper). If you have the drive checked by hand, be ready to install the drive if needed. Never put your hard drive through a metal detector. Have your hard drive hand-inspected by security personnel. You can however, put your hard drive through a properly tuned X-ray machine.

N6210.book Page 66 Wednesday, May 18, 2005 10:24 AM

- Take the necessary plug adapters if you're traveling overseas. Check the following diagram to determine which plug adapter you'll need or ask your travel agent.

Outlet Type	Location
	United States, Canada, Mexico, parts of Latin America, Japan, Korea, the Philippines, Taiwan
	Russia and the Commonwealth of Independent States (CIS), most of Europe, parts of Latin America, the Middle East, parts of Africa, Hong Kong, India, most of South Asia
	United Kingdom, Ireland, parts of Africa, Malaysia, Singapore
	China, Australia, New Zealand

BATTERIES

Caring for your Batteries

- Always handle batteries carefully.
- Do not short-circuit the battery terminals (that is, do not touch both terminals with a metal object). Do not carry lose batteries in a pocket or purse where they may mix with coins, keys, or other metal objects. Doing so may cause an explosion or fire.
- Do not drop, puncture, disassemble, mutilate or incinerate the battery.
- Recharge batteries only as described in this manual and only in ventilated areas.
- Do not leave batteries in hot locations for more than a day or two. Intense heat can shorten battery life.
- Do not leave a battery in storage for longer than six months without recharging it.

Increasing Battery Life

- Power your LifeBook notebook through the AC adapter whenever possible.
- If your LifeBook notebook is running on battery power all day, connect it to the AC adapter overnight to recharge the battery.
- Keep brightness to the lowest level comfortable.
- Set the power management for maximum battery life.
- Put your LifeBook notebook in Suspend mode when it is turned on and you are not actually using it.
- Minimize your DVD/CD-RW drive, CD-ROM drive, and wireless LAN usage.
- Disable the Windows CD Auto Insert function.
- Always use fully charged batteries.
- Eject PCMCIA cards when not in use.

FLOPPY DISKS AND DRIVES

Caring for your Floppy Disks

- Avoid using floppy disks in damp or dusty locations.
- Never store floppy disks near a magnet or magnetic field.
- Do not use a pencil or an eraser on a disk or disk label.
- Avoid storing the floppy disks in extremely hot or cold locations, or in locations subject to severe temperature changes. Store at temperatures between 50º F (10ºC) and 125ºF (52ºC).
- Do not touch the exposed part of the disk behind the metal shutter.

Caring for your Floppy Disk Drive

- To clean, wipe the floppy disk drive clean with a dry soft cloth, or with a soft cloth dampened with water or a solution of neutral detergent. Never use benzene, paint thinner or other volatile material.
- Avoid storing the floppy disk drive in extremely hot or cold locations, or in locations subject to severe temperature changes. Store at temperatures between 50º F (10ºC) and 125ºF (52ºC).
- Keep the floppy disk drive out of direct sunlight and away from heating equipment.
- Avoid storing the floppy disk drive in locations subject to shock and vibration.
- Never use the floppy disk drive with any liquid, metal, or other foreign matter inside the floppy disk drive or disk.
- Never disassemble or dismantle your floppy disk drive.

DVDs AND CDs

Caring for your DVDs and CDs

DVDs and CDs are precision devices and will function reliably if given reasonable care.

- Always store your DVD/CDs in its case when it is not in use.
- Always handle DVD/CDs by the edges and avoid touching the surface.
- Avoid storing any DVD/CDs in extreme temperatures.
- Do not bend DVD/CDs or set heavy objects on them.
- Do not spill liquids on DVD/CDs.
- Do not scratch DVD/CDs.

N6210.book Page 67 Wednesday, May 18, 2005 10:24 AM

- Do not put a label on DVD/CDs.
- Do not get dust on DVD/CDs.
- Never write on the label surface with a ballpoint pen or pencil. Always use a felt pen.
- If a DVD/CD is subjected to a sudden change in temperature, cold to warm, condensation may form on the surface. Wipe the moisture off with a clean, soft, lint free cloth and let it dry at room temperature. DO NOT use a hair dryer or heater to dry DVD/CDs.
- If a DVD/CD is dirty, use only a DVD/CD cleaner or wipe it with a clean, soft, lint free cloth starting from the inner edge and wiping to the outer edge.

Caring for your Media Drive

Your media drive is durable but you must treat it with care. Please pay attention to the following points:

- The drive rotates the compact disk at a very high speed. Do not carry it around or subject it to shock or vibration with the power on.
- Avoid using or storing the drive where it will be exposed to extreme temperatures.
- Avoid using or storing the drive where it is damp or dusty.
- Avoid using or storing the drive near magnets or devices that generate strong magnetic fields.
- Avoid using or storing the drive where it will be subjected to shock or vibration.
- Do not disassemble or dismantle the media drive.

PC CARDS

Caring for your PC Cards

PC Cards are durable, but you must treat them with care. The documentation supplied with your PC Card will provide specific information, but you should pay attention to the following points:

- To keep out dust and dirt, store PC Cards in their protective sleeves when they are not installed in your LifeBook notebook.
- Avoid prolonged exposure to direct sunlight or excessive heat.
- Keep the cards dry.
- Do not flex or bend the cards, and do not place heavy objects on top of them.
- Do not force cards into the slot.
- Avoid dropping cards, or subjecting them to excessive vibration.

N6210.book Page 68 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 69 Wednesday, May 18, 2005 10:24 AM

7

Specifications

N6210.book Page 70 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 71 Wednesday, May 18, 2005 10:24 AM

Specifications

This section provides the general hardware and environmental specifications for your LifeBook notebook. Specific details about your system may vary from those referenced here. For an updated list of current configurations, please go to the Fujitsu Computer Systems Corporation Web site at: **us.fujitsu.com/computers.**

All options listed are accurate as of the date of print; substitutions may have been made subsequent to date of publication.

CONFIGURATION LABEL

Your LifeBook notebook contains a configuration label located on the bottom of the system. This label contains specific information regarding the options you've chosen for your notebook. Following is an example label, and information about its various parts. Your label may vary, depending upon your system configuration.

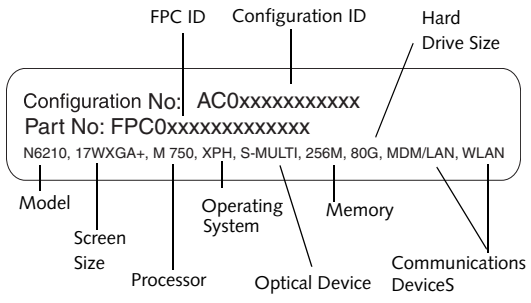

Figure 7-1 Configuration Label

MICROPROCESSOR

- Intel Pentium M Processor 750
- 1.86 GHz processor speed
- 533 MHz Front Side Bus (FSB)
- 2 MB on-die L2 Cache

MEMORY

System Memory Range:

- Factory-installed maximum is 2 GB. If purchased with less than the maximum, the user can purchase larger and/or additional modules. *(See details on page 46)*
- DDR2-535, PC2-4200
- 2 DIMM slots
- Supports dual-channel memory (requires that two DIMM modules be installed)

BIOS Memory:
512 KB

VIDEO

Built-in 17" Crystal View flat-panel Wide XGA+ TFT active matrix Crystal View (high contrast, high brightness) LCD display with simultaneous display capability.

Video Color and Resolution

- **Internal**: WXGA+, 1440 x 900 pixel resolution, 16M colors max
- **External**: 1600 x 1200 pixel resolution, 16M colors at 85Hz. Simultaneous Video (XGA, SVGA, VGA compatible): 1440 x 900, 16M colors max

Graphics Accelerator Card
Integrated ATI Mobility RADEON X600 with 128 MB of dedicated video memory

AUDIO

The Intel 915PM controller supports Intel High Definition (HD) Audio. HD Audio delivers the features and high-end performance of an add-in audio card, and is capable of playing back more channels of higher quality than was previously possible.

- Intel 82801FBM/ALC260
- Stereo headphone jack, 1 V_{rms} or less, minimum impedance 32 Ohms
- Stereo microphone jack, 100mV_{rms} or less, minimum impedance 10K Ohms
- Two built-in stereo box speakers (1.5W/channel) and subwoofer

MASS STORAGE DEVICES

Hard Disk Drives

- Optional second hard disk drive (Note that the optional second hard disk drive is a factory-installed option, and cannot be purchased as an accessory.)
- Hard Disk Drive configurations available:
  60 GB (7200 rpm)
  80 GB (4200 rpm)
  100 GB (4200 rpm)
  60 GB (7200 rpm) + 60 GB (7200 rpm) = 120 GB
  80 GB (4200 rpm) + 80 GB (4200 rpm) = 160 GB
  100 GB (4200 rpm) + 100 GB (4200 rpm) = 200 GB

Optical Drive

- Dual-Layer Multi-Format DVD Writer (2.4x DVD+R DL, 8x DVD-R/+R, 4x DVD-RW/+RW, 3x DVD-RAM, 8x DVD-ROM, 24x CD-R, 10x CD-RW, 24x CD-ROM), or,
- DVD/CD-RW combo drive (24x CD-R, 10x CD-RW, 24x CD, 8x DVD

FEATURES

Integrated Pointing Device
Touchpad, with two buttons and a scroll button

Theft Prevention Lock Slot
Lock slot for use with physical restraint security systems. The Kensington locking system is recommended.

N6210.book Page 72 Wednesday, May 18, 2005 10:24 AM

Communications

- Integrated Broadcom 10 Base-T/100 Base-TX/1000 Base-TX Gigabit Ethernet LAN
- Internal V.90 standard 56K* fax/modem (ITU V.90, 56K data, 14.4K fax).
- Integrated Intel PRO/Wireless 2915ABG network connection (802.11a+b/g)

* *Actual data transfer rate over U.S. telephone lines varies and is less than 56Kbps due to the current FCC regulations and line conditions.*

DEVICE PORTS

- PC Card slot for one Type II cards: PCMCIA Standard 2.1 with CardBus support
- ExpressCard slot for one ExpressCard (supporting either 34mm or 54mm ExpressCards)
- One 15-pin D-SUB connector for VGA external monitor (see Display specifications)
- Combination Memory Stick/Secure Digital (SD)/xD Card slot
- One mini-DIN 7-pin S-Video Out port
- Four connectors for USB 2.0 (Universal Serial Bus) input/output devices
- One 4-pin IEEE 1394 jack
- One stereo microphone/line in jack (See Audio specifications)
- One stereo headphone/line out jack (See Audio specifications)
- One modular modem (RJ-11) connector
- One modular LAN (RJ-45) connector

KEYBOARD

Built-in keyboard with all functions of 103 key keyboards.

- Total number of keys: 103
- Function keys: 12, [F1] through [F12]
- Feature extension key: [Fn]
- Windows keys: 2 (Start key and application key)
- Key pitch: 19 mm
- Key stroke: 3.0 mm
- Dedicated ten-key numeric keypad
- Built-in Alps Wide Touchpad pointing device with left and right buttons and scrolling button

External Keyboard Support

- USB-compatible

External Mouse Support

- USB-compatible

Management Standard

DMI 2.0-ready, WFM 2.0-compliant

POWER

Batteries

Main 8-cell Lithium ion battery, rechargeable, 14.8V, 4400 mAh

Adapters

AC Adapter: Autosensing 100-240V AC, 80W, supplying 19V DC, 4.22A, to the LifeBook notebook (includes an AC cable).

Power Management

Conforms to ACPI (Advanced Configuration & Power Interface)

Electrostatic Discharge (ESD)

9 kV

DIMENSIONS

Overall Dimensions

15.94" x 11.61" x 1.79"/2.02"
(405 mm x 295 mm x 45.5/51.3 mm)

Weight

Non-TV tuner model (with one hard disk drive): Approximately 9.25 lbs. (4.19 Kg)

TV tuner model (with one hard disk drive): Approximately 9.48 lbs. (4.3 Kg)

Second Hard Disk Drive: Approximately 0.22 lb. (98g)

ENVIRONMENTAL REQUIREMENTS

Temperature

Operating: 5° to 35° C (41° to 95° F)
Non-operating: –15° to 60° C (5° to 140° F)

Humidity

Operating: 20% to 85%, relative, non-condensing.
Non-operating; 8% to 85%, relative, non-condensing

Altitude

Operating: 10,000 feet (3,048 m) maximum

POPULAR ACCESSORIES

For information on ordering Fujitsu accessories, please visit our Web site at: **us.fujitsu.com/computers** or call 1-877-372-3473.

N6210.book Page 73 Wednesday, May 18, 2005 10:24 AM

PRE-INSTALLED SOFTWARE

Your Fujitsu LifeBook notebook comes with pre-installed software for playing audio and video files of various formats. The software configuration installed is dependent upon the operating system that is pre-installed on your system. In addition, there is file transfer software, virus protection software and Power Management software.

Software vendors occasionally update their software packages. To ensure that you are using the optimal version for your LifeBook in the future, visit the software company web sites periodically.

Manuals

Included with your LifeBook notebook you will find manuals for your operating system and other pre-installed software. Manuals that are not included are available online through the help system of the software. We recommend that you review these manuals for general information on the use of these applications.

Tutorials

All operating systems and most application software have tutorials built-into them upon installation. We highly recommend that you step through the tutorial before you use an application.

APPLICATION DESCRIPTIONS

Adobe Acrobat Reader

The Adobe Acrobat Reader allows you to view, navigate, and print PDF files from across all of the major computing platforms.

Norton AntiVirus from Symantec

Your system is preinstalled with a free 90-day trial version of Symantec's Norton AntiVirus™ 2005. Norton AntiVirus is a program designed to protect your LifeBook notebook from computer viruses. It assists in the protection of the data currently residing on your hard disk from destruction or contamination. The 90-day trial version is activated upon your acceptance of software license agreement. After 90 days, it will be necessary to purchase a subscription from Symantec to download latest virus definitions.

(See your online help or manual for more information on how and when to run this program).

Fujitsu HotKey Utility

Fujitsu HotKey Utility allows you to monitor and manage the status of the screen brightness and system volume.

Google Toolbar

The Google Toolbar allows you to search the Internet quickly, block pop-ups, and perform a variety of other tasks to make your Internet experience easier and more pleasant.

RecordNow!

RecordNow! from Sonic Solutions is a versatile program for burning CDs and DVDs using your computer.

Quicken 2005 New User Edition

Quicken 2005 by Intuit is a personal money management program. It has features such as portfolio management, account registries, on-line banking and bill paying features.

Depending upon your system configuration, one of the following applications will be installed on your notebook:

Microsoft Works 8.0

Microsoft Works 8.0 is a suite of software containing the basic tools to write letters and reports, track family and friends with address books, manage home finances, and create a home inventory,

or,

Microsoft Office SBE (XP Pro models only)

Microsoft Small Business Edition (SBE) is a suite of applications designed to help run a small business while increasing productivity. Among the programs included in Microsoft SBE are Microsoft Word, Excel, and PowerPoint.

N6210.book Page 74 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 75 Wednesday, May 18, 2005 10:24 AM

8
Glossary

N6210.book Page 76 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 77 Wednesday, May 18, 2005 10:24 AM

Glossary

AC Adapter
A device which converts the AC voltage from a wall outlet to the DC voltage needed to power your LifeBook notebook.

Active-Matrix Display
A type of technology for making flat-panel displays which has a transistor or similar device for every pixel on the screen.

BIOS
Basic Input-Output System. A program and set of default parameters stored in ROM which tests and operates your LifeBook notebook when you turn it on until it loads your installed operating system from disk. Information from the BIOS is transferred to the installed operating system to provide it with information on the configuration and status of the hardware.

Bit
An abbreviation for binary digit. A single piece of information which is either a one (1) or a zero (0).

bps
An abbreviation for bits per second. Used to describe data transfer rates.

Boot
To start-up a computer and load its operating system from disk, ROM or other storage media into RAM.

Bus
An electrical circuit which passes data between the CPU and the sub-assemblies inside your LifeBook notebook.

Byte
8 bits of parallel binary information.

Cache Memory
A block of memory built into the microprocessor which is much faster to access than your system RAM and used in specially structured ways to make your overall data handling time faster.

CardBus
A faster, 32-bit version of the PC Card interface which offers performance similar to the 32-bit PCI architecture.

Command
An instruction which you give your operating system. Example: run a particular application or format a floppy disk.

Configuration
The combination of hardware and software that makes up your system and how it is allocated for use.

CRT
Cathode Ray Tube. A display device which uses a beam of electronic particles striking a luminescent screen. It produces a visual image by varying the position and intensity of the beam.

Data
The information a system stores and processes.

DC
Direct current. A voltage or current that does not fluctuate periodically with time.

DDR
Double Data Rate

Fast version of SDRAM that provides twice the bandwidth of standard SDRAMs.

Default Value
A pre-programmed value to be used if you fail to set your own.

DIMM
Dual-in-line memory module.

DISE
Drive Image Special Edition (DISE) by PowerQuest. Provides a way to restore your computer if you experience a hard disk crash or other system failure. DISE is used to restore the factory image and restore the system to its original state.

Disk
A spinning platter of magnetic data storage media. If the platter is very stiff it is a hard drive, if it is highly flexible it is a floppy disk, if it is a floppy disk in a hard housing with a shutter it is commonly called a diskette.

Disk Drive
The hardware which spins the disk and has the heads and control circuitry for reading and writing the data on the disk.

Diskette
A floppy disk in a hard housing with a shutter.

DMA
Direct Memory Access. Special circuitry for memory to memory transfers of data which do not require CPU action.

N6210.book Page 78 Wednesday, May 18, 2005 10:24 AM

DOS
Disk Operating System (MS-DOS is a Microsoft Disk Operating System).

Driver
A computer program which converts application and operating system commands to external devices into the exact form required by a specific brand and model of device in order to produce the desired results from that particular equipment.

DVD
Digital Video Disc. This is a form of optical disc storage for video, audio and computer data, envisioned to replace current digital storage formats (CD-ROM, laser and audio CD) because of its capability for storing greater amounts of data. A typical single layer, single-sided DVD, for example, can contain 4.7GB of data and a maximum of 17GB for the double-sided discs.

ECP
Extended Capability Port. A set of standards for high speed data communication and interconnection between electronic devices.

ESD
Electrostatic Discharge. The sudden discharge of electricity from a static charge which has built-up slowly. Example: the shock you get from a doorknob on a dry day or the sparks you get from brushing hair on a dry day.

Extended Memory
All memory more than the 640KB recognized by MS-DOS as system memory.

FCC
Federal Communication Commission.

Floppy Disk
A spinning platter of magnetic data storage media which is highly flexible.

GB
Gigabyte.

Hard drive
A spinning platter of magnetic data storage media where the platter is very stiff.

Hexadecimal
A decimal notation for the value of a 4 bit binary number. (0-9, A, B, C, D, E, F) Example: 2F in hexadecimal = 00101111 in binary = 47 in decimal.

I/O
Input/Output. Data entering and leaving your LifeBook notebook in electronic form.

I/O Port
The connector and associated control circuits for data entering and leaving your LifeBook notebook in electronic form.

IDE
Intelligent Drive Electronics. A type of control interface for a hard drive which is inside the hard drive unit.

IEEE 1394
A type of data transfer protocol that allows for fast transfer of digital files and data with devices such as digital cameras.

IRQ
Interrupt Request. An acronym for the hardware signal to the CPU that an external event has occurred which needs to be processed.

KB
Kilobyte.

LAN
Local Area Network. An interconnection of computers and peripherals within a single limited geographic location which can pass programs and data amongst themselves.

LCD
Liquid Crystal Display. A type of display which makes images by controlling the orientation of crystals in a crystalline liquid.

Lithium ion Battery
A type of rechargeable battery which has a high power-time life for its size and is not subject to the memory effect as Nickel Cadmium batteries.

MB
Megabyte.

Megahertz
1,000,000 cycles per second.

Memory
A repository for data and applications which is readily accessible to your LifeBook notebook's CPU.

MHz
Megahertz.

N6210.book Page 79 Wednesday, May 18, 2005 10:24 AM

MIDI
Musical Instrument Digital Interface. A standard communication protocol for exchange of information between computers and sound producers such as synthesizers.

Modem
A contraction for MOdulator-DEModulator. The equipment which connects a computer or other data terminal to a communication line.

Monaural
A system using one channel to process sound from all sources.

MVA
Multi-Domain Vertical Alignment. A display technology that allows a wider viewing angle than traditional displays, similar to a CRT.

NTSC
National TV Standards Commission. The standard for TV broadcast and reception for the USA.

Operating System
A group of control programs that convert application commands, including driver programs, into the exact form required by a specific brand and model of microprocessor in order to produce the desired results from that particular equipment.

Parallel Port
A connection to another device through which data is transferred as a block of bits simultaneously with a wire for each bit in the block and with other wires only for control of the device not for transfer of data.

Partition
A block of space on a hard drive which is set aside and made to appear to the operating system as if it were a separate disk, and addressed by the operating system accordingly.

PCMCIA
PCMCIA is a trademark of the Personal Computer Memory Card International Association. The Personal Computer Memory Card International Association is an organization that sets standards for add-in cards for personal computers.

Peripheral Device
A piece of equipment which performs a specific function associated with but not integral to a computer. Examples: a printer, a modem, a CD-ROM.

Pitch (keyboard)
The distance between the centers of the letter keys of a keyboard.

Pixel
The smallest element of a display, a dot of color on your display screen. The more pixels per area the clearer your image will appear.

POST
Power On Self Test. A program which is part of the BIOS which checks the configuration and operating condition of your hardware whenever power is applied to your LifeBook notebook. Status and error messages may be displayed before the operating system is loaded. If the self test detects failures that are so serious that operation can not continue, the operating system will not be loaded.

Program
An integrated set of coded commands to your computers telling your hardware what to do and how and when to do it.

RAM
Random Access Memory. A hardware component of your LifeBook notebook that holds binary information (both program and data) as long as it has the proper power applied to it.

RAM Module
A printed circuit card with memory and associated circuitry which allows the user to add additional memory to the computer without special tools.

Reset
The act of reloading the operating system. A reset erases all information stored in RAM.

Restart
See Reset.

Resume
To proceed after interruption. In your LifeBook notebook this refers to returning to active operation after having been in one of the suspension states.

ROM
Read Only Memory. A form of memory in which information is stored by physically altering the material. Data stored in this way can not be changed by your LifeBook notebook and does not require power to maintain it.

SDRAM
Synchronous Dynamic Random Access Memory.

N6210.book Page 80 Wednesday, May 18, 2005 10:24 AM

Serial Port
A connection to another device through which data is transferred one bit at a time on a single wire with any other wires only for control of the device not for transfer of data.

Smart Card
Smart Cards are the same size and shape as credit cards, but they contain an integrated microprocessor chip. The chip can hold a variety of different information, and provides the user with many possible options, such as allowing them to make secure purchases, pay for phone calls, store security information, and provide personal identification and information.

SPDIF
Sony Philips Digital Interface Format. The optical digital audio format that allows you to download digital audio onto a MiniDisc recorder or connect to your sound system to play MP3 files with high fidelity sound.

SRAM
Static Random Access Memory. A specific technology of making RAM which does not require periodic data refreshing.

Status Indicator
A display which reports the condition of some portion of your hardware. On your LifeBook notebook this is an LCD screen just above the keyboard.

Stereo (audio)
A system using two channels to process sound from two different sources.

Stroke (keyboard)
The amount of travel of a key when it is pressed from resting to fully depressed.

Suspend
To make inoperative for a period of time. Your LifeBook notebook uses various suspension states to reduce power consumption and prolong the charge of your battery.

SVGA
Super VGA.

S-Video
Super Video. A component video system for driving a TV or computer monitor.

System Clock
An oscillator of fixed precise frequency which synchronizes the operation of the system and is counted to provide time of day and date.

TFT
Thin Film Transistor – A technology for flat display panels which uses a thin film matrix of transistors to control each pixel of the display screen individually.

UL
Underwriters Laboratories – An independent organization that tests and certifies the electrical safety of devices.

VGA
Video Graphics Array. A video display standard originally introduced by IBM with the PS/2 series of personal computers.

VRAM
Video Random Access Memory. A memory dedicated to video display data and control.

WFM
Wired for Management is Intel's broad-based initiative to reduce the total cost of ownership(TCO) of business computing without sacrificing power and flexibility.

Write Protect
Prevent alteration of the binary state of all bits in a storage media. Example: all information on a device such as a floppy diskette; a block of space in a storage media such as a partition of a hard drive; a file or directory of floppy diskette or hard drive.

XGA
Extended VGA.

N6210.book Page 81 Wednesday, May 18, 2005 10:24 AM

Regulatory Information

NOTICE

Changes or modifications not expressly approved by Fujitsu could void this user's authority to operate the equipment.

FCC NOTICES

Notice to Users of Radios and Television

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet that is on a different circuit than the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device.

Notice to Users of the US Telephone Network

This equipment (Modem Ambit T60M283.00) complies with Part 68 of FCC rules, and the requirements adopted by ACTA. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment; or a product identifier in the format US:AAAEQ##TXXXX. If requested, this information or number must be provided to the telephone company.

This equipment is designed to be connected to the telephone network or premises wiring using a standard jack type USOC RJ11C. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

The ringer equivalent number (REN) of this equipment is 0.1B. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 00 is a REN of 0.0). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please refer to the manual or contact Fujitsu Computer Systems Corporation, Customer Service. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

The equipment cannot be used on public coin service provided by the telephone company. Connection to party line service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information).

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this computer does not disable your alarm equipment. If you have any questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, and an identification of the business or other

N6210.book Page 82 Wednesday, May 18, 2005 10:24 AM

entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual.

DOC (INDUSTRY CANADA) NOTICES

Notice to Users of Radios and Television

This Class B digital apparatus meets all requirements of Canadian Interference-Causing Equipment Regulations. CET appareil numérique de la class B respecte toutes les exigence du Réglement sur le matérial brouilleur du Canada.

Notice to Users of the Canadian Telephone Network

NOTICE: This equipment (Ambit T60M283.00 Modem) meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Before connecting this equipment to a telephone line the user should ensure that it is permissible to connect this equipment to the local telecommunication facilities. The user should be aware that compliance with the certification standards does not prevent service degradation in some situations.

Repairs to telecommunication equipment should be made by a Canadian authorized maintenance facility. Any repairs or alterations not expressly approved by Fujitsu or any equipment failures may give the telecommunication company cause to request the user to disconnect the equipment from the telephone line.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

For safety, users should ensure that the electrical ground of the power utility, the telephone lines and the metallic water pipes are connected together. Users should NOT attempt to make such connections themselves but should contact the appropriate electric inspection authority or electrician. This may be particularly important in rural areas.

Avis Aux Utilisateurs Du Réseau Téléphonique Canadien

AVIS: Le présent matériel (Ambit T60M283.00 Modem) est conforme aux spécifications techniques d'Industrie Canada applicables au matériel terminal. Cette conformité est confirmée par le numéro d'enregistrement. Le sigle IC, placé devant le numéro d'enregistrement, signifie que l'enregistrement s'est effectué conformément à une déclaration de conformité et indique que les spécifications techniques d'Industrie Canada ont été respectées. Il n'implique pas qu'Industrie Canada a approuvé le matériel.

Avant de connecter cet équipement à une ligne téléphonique, l'utilisateur doit vérifier s'il est permis de connecter cet équipement aux installations de télécommunications locales. L'utilisateur est averti que même la conformité aux normes de certification ne peut dans certains cas empêcher la dégradation du service.

Les réparations de l'équipement de télécommunications doivent être eVectuées par un service de maintenance agréé au Canada. Toute réparation ou modification, qui n'est pas expressément approuvée par Fujitsu, ou toute défaillance de l'équipement peut entraîner la compagnie de télécommunications à exiger que l'utilisateur déconnecte l'équipement de la ligne téléphonique.

AVIS: L'indice d'équivalence de la sonnerie (IES) du présent matériel est de 0.3. L'IES assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

Pour assurer la sécurité, les utilisateurs doivent vérifier que la prise de terre du service d'électricité, les lignes télphoniques et les conduites d'eau métalliques sont connectées ensemble. Les utilisateurs NE doivent PAS tenter d'établir ces connexions eux-mêmes, mais doivent contacter les services d'inspection d'installations électriques appropriés ou un électricien. Ceci peut être particulièrement important en régions rurales.

N6210.book Page 83 Wednesday, May 18, 2005 10:24 AM

Appendix A

Integrated Wireless LAN* User's Guide

*Optional Device

N6210.book Page 84 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 85 Wednesday, May 18, 2005 10:24 AM

FCC REGULATORY INFORMATION

Please note the following regulatory information related to the optional wireless LAN device.

Regulatory Notes and Statements

Wireless LAN, Health and Authorization for use

Radio frequency electromagnetic energy is emitted from Wireless LAN devices. The energy levels of these emissions, however, are far much less than the electromagnetic energy emissions from wireless devices such as mobile phones. Wireless LAN devices are safe for use by consumers because they operate within the guidelines found in radio frequency safety standards and recommendations. The use of Wireless LAN devices may be restricted in some situations or environments, such as:

- On board an airplane, or
- In an explosive environment, or
- In situations where the interference risk to other devices or services is perceived or identified as harmful.

In cases in which the policy regarding use of Wireless LAN devices in specific environments is not clear (e.g., airports, hospitals, chemical/oil/gas industrial plants, private buildings), obtain authorization to use these devices prior to operating the equipment.

Regulatory Information/Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution or attachment of connecting cables and equipment other than those specified by the manufacturer. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. The manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failure to comply with these guidelines.

Federal Communications Commission statement

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause interference, and, (2) This device must accept any interference, including interference that may cause undesired operation of this device.

For operation within 5.15 ~ 5.25 GHz frequency range, it is restricted to indoor environments, and the antenna of this device must be integral.

FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and the receiver.
3. Connect the equipment to an outlet on a circuit different from the one the receiver is connected to.
4. Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure statement

This Wireless LAN radio device has been evaluated under FCC Bulletin OET 65C and found compliant with the requirements as set forth in CFR 47 Sections 2.1091, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices. The radiated output power of this Wireless LAN device is far below the FCC radio frequency exposure limits. Nevertheless, this device shall be used in such a manner that the potential for human contact during normal operation is minimized. When using this device, a certain separation distance between antenna and nearby persons must be maintained to ensure RF exposure compliance. In order to comply with RF exposure limits established in the ANSI C95.1 standards, the distance between the antennas and the user should not be less than 20 cm (8 inches).

Export restrictions

This product or software contains encryption code which may not be exported or transferred from the US or Canada without an approved US Department of Commerce export license. This device complies with Part 15 of FCC Rules., as well as ICES 003 B / NMB 003 B. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. Modifications not expressly authorized by Fujitsu Computer Systems Corporation may invalidate the user's right to operate this equipment.

Canadian Notice

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

High power radars are allocated as primary users of 5250 - 5350 MHz and 5650 - 5850 MHz and these radars could cause interference and/or damage to LELAN (license exempt LAN) devices operating in these bands.

N6210.book Page 86 Wednesday, May 18, 2005 10:24 AM

Before Using the Wireless LAN

This manual describes the procedures required to properly setup and configure the optional integrated Wireless LAN Mini-PCI device (referred to as "WLAN device" in the rest of the manual). Before using the WLAN device, read this manual carefully to ensure it's correct operation. Keep this manual in a safe place for future reference.

Wireless LAN Devices Covered by this Document

This document is applicable to systems containing the Intel PRO/Wireless WM3B2915ABG Network Connections (802.11a+b/g)

Characteristics of the WLAN Device

- The WLAN device is a Mini-PCI card attached to the main board of the mobile computer.
- The WLAN device operates in license-free RF bands, eliminating the need to procure an FCC operating license. The WLAN operates in the 2.4GHz Industrial, Scientific, and Medical (ISM) RF band and the lower, middle, and upper bands of the 5GHz Unlicensed National Information Infrastructure (UNII) bands.
- The Intel PRO/Wireless 2915ABG WLAN device is capable of three operating modes, IEEE802.11a, IEEE802.11b and IEEE802.11g.
- Encoding of data is modulated using Direct Sequence Spread Spectrum (DSSS) and Complementary Code Keying (CCK) when the WLAN device is operating in IEEE 802.11b mode and Orthogonal Frequency Division Multiplexing (OFDM) when operating in IEEE802.11a or IEEE802.11g mode.
- The WLAN device is Wi-Fi certified and operates at the maximum data transfer rate of 54 Mbps in IEEE802.11a or IEEE802.11g mode and 11 Mbps in IEEE802.11b mode.
- The maximum communication range indoors is approximately 80 feet (25 meters). However, that range will increase or decrease depending on factors such as number of walls, reflective material, or interference from external RF sources.
- The WLAN device supports the following encryption methods - WEP, TKIP, CKIP, and AES encryption.

WIRELESS LAN MODES USING THIS DEVICE

Ad Hoc Mode

(See Figure A-1) "Ad Hoc Mode" refers to a wireless network where wireless network connectivity between multiple computers is established without a central network device, typically known as Access Point(s). Connectivity is accomplished using only client devices in a peer-to-peer fashion. That is why Ad Hoc networks are also known as peer-to-peer networks. Ad Hoc networks are an easy and inexpensive method for establishing network connectivity between multiple computers.

Ad Hoc mode requires that the SSID (service set identifier), network authentication, and encryption key settings are identically configured on all computers in the Ad Hoc network.

Access Point (Infrastructure) Mode

(See Figure A-2) Infrastructure mode refers to a wireless network in which devices communicate with wireless or wired network devices by communicating through an Access Point. In infrastructure mode, wireless devices can communicate with each other or with a wired network. Corporate wireless networks operate in infrastructure mode because they require access to the wired LAN in order to access computers, devices, and services such as file servers, printers, and databases.

How to Handle This Device

The WLAN device comes pre-installed in your mobile computer. Under normal circumstances, it should not be necessary for you to remove or re-install it. The Operating System that your mobile computer comes with has been pre-configured to support the WLAN device.

Figure A-1. Ad Hoc Mode Network

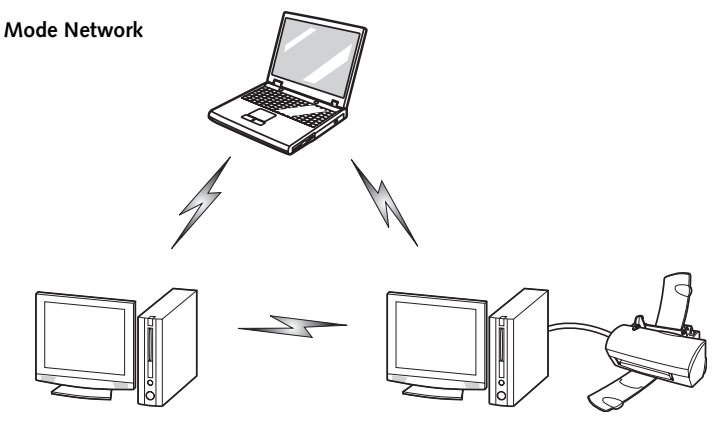

N6210.book Page 87 Wednesday, May 18, 2005 10:24 AM

WIRELESS NETWORK CONSIDERATIONS

- The WLAN device supports IEEE802.11a/b/g and operates in the 2.4GHz ISM band and the 5 GHz UNII bands.
- The maximum range of the WLAN device indoors is typically 80 feet (25 meters). Please note that the maximum range you achieve may be shorter or longer than 80 feet, depending on factors such as access point transmit power, number and density of obstructions, or external RF interference.
- Microwave ovens will interfere with the operation of WLAN device as microwave ovens operate in the same 2.4GHz frequency range that IEEE802.11b/g devices operate in. Interference by microwaves does not occur with IEEE802.11a radio which operates in the 5 GHz RF band.
- Wireless devices that transmit in the 2.4GHz frequency range may interfere with the operation of WLAN devices in IEEE802.11b/g modes. Symptoms of interference include reduced throughput, intermittent disconnects, and large amounts of frame errors. It is HIGHLY recommended that these interfering devices be powered off to ensure the proper operation of the WLAN device.

DEACTIVATING THE WLAN DEVICE

Deactivation using the Wireless On/Off Switch

The WLAN device can be deactivated quickly and efficiently by toggling the Wireless On/Off Switch to the Off position. *(Figure A-3)* The wireless On/Off switch has no effect on non-Wireless LAN models.

Figure A-2. Access Point (Infrastructure) Mode Network

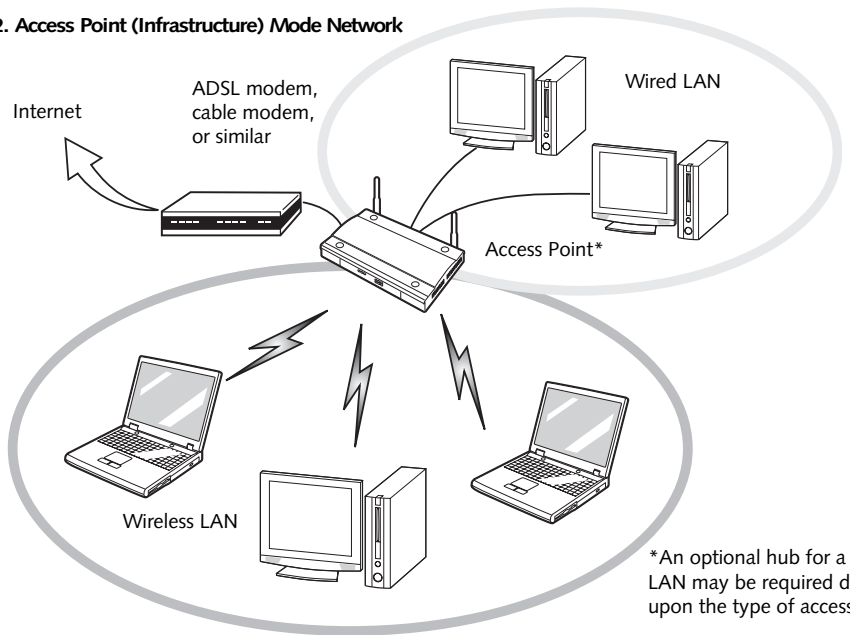

*An optional hub for a wired LAN may be required depending upon the type of access point used.

Deactivation using Intel PROSet for Wireless Utility

The WLAN device can be deactivated in Windows using the Intel PROSet for Wireless utility. The procedure to accomplish this:

1. Click [Start]-> [All Programs].
2. Select Intel ProSet Wireless, then click on Intel ProSet Wireless from the menu that appears. The Intel ProSet Wireless utility will be displayed.
3. At the bottom left corner of the window, select Wireless Off from the dropdown list.

ACTIVATING THE WLAN DEVICE

Activation of the WLAN device can be accomplished using the same methods as the deactivation process

- Using the Wireless On/Off Switch
- In Windows using the Intel PROSet for Wireless utility

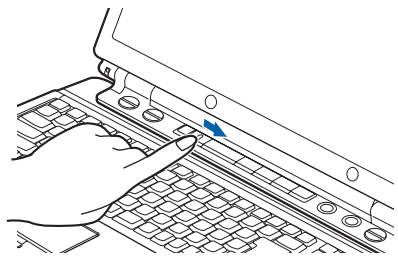

Figure A-3. Wireless LAN On/Off Switch Location

N6210.book Page 88 Wednesday, May 18, 2005 10:24 AM

Configuration of the WLAN Device

The WLAN device can be configured to establish wireless network connectivity using the Intel PROSet for Wireless utility. The Intel PROSet for Wireless utility allows for multiple profile setup and supports automatic profile switching. Support for most industry standard security solutions is contained in this software.

FLOW OF OPERATIONS

1. Activate the WLAN Device (See Activating the WLAN Device on page 87 for more information).
2. Configure the Wireless Network parameters (See Configuration Using Intel PROSet for Wireless Utility, below).
   - Enter the network name (SSID)
   - Choose the appropriate WLAN architecture (Ad Hoc or Infrastructure)
   - Choose Authentication method: Open, Shared, WPA-Enterprise, WPA2-Enterprise, WPA-Personal, or WPA2-Personal.
   - If using static WEP keys, enter static WEP key and choose key index.
3. Configure network settings
   - TCP/IP settings
   - Workgroup or Domain settings.

CONFIGURATION USING INTEL PROSET FOR WIRELESS UTILITY

This section explains the procedure to properly configure the WLAN device using the Intel PROSet for Wireless utility. Pre-defined parameters will be required for this procedure. Please consult with your network administrator for these parameters:

Network Name - Also known as the SSID

Network Key (WEP) - Required if using static WEP keys.

Authentication Type - Open, Shared, WPA, WPA-PSK

Procedure

1. Activate the WLAN device using either the Wireless On/Off Switch or the Intel PROSet for Wireless utility.
2. Click the [Start] button first and then [All Programs].
3. Click the icon [Intel PROSet Wireless] to execute the Intel PROSet for Wireless utility.
4. Click the [Add] button. The General Settings dialog displays.
5. Enter a profile name in the Profile Name field.
6. Enter the network SSID, in the Network Name (SSID) field.
7. Click Infrastructure or Ad Hoc for the operating mode.
8. Click [Advanced].
9. The Mandatory Access Point option is only used if Infrastructure mode is selected. Use this option to connect to a specific access point. Enter the MAC address for the access point. Click OK to save the setting and return to the General Settings page.
10. Click [Next].
11. If you wish to enable Cisco Compatible Extensions, click Cisco Options and check the "Enable Cisco Compatible Extensions" box.
12. To enable LEAP support, check the 802.1x option and choose LEAP from the pull-down list.
13. Click [OK].
14. Click Next.
15. Select Open, Shared, WPA-Enterprise, WPA2-Enterprise, WPA-Personal, or WPA2-Personal in the Network Authentication options.
16. Select either None, WEP, CKIP, or TKIP for the data encryption.
17. If WEP is selected, select either 64 or 128-bit for the Encryption Level.
18. Select the appropriate key index for your WLAN. The key index must be identical to the WEP key index used by the Access Point.
19. Enter the WEP key if required. If your network does not employ a 802.1x/EAP security mechanism, please skip to step 24.
20. Click the Enable 802.1x checkbox to enable the 802.1x security option. Please contact your network administrator if configuration of this setting is required.
21. Select the appropriate Authentication Type. Please contact your network administrator if configuration of this setting is required.
22. After selecting authentication type, enter the name, domain, and password of the user you have created

N6210.book Page 89 Wednesday, May 18, 2005 10:24 AM

on the authentication server. The user name and password do not have to be the same as name and password of your current Windows user login.

23. Click [OK] to save the settings.
24. From the Intel ProSet Wireless page, click the new profile name shown in the Profile List. Use the up and down arrows to position the priority of the new profile in the priority list.
25. Click the Connect button to connect to the network.

Click [Close] if you want to close the Intel(R) PROSet for Wireless window.

CONNECTION TO THE NETWORK

This section explains connection to the network.

If there is an administrator of the network, contact the network administrator for data settings.

Setting the network

Perform the "Setting TCP/IP" and "Confirming the computer and work group names" operations required for network connection.

Setting TCP/IP

To change the setting of the IP address, you need to be logged in from Windows as an administrator.

1. Click the [Start] button first and then [Control Panel].
2. If the Control Panel is in Category view, switch to Classic view by clicking "Switch to Classic View" under Control Panel the left frame. (If you are already in Classic view, "Switch to Category View" will be displayed.)
3. Double-click [Network Connections]. A list of currently installed networks will be displayed.
4. Right-click [Wireless Network Connection] in the list, and then click [Properties] in the menu displayed. The [Wireless Network Connection Properties] window will be displayed.
5. Click the [General] tab if it is not already selected.
6. Click [Internet Protocol (TCP/IP] and then click [Properties]. The [Internet Protocol (TCP/IP) Properties] window will be displayed.
7. Set the IP address as follows:
   - **For ad hoc connection**: Select [Use the following IP address:] and then enter data for [IP address] and [Subnet mask]. See page 95 for IP address setting.
   - **For access point (infrastructure) connection:** If your network uses DHCP, select [Obtain an IP address automatically] and [Obtain DNS server address automatically]. If your network uses static IP addresses, consult with your network administrator for the correct IP address settings.
8. Click the [OK] button. Processing will return to the [Wireless Network Connection Properties] window.
9. Click the [OK] button.
10. Close the [Network Connection] window.

Following this operation, confirm the names of the computer and the workgroup as follows.

Confirming the computer and work group names

To modify the computer name and/or the work group name, you need to be logged in from Windows as an administrator.

1. Click the [Start] button, then [Control Panel].
2. If the Control Panel is in Category view, switch to Classic view by clicking "Switch to Classic View" under Control Panel the left frame. (If you are already in Classic view, "Switch to Category View" will be displayed.)
3. Double-click the [System] icon. The [System Properties] window will be displayed.
4. Click the [Computer Name] tab.
5. Confirm the settings of [Full computer name:] and [Workgroup:].

   a. The setting of [Full computer name:] denotes the name for identifying the computer. Any name can be assigned for each personal computer.

To change the name, click [Change] and then proceed in accordance with the instruction messages displayed on the screen.

Enter the desired name in less than 15 ASCII character code format. Identifiability can be enhanced by entering the model number, the user name, and other factors.

   b. [Workgroup name] is the group name of the network. Enter the desired name in less than 15 ASCII character code format.

N6210.book Page 90 Wednesday, May 18, 2005 10:24 AM

For ad hoc connection: Assign the same network name to all personal computers existing on the network.

For access point (infrastructure) connection: Assign the name of the work group to be accessed.

6. Click the [OK] button. If a message is displayed that requests you to restart the personal computer, click [Yes] to restart the computer.

Setting the sharing function

Set the sharing function to make file and/or printer sharing with other network-connected personal computers valid.

This operation is not required unless the sharing function is to be used.

The folder and printer for which the sharing function has been set will be usable from any personal computer present on the network.

To share a file and/or the connected printer, you need to be logged in as an administrator.

Setting the Microsoft network-sharing service

1. Click the [Start] button first and then [Control Panel].
2. If the Control Panel is in Category view, switch to Classic view by clicking "Switch to Classic View" under Control Panel the left frame. (If you are already in Classic view, "Switch to Category View" will be displayed.)
3. Double-click [Network Connections]. A list of currently installed networks will be displayed.
4. Right-click [Wireless Network Connection] in the list, and then click [Properties] in the menu displayed. The [Wireless Network Connection Properties] window will be displayed.
5. **If [File and Printer Sharing for Microsoft Networks] is displayed, proceed to step 6**. If [File and Printer Sharing for Microsoft Networks] is not displayed, skip to step 7.
6. Make sure that the [File and Printer Sharing for Microsoft Networks] check box is checked, and then click the [OK] button. Skip to "Setting file-sharing function".
7. Click [Install]. The [Select Network Component Type] window will be displayed.
8. Click [Service], then click the [Add] button. The [Select Network Service] window will be displayed.
9. Click [File and Printer Sharing for Microsoft Networks] and then click the [OK] button. Processing will return to the [Wireless Network Connection Properties] window, and [File and Printer Sharing for Microsoft Networks] will be added to the list.
10. Click the [Close] button.

Setting the file-sharing function

The procedure for setting the file-sharing function follows, with the "work" folder in drive C: as an example.

1. Click the [Start] button first and then [My Computer].
2. Double-click [Local disk (C:)].
3. Right-click the "work" folder (or whichever folder you want to share), and then click [Sharing and Security...] in the menu displayed. The [*Folder Name* Properties] window will be displayed.

Setting the file-sharing function for the file which has been used to execute Network Setup Wizard is suggested on the screen. For the wireless LAN, however, since security is guaranteed by entry of the network name (SSID) and the network key, the steps to be taken to set the file-sharing function easily without using Network Setup Wizard are given below.

4. Click [Sharing] if it isn't already selected.
5. Click the link stating "If you understand the security risks, but want to share files without running the wizard, click here".
6. Click "Just enable file sharing" and click [OK].
7. Check the [Share this folder on the network] check box.

To specify the corresponding folder as a read-only folder, select the [Read only] checkbox under the General tab.

8. Click the [OK] button. The folder will be set as a sharable folder, and the display of the icon for the "work." folder will change.

Setting the printer-sharing function

1. Click the [Start] button first and then [Printers and FAX]. A list of connected printers will be displayed.
2. Right-click the printer for which the sharing function is to be set, and then click [Sharing] in the menu displayed. The property window corresponding to the selected printer will be displayed.

N6210.book Page 91 Wednesday, May 18, 2005 10:24 AM

Setting the printer-sharing function when Network Setup Wizard has been executed is suggested on the screen. For the wireless LAN, however, since security is guaranteed by entry of the network name (SSID) and the network key, the steps to be taken to set the printer-sharing function without using Network Setup Wizard are laid down below.

3. Click the [Sharing] tab.
4. Click [Share this printer].
5. Enter the sharing printer name in [Share name].
6. Click the [OK] button.

Confirming connection

After you have finished the network setup operations, access the folder whose sharing has been set for other personal computers. Also, confirm the status of the radio waves in case of trouble such as a network connection failure.

In the case of access point (infrastructure) connection, enter the necessary data for the access point before confirming connection. Refer to the manual of the access point for the access point setup procedure.

Connecting your personal computer to another personal computer

1. Click [Start] first and then [My Computer]. The [My Computer] window will be displayed in the left frame.
2. Click [My Network Places] in the "Other Places" list. The window [My Network Places] will be displayed.
3. Click [View workgroup computers] under Network Tasks in the left frame.
4. Double-click the personal computer to which your personal computer is to be connected. The folder that was specified in "Setting the file-sharing function" on page 90 will be displayed.
5. Double-click the folder to be accessed.

Confirming the status of the radio

1. Right-click the Intel PRO Wireless icon in the lower right corner of the screen.
2. Click [Open Intel PROSet for Wireless]. The Intel PROSet for Wireless window opens.
3. Contained within the General tab and the Details section (accessed by pressing the [Details] button), you will find the current operating status of the radio. (When the radio is turned off or the computer is not yet connected, some of the conditions will not be displayed.)

- **Profile Name**
  The current configuration profile is displayed.
- **Network Name (SSID)**
  Displays the Network Name (SSID) currently used by the radio.
- **IP Address**
  The IP address of the current profile.
- **Signal Quality**
  Displays a message stating the current quality of the signal.
- **Signal Strength**
  Displays a graphic representation of the current signal strength.

Additionally, in the lower section of the display, you will see a variety of different measurements related to the WLAN. For additional information about the items, click on the "Help?" button:

- Adapter MAC Address
- Band
- Supported Data Rates
- Radio Frequency
- Channel Number
- Network Authentication
- Data Encryption
- 802.1x Authentication Type
- 802.1x Authentication Protocol
- CCX Version
- CCX TPC
- CCX Power Levels
- Access Point MAC Address
- Mandatory Access Point

N6210.book Page 92 Wednesday, May 18, 2005 10:24 AM

Troubleshooting the WLAN

TROUBLESHOOTING TABLE

Causes and countermeasures for troubles you may encounter while using your wireless LAN are described in the following table.

Problem	Possible Cause	Possible Solution
Unavailable network connection	**Incorrect network name (SSID) or network key**	**Ad hoc connection:** verify that the network names (SSID's) and network keys (WEP) of all computers to be connected have been configured correctly. SSID's and WEP key values must be identical on each machine. **Access Point (Infrastructure) connection:** set the network name (SSID) and network key to the same values as those of the access point. Set the Network Authentication value identically to that of the Access Point. Please consult your network administrator for this value, if necessary.
	Weak received signal strength and/or link quality	Ad hoc connection: Retry connection after shortening the distance to the destination computer or removing any obstacles for better sight. Access Point (Infrastructure) connection: Retry connection after shortening the distance to the access point or removing any obstacles for better sight.
	The WLAN device has been deactivated or disabled	Check if the wireless switch is turned ON. Also verify "Disable Radio" is not checked in "Network setting" window.
	The computer to be connected is turned off	Check if the computer to be connected is turned ON.
	RF interference from Access Points or other wireless networks	The use of identical or overlapping RF channels can cause interference with the operation of the WLAN device. Change the channel of your Access Point to a channel that does not overlap with the interfering device.
	Wireless network authentication has failed	Re-check your Network Authentication, Encryption, and Security settings. Incorrectly configured security settings such as an incorrectly typed WEP key, a misconfigured LEAP username, or an incorrectly chosen authentication method will cause the LAN device to associate but not authenticate to the wireless network.
	Incorrectly configured network settings	Recheck the configuration of your network settings. For the method of checking, refer to the following page:·"Connection to the Network" on page 89.
	Incorrect IP address configuration	This only applies to networks using static IP addresses. Please contact your network administrator for the correct settings.

N6210.book Page 93 Wednesday, May 18, 2005 10:24 AM

Wireless LAN Glossary

GLOSSARY

Ad Hoc Mode

Ad Hoc Mode refers to a wireless network architecture where wireless network connectivity between multiple computers is established without a central wireless network device, typically known as Access Points. Connectivity is accomplished using only client devices in a peer-to-peer fashion. For details, refer to "Ad hoc connection" on page 86.

Channel

Range of narrow-band frequencies used by the WLAN device to transmit data. IEEE802.11b/g - 11 channels, 22 MHz wide channels.

DHCP (Dynamic Host Configuration Protocol)

A protocol that provides a means to dynamically allocate IP addresses to computers on a local area network.

DNS (Domain Name System)

A data query service that provides a mechanism with which to translate host names into Internet addresses.

IEEE802.11a

Wireless LAN standard that supports a maximum data rate of 54 Mbps. 802.11a devices operate in the 5 GHz lower and middle UNII bands.

IEEE802.11b

Wireless LAN standard that supports a maximum data rate of 11 Mbps. 802.11b devices operate in the 2.4 GHz ISM band.

Access point

Wireless network device used to bridge wireless and wired network traffic.

IP address

The logical 32-bit host address defined by the Internet Protocol that uniquely identifies a computer on a network. The IP address is usually expressed in dotted decimal notation.

LAN (Local Area Network)

A LAN or Local Area Network is a computer network (or data communications network) which is confined to a limited geographical area.

MAC address (Media Access Control Address)

A MAC address (also called an Ethernet address or IEEE MAC address) is the 48-bit address (typically written as twelve hexadecimal digits, 0 through 9 and A through F, or as six hexadecimal numbers separated by periods or colons, e.g., 0080002012ef, 0:80:0:2:20:ef) which uniquely identifies a computer that has an Ethernet interface.

MTU (Maximum Transmission Unit)

The maximum size of data which can be transmitted at one time in networks including the Internet. In an environment whose maximum size of data is too large to correctly receive data, normal communications can be restored by setting the size of MTU to a smaller value.

Network key

Data that is used for encrypting data in data communication. The personal computer uses the same network key both for data encryption and decryption, therefore, it is necessary to set the same network key as the other side of communication.

Network name (SSID: Service Set Identifier)

When a wireless LAN network is configured, grouping is performed to avoid interference or data theft. This grouping is performed with "Network name (SSID)". In order to improve security, the network key is set allowing no communication unless "Network name (SSID)" coincides with the network key.

Open system authentication

Null authentication method specified in the 802.11 standard that performs no authentication checks on a wireless client before allowing it to associate.

PPPoE (Point to Point Protocol over Ethernet)

A method of allowing the authentication protocol adopted in telephone line connection (PPP) to be used over an Ethernet.

Protocol

A procedure or rule of delivering data among computers. Ordered data communication is allowed by making all conditions required for communication including the method of data transmission/reception and actions upon communication errors into procedures.

N6210.book Page 94 Wednesday, May 18, 2005 10:24 AM

Shared key authentication

802.11 network authentication method in which the AP sends the client device a challenge text packet that the client must then encrypt with the correct WEP key and return to the AP. If the client has the wrong key or no key, authentication will fail and the client will not be allowed to associate with the AP. Shared key authentication is not considered secure, because a hacker who detects both the clear-text challenge and the same challenge encrypted with a WEP key can decipher the WEP key.

SSID (Service Set Identifier)

Service Set Identifier, a 32-character unique identifier attached to the header of packets sent over a WLAN that acts as a password when a mobile device tries to connect to the BSS. The SSID differentiates one WLAN from another, so all access points and all devices attempting to connect to a specific WLAN must use the same SSID. A device will not be permitted to join the BSS unless it can provide the unique SSID. Because the SSID is broadcast in plain text, it does not supply any security to the network.

Subnet mask

TCP-IP network is controlled by being divided into multiple smaller networks (subnets). IP address consists of the subnet address and the address of each computer. Subnet mask defines how many bits of IP address comprise the subnet address. The same value shall be set among computers communicating with each other.

TCP/IP (Transmission Control Protocol/Internet Protocol)

A standard protocol of the Internet.

Wi-Fi

Wi-Fi, or Wireless Fidelity, is a set of standards for wireless local area networks (WLAN) based on the IEEE 802.11 specifications. Certified products can use the official Wi-Fi logo, which indicates that the product is interoperable with any other product also showing that logo.

N6210.book Page 95 Wednesday, May 18, 2005 10:24 AM

IP address information

ABOUT IP ADDRESSES

IP addressing is much more complicated than can be briefly explained in this document. You are advised to consult with your network administrator for additional information.

If IP address is unknown, set IP address as follows,

or,

If you have an access point (DHCP server) on the network, set the IP address as follows:

[Obtain an IP address automatically]

A DHCP server is a server that automatically assigns IP addresses to computers or other devices in the network. There is no DHCP server for the AdHoc network.

If the IP address is already assigned to the computer in the network, ask the network administrator to check the IP address to be set for the computer.

If no access point is found in the network:

An IP address is expressed with four values in the range between 1 and 255.

Set the each computer as follows: The value in parentheses is a subnet mask.

<Example>

Computer A: 192.168.100.2 (255.255.255.0)

Computer B: 192.168.100.3 (255.255.255.0)

Computer C: 192.168.100.4 (255.255.255.0)

:

:

Computer X: 192.168.100.254 (255.255.255.0)

N6210.book Page 96 Wednesday, May 18, 2005 10:24 AM

Specifications

Item	Specification
Type of network	The Intel PRO/Wireless 2915ABG Network Connections WLAN device conforms to IEEE 802.11a and 802.11b/g (Wi-Fi based)*.
Transfer rate	(Automatic switching) IEEE 802.11a/g: 54 Mbps maximum data rate IEEE 802.11b: 11 Mbps maximum data rate
Active frequency	802.11b/g: 2400~2473 MHz 802.11a: 4900 ~ 5850 MHz
Number of channels	802.11a: 8 independent channels 802.11b/g: 11 channels, 3 non-overlapping channels
Security	Encryption Types - WEP, TKIP, AES** WPA 1.0 compliant Encryption Keylengths Supported: 64 bits and 128 bits 802.1x/EAP
Maximum recommended number of computers to be connected over wireless LAN (during ad hoc connection)	10 units or less ***

* "Wi-Fi based" indicates that the interconnectivity test of the organization which guarantees the interconnectivity of wireless LAN (Wi-Fi Alliance) has been passed.

** Encryption with network key (WEP) is performed using the above number of bits, however, users can set 40 bits/104 bits after subtracting the fixed length of 24 bits.

*** Depending on practical environments, the allowable number of computers to be connected may be decreased.

N6210.book Page 97 Wednesday, May 18, 2005 10:24 AM

Appendix B

TV Tuner*
User's Guide

* Optional Device

N6210.book Page 98 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 99 Wednesday, May 18, 2005 10:24 AM

TV Tuner User's Guide

This user's guide contains information on connecting the TV Tuner and using the related applications on your notebook. We strongly recommend that you read this guide before using the TV tuner.

This manual deals primarily with using Instant MyMedia with the TV Tuner. **For detailed information about the WinDVD and WinDVR applications, please see the associated Help files by opening the application, right-clicking on the application screen, then selecting Help from the dropdown menu.** Note that the WinDVD and WinDVR manuals are written generically, and some features may not apply to your TV Tuner.

Depending upon which application you employ, you can use the notebook to play media whether the notebook is booted up or not. If the notebook is not booted up (pre-boot) you can use Instant MyMedia. If the notebook is booted up (post-boot), you can use WinDVR, WinDVD, or Microsoft Media Player. The following table illustrates the capabilities of the applications.

TV TUNER APPLICATIONS

Purpose	(Pre-boot)	(Post-boot)
Watch television	Instant MyMedia (IM)	WinDVR
Record programs on DVD-RAM	IM	WinDVR
Record programs on DVD-R and DVD+/-RW discs	---	WinDVR
Record programs on the notebook's hard drive	IM	WinDVR
Watch videos from an external device	IM	WinDVR, WinDVD Creator
Listen to audio CDs	IM	Media Player
Watch commercial DVDs	IM	WinDVD
Play back programs recorded on a DVD	IM	WinDVD
Play back programs recorded on hard drive	IM	WinDVR, WinDVD

INTRODUCING THE TV TUNER

When you receive your notebook, the TV Tuner is pre-installed. Along with the TV Tuner, you should have received the following items:

- Remote Control
- AA Batteries (quantity: 2)
- Antenna Cable Adapter (Coaxial-to-75 ohm F-Type)
- TV Tuner Applications Disc
- Instant MyMedia Disc
- TV Tuner Getting Started Guide (this manual)

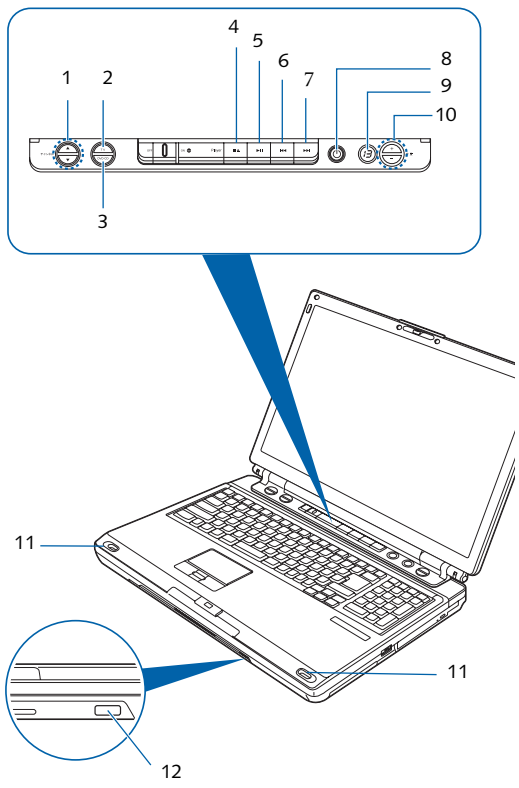

Figure B-1. TV Tuner and Features (Top/Front)

TV TUNER FEATURES

The TV Tuner can be run either with the remote control or using buttons located in the Fujitsu LifeBook Media Player Panel above the keyboard. The features of the Fujitsu LifeBook that are related to the TV Tuner, including Media Player Panel, are itemized in the table below.

Note that only features related to the TV Tuner are detailed in the following tables and illustrations; see the notebook User's Guide for information about other features.

N6210.book Page 100 Wednesday, May 18, 2005 10:24 AM

Top/Front Features

For top and front features related to the TV Tuner, refer to Figure B-1.

Item	Name	Description
1	**Channel**	This button is used to change the TV channels.
2	**TV**	When this button is pressed and the notebook has not been booted up, Instant MyMedia will be automatically activated, switching the notebook into TV mode. If the notebook is in DVD/CD or Video mode when the button is pressed, it will be switched into TV mode.
3	**DVD/CD**	When this button is pressed and the notebook has not been booted up, Instant MyMedia will be automatically activated, switching the notebook into DVD/CD mode. If the notebook is in TV or Video mode when the button is pressed, it will be switched into DVD/CD mode.
4	**Stop/Eject**	If this button is pressed while recording a DVD in TV mode, or while an audio CD or DVD video is being played, record/play will be stopped. If you press the button a second time, the media tray will be ejected so that you can remove the disc. If this button is pressed while video pictures on the hard disc are being played in video mode, play is stopped and a list of playable videos is displayed.
5	**Play/ Pause**	If you press this button while play has been stopped or paused in DVD/ CD or video mode, play will restart. If you press the button while a DVD or video is playing, play will stop temporarily.
6	**Back**	When you press this button while an audio CD or a DVD is being played in DVD/CD mode, the player will return to the previous track if the current track hasn't yet started. If the track has already started, you will return to the beginning of the current track.
7	**Next**	When you press this button while an audio CD or a DVD is being played in DVD/CD mode, the player will advance to the next track.
8	**Power/ Suspend/ Resume**	Used to turn the notebook on and off, to put the notebook into suspend mode, or to resume from suspend mode.
9	**Volume Level**	The current volume level is displayed. The volume levels range from 1 to 15.
10	**Volume Control**	Use this button to adjust the volume while watching or listening to a DVD/CD or TV. Press the upper half of the button ("+") to increase the volume, and the lower half ("-") to lower the volume.
11	**Stereo Speakers**	Speakers used for listening to output from TV, DVD, or CD. Note that in addition to the two stereo speakers, there is a subwoofer underneath the notebook which supplements the stereo speakers with bass tones to provide a true multi-range audio experience.
12	**Remote Control IR Port**	The Remote Control IR Port is used to receive signals from the TV Tuner remote control device. The remote control must be within line-of-sight of the IR port in order to function properly. Be sure not to obstruct the IR port when using the remote control.

N6210.book Page 101 Wednesday, May 18, 2005 10:24 AM

Left Side Features

For left side features related to the TV Tuner, refer to Figure B-2.

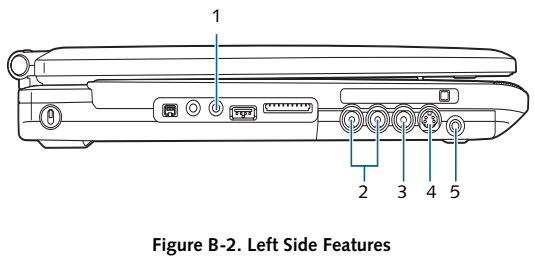

Figure B-2. Left Side Features

Item	Name	Description
1	**Headphone Jack**	Used to connect to commercially available headphones.
2	**Audio Input Jacks**	Used to connect to the audio output of external devices such as video decks or set top boxes.
3	**Video Input Jack (Composite)**	Used to connect to the video output port of external video devices. The image input from a device connected to this jack is displayed when "Composite" input is selected.
4	**S-Video Input Port**	Used to connect to the S-video output port of external video devices. The image input from a device connected to this jack is displayed when "S-Video" input is selected.
5	**Antenna Mini-Jack**	Used to connect a TV or cable TV antenna using the RF adapter cable included with the kit.

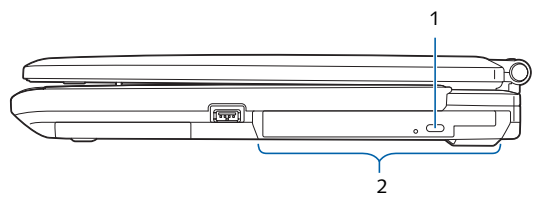

Figure B-3. Right Side Features

Right Side Features

For right side features related to the TV Tuner, refer to Figure B-3.

Item	Name	Description
1	**Media Tray Eject Button**	Used to eject the media tray so you can insert or remove a disc.
2	**Optical Drive**	Depending upon the configuration of your notebook, this drive can be used to play audio CDs, DVD videos, or to record a TV program on DVD-RAM, or DVD-R.

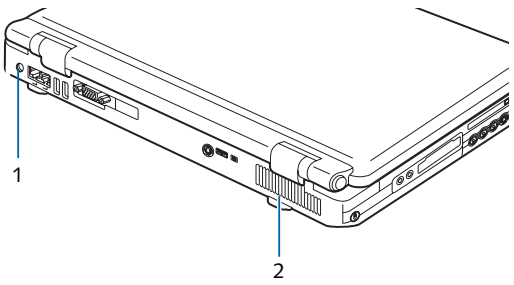

Figure B-4. Rear Panel Features

Rear Panel Features

For rear panel features related to the TV Tuner, refer to Figure B-4.

Item	Name	Description
1	**DC In Jack**	Used to connect the AC Adapter to the notebook.
2	**Air Vents**	The air vents allow the fan to draw in outside air to cool the notebook.

N6210.book Page 102 Wednesday, May 18, 2005 10:24 AM

REMOTE CONTROL FEATURES

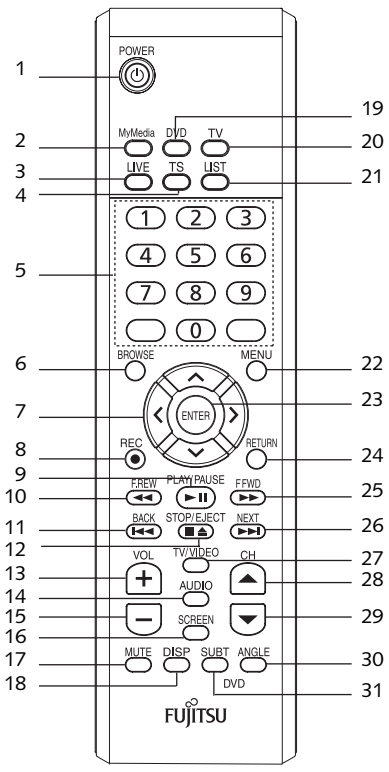

Figure B-5. Remote Control Layout

This section describes the buttons on the remote control device that came with your TV Tuner. For more information on the remote control, read this entire document. For features listed below, reference Figure B-5.

Item	Name	Description
1	**Power**	Pressing this button while media is running will terminate the media and power down the notebook. If the notebook is powered down, pressing this button will power it up.
2	**MyMedia**	If power to the notebook is off, pressing this button will activate Instant MyMedia and the main menu will be displayed. Note that this button is not active if the notebook has been booted up.
3	**Live**	This button is only used with the WinDVR application (post-boot). Pressing this button allows you to exit Time Shift (TS) mode.
4	**TS**	Time Shift (TS) allows you to pause a live TV broadcast while running WinDVR (post-boot)
5	**Numeric Pad**	Pressing the buttons while in TV mode allows you to select channels directly. Pressing the buttons while in CD/DVD mode allows you to move to the chapter that corresponds to the number pressed.
6	**Browse**	When using WinDVR, pressing the Browse button causes thumbnail images of all available channels to be arrayed on the screen.
7	**Cursor Move**	The cursor move buttons allow you to move the cursor Up, Down, Left, or Right.
8	**Record**	Pressing the Record button while you are in MyMedia TV mode will start the recording on DVD-RAM or hard drive. Pressing this button while in WinDVR (post-boot) allows you to record to the notebook's hard drive or any of the applicable disc media.
9	**Play/Pause**	If you press this button while play has been stopped or paused in DVD/CD or video mode, play will restart. If you press the button while a DVD or video is playing, play will stop temporarily.
10	**Fast Rewind**	When this button is pressed while a DVD or video is being played, the video pictures or audio are rewound. The button can be pressed repeatedly to increase the speed of the rewind.
11	**Back**	When you press this button while an audio CD or a DVD is being played in DVD/CD mode, the player will return to the previous track if the current track hasn't yet started. If the track has already started, you will return to the beginning of the current track.
12	**Stop/Eject**	If this button is pressed while recording a DVD or while an audio CD or DVD video is being played, record/play will be stopped. If you press the button a second time, the media tray will be ejected so that you can remove the disc. If pressed while video pictures on the hard disc are being played in video mode, play is stopped and a list of playable videos is displayed.
13	**Volume Up**	Pressing this button increases the volume.

N6210.book Page 103 Wednesday, May 18, 2005 10:24 AM

Item	Name	Description
14	**Audio Switch**	When you press the Audio Switch button while sound multiplex broadcasting is being watched in TV mode or a DVD video with multiple audio (i.e., multiple languages) is playing, the audio output is switched.
15	**Volume Down**	Pressing this button decreases the volume.
16	**Screen**	When using the WinDVR application, pressing this button toggles between full screen display and the Window size.
17	**Mute**	Pressing the Mute button disables the speakers temporarily. No audio is heard until you press the Mute button again.
18	**Display**	When pressed while in TV mode, the current channel will be displayed.
19	**DVD**	When this button is pressed and the notebook has not been booted up, Instant MyMedia will be automatically activated, switching the notebook into DVD/CD mode. If the notebook is in TV or Video mode when the button is pressed, it will be switched into DVD/CD mode.
20	**TV**	When this button is pressed, power to the notebook is deactivated, Instant MyMedia is activated, and the notebook is automatically switched to TV mode.
21	**List**	When using Instant MyMedia, press the List button to display a list of video files on the hard disk drive.
22	**Menu**	When using Instant MyMedia, press this button to view the menu screen while in TV or DVD/CD mode.
23	**Enter**	Used to choose selections and values from the main menu or the submenu screens.
24	**Return**	When in TV mode, pressing the Return button returns you to the previously viewed channel.
25	**Fast Forward**	When this button is pressed while a DVD or video is being played, the video pictures or audio will advance. The button can be pressed repeatedly to increase the speed of the advance.
26	**Next**	While playing media in DVD/CD mode, pressing this button will skip to the next track or chapter.
27	**TV/Video**	When pressed while in TV mode, display on the screen is switched. Each time the button is pressed, the displays cycle from TV to S-Video input to Composite Video.
28	**Channel Up**	If pressed while in TV mode, the channel will switch to the next higher channel.
29	**Channel Down**	If pressed while in TV mode, the channel will switch to the next lower channel.
30	**Angle**	When pressed while viewing a DVD for which there are multiple shooting angles, the angle will switch.
31	**Subtitle**	When pressed while viewing a DVD for which there are multiple subtitles, the subtitle will switch.

CONNECTING THE TV TUNER

Your TV Tuner and Instant MyMedia will work "out-of-the-box", but if you want to connect your notebook to an external device, follow the instructions in this section.

If you are connecting external devices to your notebook, be sure to read the instructions that accompany them before connecting them.

The following external devices can be connected to the notebook to work with Instant MyMedia:

- Image devices such as video decks and video cameras. These can be connected either with composite cables or S-Video cables.
- Audio devices can be connected via the video audio input jack on the notebook.

Connecting an Antenna

In order to receive television signals, you must first hook up an antenna to your notebook. An RF antenna adapter was included with the notebook for hooking up the antenna. Note that this requires an antenna (either cable or standalone) with a coaxial connection.

N6210.book Page 104 Wednesday, May 18, 2005 10:24 AM

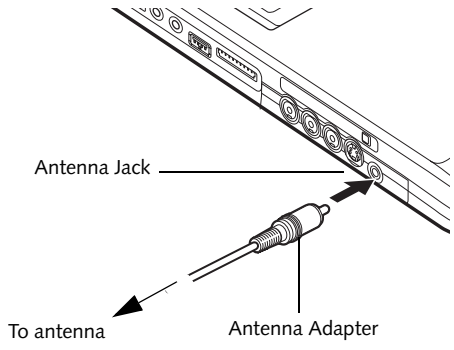

Figure B-6. Connecting the Antenna

To connect an antenna to your notebook:

1. Connect the wide coaxial connector end of the RF antenna adapter to the coaxial connector on the antenna (this includes cable TV antennas).
2. Connect the other end of the adapter to the antenna jack on the left side of the notebook, as shown in Figure B-6.

Connecting an External Audio Device

You can listen to media from an external device such as an external CD player by connecting it to your notebook. In order to connect an audio device, you will first need to purchase a standard RCA cable harness (red/white, max 1Vrms), as shown in Figure B-7.

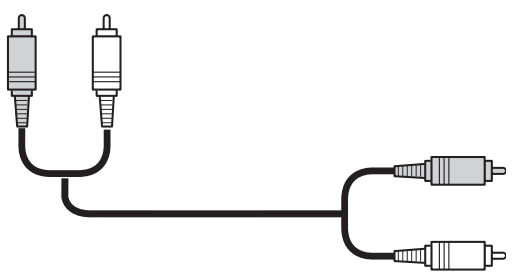

Figure B-7. Audio Cable

To connect the audio cable:

1. Connect the cable to the audio output jacks on the external device by matching the colors of the cable with the colors of the jacks.
2. Connect the cable to the audio input jacks on the notebook by matching the colors of the cable with the colors of the jacks (See Figure B-8).

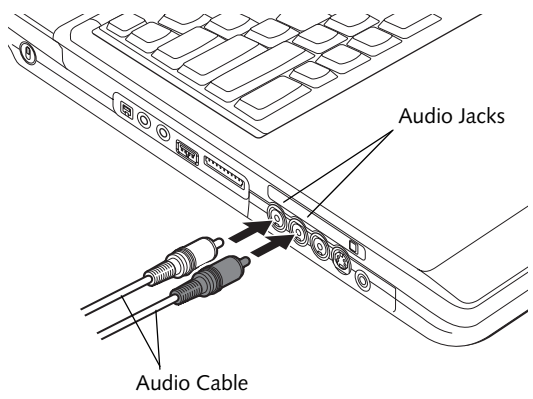

Figure B-8. Audio Input Connection

Connecting an External Video Device

You can view videos and images from an external device on your notebook. Depending upon the configuration of the device, you will need to purchase either a composite RCA video cable (Figure B-9) or an S-Video 4-pin cable (Figure B-11). You will also need to connect an audio cable, as described in "Connecting an External Audio Device" on page 104. The video cables use different ports, as described below.

Composite Video Cable Connection

Figure B-9. Composite Video Cable

To connect a composite video cable:

1. Connect the cable to the video output jack on the external device.
2. Connect the cable to the video input jack on the notebook (See Figure B-10).
3. Connect the audio cable between the external device and the notebook, as described in "Connecting an External Audio Device" on page 104.

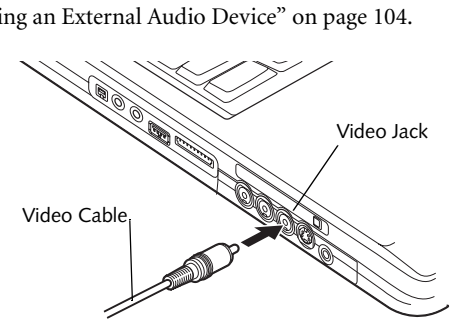

Figure B-10. Video Cable (Composite) Connection

N6210.book Page 105 Wednesday, May 18, 2005 10:24 AM

S-Video Cable Connection

Figure B-11. S-Video Cable

To connect an S-Video cable:

> The S-Video connector is keyed so that it can only be inserted when aligned properly with the port. Examine the orientation of the connector with the port before inserting it. Forcible insertion may damage the connector and/or port.

1. Connect the cable to the video output jack on the external device.
2. Connect the cable to the video input jack on the notebook (See Figure B-12).
3. Connect the audio cable between the external device and the notebook, as described in "Connecting an External Audio Device" on page 104.

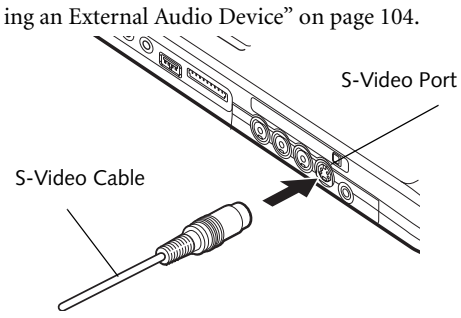

Figure B-12. S-Video Cable Connection

GETTING STARTED

When using Instant MyMedia for the first time, setup will begin automatically after Instant MyMedia is activated.

> When performing the installation, do not wear headphones initially; the volume may be greater than expected.

> Note that Instant MyMedia will cause the system to reboot twice during this installation procedure. If Instant MyMedia fails to start after following these steps, refer to the Troubleshooting section of this manual.

> Note that rebooting after installation of each application is not necessary, despite what on-screen prompts may state.

1. Verify that the system is not powered on, then press the MyMedia button on the remote control. During the first portion of the installation, the notebook will cycle through several screens as different portions of the installation take place. At the end of this portion, the notebook will turn off.
2. Verify that the power indicator is not lit.
3. Press the MyMedia button on the remote control again. The last portion of the installation will begin. At the completion of installation, the notebook will turn off.
4. Press the MyMedia button on the remote control again. The Instant MyMedia main menu will appear. Instant MyMedia is now ready to use.

SETTING UP/SKIPPING CHANNELS

Setting Up Channels

1. Press the MyMedia button on the remote control to display the main menu.
2. If it's not already selected, select TV with the cursor buttons, then press the [Enter] button on the remote control. Instant MyMedia enters TV mode.
3. Press the [Menu] button to display the menu.
4. Select Antenna or Cable, depending upon how your tuner is connected. Press [Enter].
5. In the left hand panel, select Favorite Channel List. To automatically assign a broadcast station to unassigned channels, set the selection to On.
6. Select Auto Scan with the cursor buttons, select Run, then press [Enter].
7. A channel search will begin. During the channel search, channels are switched one after another; this could take some time. Each time a channel search is performed, different channels may be detected due to changing reception conditions.

Skipping Channels

You can determine which detected channels are displayed and which are skipped using the remote control or the channel button on the notebook.

1. Press [Menu] button to display the menu. Select TV Channel using Cursor Move buttons.
2. Press the right-cursor move button to enter the list of channels. Select a channel and press the [Enter] button. Channels with a circle to the left are the channels that are set; they will not be skipped.

N6210.book Page 106 Wednesday, May 18, 2005 10:24 AM

3. If you want to skip a detected channel, select the channel you want to skip and press the [Enter] button. The circle will disappear, indicating that the channel will be skipped.

Channels can still be selected using the numbered buttons on the remote control, even if they have been selected to skip.

4. When you have finished setting the skip status of the channels, press the left-cursor button, select [Exit], and press the [Enter] button.

STARTING/CLOSING INSTANT MYMEDIA

Starting Instant MyMedia

1. Start Instant MyMedia by pressing MyMedia on the remote control.
2. Select the mode you want using the cursor buttons, then press the [Enter] button.

- **TV Mode**
  In TV mode, you can watch television, record the program you are watching on DVD, or watch videos from an external device connected to your notebook.
- **DVD/CD Mode**
  In DVD/CD mode, you can watch DVDs or listen to CDs.
- **Playback Mode**
  When in Playback mode, you can watch TV programs that have been recorded on the notebook hard disk and videos stored in the My Video folder.
- **PC Boot**
  PC Boot closes Instant MyMedia and boots up the notebook.

Starting with one button

When the notebook is powered off, you can start the TV mode by pressing the [TV] button on the remote control. Similarly, when the notebook is powered off, you can start the DVD/CD mode by pressing the [DVD] button on the remote control.

- **When the notebook is being used, Instant MyMedia cannot be activated.**
- When the Instant MyMedia main menu is displayed, the volume and [Mute] buttons on the remote control and the volume control button on the notebook cannot be used.

Exiting Instant MyMedia

1. Press the MyMedia button to display the main menu.
2. Select Power Off, then press the [Enter] button. Instant MyMedia will be terminated and the notebook will be powered off.

Pressing the notebook power button will also terminate Instant MyMedia and power off the notebook.

WATCHING TV AND EXTERNAL VIDEO WITHOUT BOOTING UP

Instant MyMedia allows you to watch television and view video from an external device without activating the notebook's operating system (also called "booting up" the notebook).

Watching Television

Switching to TV Mode

1. Display the main menu of Instant MyMedia ("Starting Instant MyMedia" on page 106).
2. Select TV using the cursor buttons on the remote control, then press the [Enter] button.

When Instant MyMedia is switched to TV mode with a DVD-RAM disc inserted in the notebook, a message confirming the initialization of the disc may be displayed. If this occurs, select [No], then press [OK]. If you select [Yes], all programs and data on the disc will be deleted.

3. If the TV is not selected, press the [TV/Video] button on the remote control to switch to TV mode. Each time the button is pressed, the input signals will cycle from TV -> S-Video -> Composite Video.

Selecting Channels

1. To select channels with the remote control, use the numeric buttons (0 - 9).
2. To select a channel, press the number of the channel. For channels above 9, press the sequence of buttons (e.g., channel 42: press [4] + [2]; channel 156: press [1] + [5] + [6].)
3. To select channels using the Channel Up and Channel Down buttons, press Channel Up for the next highest channel, or Channel Down for the next lowest. Note that if you have selected to skip certain channels (See "Skipping Channels" on page 105), they will be skipped when using the Channel Up and Down buttons.

N6210.book Page 107 Wednesday, May 18, 2005 10:24 AM

Adjusting the Volume

1. Use the [Vol +] and [Vol -] buttons on the remote control to increase and decrease the volume. Note that when changing the volume, the screen display may temporarily stop.
2. Adjust the volume to a comfortable level. Do not raise the volume to the point that the sound is distorted. Doing so could damage the speakers.

Muting the Volume

1. To mute the sound completely, press the [Mute] button on the remote control.
2. To un-mute the volume, press the [Mute] button again.

Changing Audio Mode

Audio mode is selected when sound multiplex broadcasting (such as bilingual broadcasts) is received through the TV input.

Press the [Audio] button on the remote control to select the audio mode you want. Each time the button is pressed, the audio will toggle between Mono-SAP, Mono-Main, and Stereo.

Watching Video from External Devices

1. Press the [TV/Video] button on the remote control. Each time the button is pressed, the input signals will cycle from TV -> S-Video -> Composite Video. Select the input type corresponding to the input port that is connected to the external device.
2. For instructions on operating the external device, refer to the manufacturer's user guide.

- The screen image may blink when playing videos on fast forward or fast reverse.
- The screen image may be distorted, depending upon the external device being used (e.g., video tapes, laserdiscs.)

COPYING FROM AN EXTERNAL DEVICE TO DVD

To copy video from an external device, such as a VCR or DVD player, perform the following steps:

Be aware that many videotapes and DVD discs are copy-protected to prevent duplication. Attempting to copy such media will be unsuccessful.

1. Connect the external device in accordance with "Connecting the TV tuner" on page 103.
2. Start Instant MyMedia by pressing the TV button on the remote control.
3. Insert a blank DVD-RAM disc in the notebook media player.
4. Press the TV/Video button on the remote control and select Composite or S-Video, depending upon which type of cable is connected to the external device. (See "Connecting the TV tuner" on page 103).
5. Insert the tape or disc in the external device and start playing it.
6. Press the [REC] button on the remote control. If it is not copy-protected, the program being viewed will be copied to the DVD-RAM in the notebook.

RECORDING TV PROGRAMS TO HDD

To record a TV program to your hard disk drive:

1. Push the Menu button in TV mode. The TV Settings menu will appear.
2. Using the cursor button, move the cursor to the bottom, then press the cursor button again. "Record Media" will appear.

N6210.book Page 108 Wednesday, May 18, 2005 10:24 AM

RECORDING TV PROGRAMS ON A DVD

This section describes how to record a TV broadcast on a DVD.

You are advised to run the system using the AC adapter when recording programs on a DVD in order to preserve battery power.

Usable Disc Formats

Depending upon whether you are using Instant MyMedia (pre-boot) to play or record, certain types of discs can and cannot be used. See the following table to determine appropriate formats.

Recording can be done with either Instant MyMedia (pre-boot) or WinDVR (post-boot). The following table reflects the capabilities of the Instant MyMedia application. For information of WinDVR, please refer to the electronic help file associated with the WinDVR application.

Disc Type	Play	Record
Audio CD	✓	---
CD-R	---	---
CR-RW	---	---
DVD Video (VCD)	✓ *	---
Dual-Layer DVD+R (8.4 GB)	✓	---
DVD-R (4.7 GB)**	✓	---
DVD-RW	✓	---
DVD+R	---	---
DVD+RW	✓	---
DVD-RAM	✓	✓ ***

* *Only DVDs with the correct region code can be used.*

** *DVD-Rs with a capacity of 3.95 GB cannot be used.*

*** *You may not be able to play DVD-RAMs recorded in Instant MyMedia on other DVD players.*

Before recording

Instant MyMedia can record the TV program being viewed on a DVD-RAM disc

- The procedures in this section assume that you are in TV mode.
- If in a pre-boot environment, you can only record to DVD-RAM discs.
- Instant MyMedia cannot record TV programs using a timer. For recording using the timer, refer to the WinDVR manual.

Initializing a DVD disc

If you use a new DVD-RAM disc or a DVD-RAM disc used in other applications, it must be initialized before recording.

If you want to record on a disc after deleting old programs recorded with Instant MyMedia, the disc must be initialized.

For double-sided DVD-RAM discs, initialize one side first, then the second side.

If data is written on a DVD-RAM disc, it will be deleted when the disc is initialized.

1. Insert the DVD-RAM disc you want to format into the notebook's multi-format drive.
   If a disc for PC data is installed, a message stating so will appear. Follow the instructions on the screen to format the disc.
2. Press the [MyMedia] button.
3. Using the cursor control buttons, select "Settings".
4. Select "Quick format" or "Full format" and press the [Enter] button. Formatting will start.

Perform "Full format" in the following cases:

- When Instant MyMedia does not identify the disc even though "Quick Format" has already been performed previously.
- When recording has failed
- When using a new disc
- When using a disc used in writing data on the notebook

It takes about 75 minutes for "Full Format."

N6210.book Page 109 Wednesday, May 18, 2005 10:24 AM

5. When formatting has been completed, recordable time for the disc is indicated. Note that the percentage indicator showing progress status may abruptly accelerate at around 80%. In this case, initialization may have terminated, but the disc has been initialized without any problem. During the initialization, all operations become ineffective.

Setting the recording mode

There are three different recording modes: High Quality, Good Quality, and Extended Play.

Recording Mode	Recording Time to DVD-RAM*	Quality
DVD HQ: High Quality	Approximately 1 hour	Best
DVD GQ: Good Quality	Approximately 2 hours	Better
DVD EP: Extended Play	Approximately 3 hours	Good

** For a 4.7 GB-capacity, single-sided DVD-RAM*

1. Press the [Menu] button to display the menu.
2. Move the cursor down to select "Recording modes".
3. Select the recording mode you like with the up and down cursor buttons and press the [Enter] button.

Recording TV programs

1. Display the channel to be recorded. See "Watching TV and External Video without Booting Up" on page 106
2. Insert a formatted DVD-RAM disc into the optical drive of the notebook. Wait until "Loading a disc..." disappears. You cannot start the recording until "Loading a disc..." disappears.
3. Press the [REC] button. Recording starts.

- During recording, buttons other than the [Stop/Eject] button of the remote controller, the Volume (+)/(-) buttons, or the [Stop/Eject] button and the volume adjusting button of the notebook become ineffective. When a setting time for an off-timer is reached during the recording, the off-timer will be canceled.
- Even if data is recorded on a dual-sided DVD-RAM, continuous recording on both sides of disc cannot be performed.

4. Press the Stop/Eject button on the remote control or the Stop/Eject button on the notebook when the recording has been completed. The notebook stops recording and the disc stops. When pressing the Stop/Eject button on the remote control or the Stop/Eject button on the notebook again, the tray emerges from the drive to eject the disc.

To play the recorded DVD, use the DVD/CD mode of Instant MyMedia. See "Playing CD/DVDs" on page 110

The notebook's DVD play mode can also be used to play the recording.

WATCHING RECORDED TV PROGRAMS OR VIDEOS

This section describes how to play TV programs that were recorded on the notebook's hard disk with WinDVR.

Playing TV programs or videos recorded on the notebook

1. Press the [MyMedia] button on the remote control to display the main menu.
2. Select "Playback" from the menu and press the [Enter] button.
3. Select the folder in which TV programs or videos to be played are stored and press the [Enter] button.
4. Select the TV program or video you want to play and press the [Enter] button. Three options are displayed: "Play", "Delete", and "Cancel". If "Play" is selected, the TV programs or videos selected start to play. If "Delete" is selected, the TV programs or videos selected are deleted.

Operations during play

- **Pause**

When you press the [Play/Pause] button on the remote control during the play, play is temporally stopped. When you press the [Play/Pause] button again, play is resumed. (The [Play/Pause] button on the notebook can also be used.)

- **Fast-forward/Rewind**

Forward can be performed if you press the [F.FWD] button, and rewind can be performed if you press the [F.REW] button during the play. Each time the button is pressed, the speed cycles through four stages. When you press the [Play/Pause] button, normal play speed is resumed.

Fast-Forward and Rewind speeds are double speed, x 4 speed, x 8 speed, x 20 speed.

Note that when playing back WMV files, only x5 speed is supported; AVI format is not supported, so it may not play back properly.

At double speed, audio is played along pictures; however, in some cases the sound may jump.

N6210.book Page 110 Wednesday, May 18, 2005 10:24 AM

• **Stop**

When the [Stop/Eject] button is pressed during the play, play is stopped, and the list of playable videos will appear.

The [Stop/Eject] button on the notebook can be used instead of the Stop/Eject button on the remote control.

• **Adjusting the volume**

The volume increases when the (+) button is pressed, while it decreases when the (-) button is pressed. Pressing the [Mute] button will temporarily turn off audio. Pressing it again turns audio back on.

The volume adjusting button of the main unit of the notebook can be used instead of the (+)/(-) button. The volume increases when the upper button is pressed, while it decreases when the lower button is pressed.

• **Changing the screen setting**

Adjusting the brightness, colors, and contrast of the screen, setting an off-timer, and changing screen types can be performed. See "Adjusting the Display Setting" on page 115".

PLAYING CD/DVDS

This section describes how to play an audio CD and a DVD video, and how to play TV programs recorded on a DVD in the TV mode.

Playing CDs

To play a CD, perform the following steps:

1. Press the [MyMedia] button to display the main menu.
2. Insert a CD disc you want to play into the optical drive of the notebook.
3. Select "DVD/CD" and press the [Enter] button.
4. The CD play screen appears and the first track automatically starts to play.

Operations during play

• **Pause**

When you press the [Play/Pause] button while a CD is playing, play is temporarily stopped. When you press the button again, play is resumed.

The [Play/Pause] button on the notebook can be used instead of the Play/Pause button on the remote control.

• **Fast-Forward/Rewind**

Forward can be performed if you press [F.FWD], and rewind can be performed if you press [F.REW] during the play. Each time the button is pressed, the speed cycles through four stages. When you press the [Play/Pause] button, normal play speed is resumed.

Fast-Forward and rewind speeds are double speed, x 4 speed, x 8 speed, x 20 speed.

• **Track skip**

When you press the [Next] button during the play, the track being played is skipped and the head of the next track is started to play. If you press the [Back] button immediately after a track is started to play, the play position is returned to a track one before that track to play. If you press the [Back] button 10 seconds or more after the play is started, a track one before that track is started to play.

The [Back] button of the notebook can be used instead of the [Back] button on the remote control.

The [Next] button on the notebook can be used instead of the [Next] button on the remote control.

• **Stop/Eject**

When you press the [Stop/Eject] button during the play of a CD, play is temporarily stopped. When pressing the [Stop/Eject] button again in this condition, the tray slightly comes up out of the super multi-drive to eject the CD.

The [Stop/Eject] button on the notebook can be used instead of the [Stop/Eject] button on the remote control.

• **Adjusting the volume**

When the (+) button is pressed, the volume increases, while the (-) button is pressed, it decreases.

Pressing the [Mute] button temporarily turns off audio. Pressing it again turns audio back on.

The volume adjusting button on the notebook can be used instead of the (+)/(-) button. When the upper button is pressed, the volume increases, while the lower button is pressed, it decreases.

Adjust the volume so that the sound from the speaker is not distorted. Failure to do so could result in damage to the speaker.

Playing DVDs

1. Press the [MyMedia] button to display the main menu.
2. Insert the DVD you want to play into the optical drive of the notebook. Refer to the notebook user's guide for additional information on using the optical drive and caring for discs.

N6210.book Page 111 Wednesday, May 18, 2005 10:24 AM

3. Select "DVD/CD" from the menu and press the [Enter] button. The DVD will start playing automatically.

When playing a DVD that you were watching earlier, it will start to play from the position determined by the Auto Resume setting. See "Changing the play settings for DVDs" on page 112.

When "Start from beginning" is set, the disc will always restart at the beginning. When "Start from last position" is set, the disc will start playing at the location where it previously stopped. See "Changing the play settings for DVDs" on page 112

If you want to play a DVD having a region codes different from the present one, a message is displayed showing that play is not performed, or a warning screen appears. If you want to play this DVD, eject the disc and change the setting of region codes. When a message is displayed, press [Enter] to get rid of the message, and perform the above operation for changing a region code.

Operations during play

- **Pause**

When you press the [Play/Pause] button during the play, play is temporarily stopped. When you press the button again, play resumes.

The [Play/Pause] button on the notebook can be used instead of the Play/Pause button on the remote control.

Fast-Forward and Rewind speeds are double speed, x 4 speed, x 8 speed, x 20 speed.

At double speed, audio is played along with pictures; however, in some cases the sound may jump.

- **Fast-forward/Rewind**

Forward can be performed if you press the [F.FWD] button, and rewind can be performed if you press the [F.REW] button during play. Each time the button is pressed, the speed switches at four stages. When you press the [Play/Pause] button, normal play is resumed.

- **Transfer of Chapter**

If multiple chapters are set to a DVD, the chapter being played is skipped and the head of the next chapter is started to play when you press the [Next] button during the play.

If you press the [Back] button immediately after that Chapter has started to play, the play position is returned to the first chapter before that track to play. If you press the [Back] button 10 seconds or more after the play is started, the track before that track starts to play.

The [Back] button on the notebook can be used instead of the [Back] button on the remote control.

The [Next] button on the main unit on the notebook can be used instead of the [Next] button on the remote control.

- **Stop/Eject**

When you press the [Stop/Eject] button during the play, play is temporarily stopped. Pressing [Stop/Eject] again causes the tray to eject slightly from the optical drive to eject the disc.

The [Stop/Eject] button on the notebook can be used instead of the [Stop/Eject] button on the remote control.

- **Changing angles**

Pressing the [Angle] button if multiple angles are set to a DVD, the next angle switched is displayed. If only one kind of angles is set to the DVD being played, the angle is not switched.

- **Changing audio**

When pressing the [Audio] button if multiple audio types are set to a DVD, the next audio type is displayed. If only one kind of audio is set to the DVD being played, the audio is not switched.

- **Changing captions**

If you press the [Subt] button if multiple caption types are set to a DVD, the next caption type is displayed. If only one kind of caption is set to the DVD being played, caption is not switched.

- **Stop/Eject**

When you press the [Stop/Eject] button during DVD play, play is temporarily stopped. Pressing the [Stop/Eject] button again causes the tray to emerge slightly to eject the DVD.

The [Stop/Eject] button on the notebook can be used instead of the [Stop/Eject] button on the remote control.

- **Adjusting the volume**

The volume increases when the (+) button is pressed, while it decreases when the (-) button is pressed. Pressing the [Mute] button will temporarily turn off audio. Pressing it again allows audio to come out.

The volume adjusting button of the main unit of the notebook can be used instead of the +/- buttons. When the upper button is pressed, the volume increases, while when the lower button is pressed, it decreases.

Adjust the volume so that the sound from the speaker is not distorted. Failure to do so could result in damage to the speaker.

N6210.book Page 112 Wednesday, May 18, 2005 10:24 AM

- **Changing the screen setting**

Adjusting the brightness, colors, and contrast of the screen, setting an off-timer, and changing screen types can be performed. See "Adjusting the display quality" on page 113.

Using the DVD menu

Some discs may have special menus. With such DVDs, the disc can be operated by reading its special menu from the menu screen.

Some DVDs may automatically display the title menu when set, but there may be some cases which are not operated by the remote controller even if the title menu is displayed. In this case, read the title menu from the menu screen by following the steps below.

1. Press the [Menu] button and select Menu from the screen.
2. Select "Root menu" or "Title menu" and press the [Enter] button. The menu screen unique to the disc is displayed.

Playing the TV programs or videos recorded on a DVD

Playing TV programs recorded by Instant MyMedia

DVDs on which TV programs were recorded in Instant MyMedia, can be played in the DVD/CD mode in the same way as commercially available DVDs. See "Playing DVDs" on page 110.

Playing TV programs or videos recorded on other DVD recorders

DVDs recorded in a DVD video format can be played. See"Playing DVDs" on page 110.

DVD discs on which digital broadcasts are recorded cannot be played.

Changing the play settings for DVDs

The status of DVDs to play may be determined by the intention of software designers. In that case, functions may not work as operated, because Instant MyMedia is played according to the contents of the disc which the software designer intended. Refer to the instruction manual for the DVD to be played.

Changing the region code

Each playable region code is set to each DVD, so it cannot be played if this code is not matched with the region code of playing devices.

If you want to play DVDs with different region codes, the region code of Instant MyMedia can be changed.

- The change to the region code can be made up to 4 times including changes to "WinDVD" and "WinDVR" on the notebook. When changes to the region code are made 4 times, the code is fixed to the last one, disabling DVDs having other region codes to be played. Note that there is no way to change the fixed region code.
- Region codes can't be changed while playing DVDs. Press [Stop/Eject] first.

1. Press the [Menu] button to display the menu.
2. Confirm the current region code. The item with a "O" attached on the left side is the region code that is currently set.
3. Select a new region and press the [Enter] button. Only the DVDs having the region code newly set can be played.

Setting the play start position

Set the position for starting the play of DVDs.

1. Press the [Menu] button to display the menu and select Auto Resume from the list.
2. In the right column, select the setting you would like and press the [Enter] button.
   Start from the beginning: Play from the start of the disc regardless of the position where it was previously stopped.
   Start from last position: Play from the position where the disc was previously stopped.

The change to the setting of auto resume becomes effective after the notebook has been powered off.

Changing a language used in audio and captions

Audio and captions can be selected from multiple languages depending on the DVD. To change a language for audio/captions during the play, use the [Audio] button on the remote control.

1. Press the [Menu] button to display the menu and select Audio Language or Subtitle Language from the list. The language for audio can be changed if the "Audio Language" is selected, and the language for captions can be changed if the "Subtitle Language" is selected.

N6210.book Page 113 Wednesday, May 18, 2005 10:24 AM

2. Select a language you would like from the right column and press the [Enter] button.

> The change to the setting of audio languages and subtitle languages becomes effective after the notebook has been powered off.

Using bookmarks

Scenes that you like can be recorded in bookmarks and DVDs can be played from the recorded points.

- **Recording Bookmarks**

1. Pause at the scene to be recorded by pressing the [Play/Pause] button.
2. Press the [Menu] button to display the menu and select Menu from the list.
3. Select "Bookmark" in the right column and press the [Enter] button.
4. Select "Add Bookmark" and press the [Enter] button.

- **Selecting a bookmark**

1. Press the [Menu] button and select "Menu".
2. Select "Bookmark" and press the [Enter] button.
3. Select a bookmark you want to read and press the [Enter] button. Pressing the [Enter] button after selecting "Preview" enables you to view thumbnails of the scenes bookmarked.
4. Select the scene you would like to view and press the [Enter] button. Play is started from the position of the bookmark.
5. Select "Delete" and press the [Enter] button to delete the bookmark.

Changing the setting to Karaoke

Some DVDs can delete only vocal parts from the track and play it as Karaoke. With DVDs like this, the presence and absence of vocals can be selected.

- **Changing the setting to the presence of vocal:**

1. Press the [Menu] button.
2. Select the Vocal option you prefer and press the [Enter] button.

Adjusting the display quality

The brightness, colors, and contrast of the screen can be adjusted as you like. See "Adjusting the display quality" on page 115 for details.

Changing the parental lock settings

Parental lock levels may be set for the DVD player as well as for the television. The DVD player setting is determined by the movie's rating; the TV settings are determined by the V-Chip standards. Registering passwords and setting parental lock levels prevents children from seeing violent or adult scenes.

Protection levels and passwords cannot be changed during the play of DVDs. Press the [Stop/Eject] button to operate.

DVD/Movie Standards

G: General Audiences. All Ages Admitted
Contains nothing which would, in the view of the rating board, be offensive to parents whose younger children view the film.

PG: Parental Guidance Suggested. Some Material May Not Be Suitable For Children
This is a film which clearly needs to be examined by parents before they let their children watch. The label PG indicates that some parents may consider some material unsuitable for their children, but the parent must make the decision.

PG-13: Parents Strongly Cautioned. May Be Inappropriate For Children Under 13
PG-13 is a stronger warning to parents to determine the viewing by their younger children, since some material might not be suited for them.

R: Restricted. Under 17 Requires Accompanying Parent Or Adult Guardian
In the opinion of the rating board, this film contains some adult material and parents are urged to find out more about this film before they allow their children to view it.

NC-17: No One 17 And Under Admitted
This rating declares that the Rating Board believes that this is a film that most parents will consider too adult for their youngsters under 17. No children should be allowed to view an NC-17 film. The reasons for an NC-17 rating can be violence, sex, aberrational behavior, drug abuse, or any other element which most parents would consider too strong for viewing by their children.

Television V-Chip Standards

TV-Y (All Children. This program is designed to be appropriate for all children.) Whether animated or live-action, the themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6. This program is not expected to frighten younger children.

TV-Y7 (Directed to Older Children. This program is designed for children age 7 and above.) May be more

N6210.book Page 114 Wednesday, May 18, 2005 10:24 AM

appropriate for children who have acquired the developmental skills needed to distinguish between make-believe and reality. Themes and elements in this program may include mild fantasy or comedic violence, or may frighten children under the age of 7. Therefore, parents may wish to consider the suitability of this program for their very young children.

TV-Y7-FV (For those programs where fantasy violence may be more intense or more combative than other programs in this category.

For programs designed for the entire audience, the general categories are:

TV-G (General Audience. Most parents would find this program suitable for all ages.) Although this rating does not signify a program designed specifically for children, most parents may let younger children watch this program unattended.

TV-PG (Parental Guidance Suggested. This program contains material that parents may find unsuitable for younger children.) Many parents may want to watch it with their younger children. The theme itself may call for parental guidance or the program contains one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV-14 (Parents Strongly Cautioned. This program contains some material that many parents would find unsuitable for children under 14 years of age.) Parents are urged to exercise greater care in monitoring this program and are cautioned against letting children under the age of 14 watch unattended. This program contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialogue (D).

TV-MA (Mature Audience Only. This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) This program contains one or more of the following: graphic violence (V), explicit sexual activity (S), or crude indecent language (L).

Setting the parental lock for TV mode

1. While in TV mode, press the [MyMedia] button, select "Settings", then press the [Enter] button. Select the Parental Control tab and press the [Enter] button.
2. If you have already set a password, go to Password Change and enter the password in Input Password. Press the [Enter] button.
3. If you have not yet set a password, select "Password change" and select "New password" and press the [Enter] button.
4. Input a password with the (1)-(9) buttons and press the [Enter] button.
5. Select "Confirm new password", enter the password again, and press the [Enter] button. If the passwords entered in the two steps do not match each other, you will receive a message. Press the [Enter] button to erase the message, then start again.
6. Once the password has been successfully entered, press the [Enter] button. A password is set, making the parental lock effective. After this, to cancel the parental lock or change the protection levels, this password is required.
7. Select "Level change" and select the level you would like. An "X" indicates that a level is unlocked. To lock a level, highlight the desired box and press the [Enter] key. The symbol will change from "X" to "\/", indicating that the level is locked.
8. Select "Exit" and press the [Enter] button.

> Instant MyMedia does not support the DVDs that have been set to enter a password at the time of play. When playing these DVD-s, set the parental level of Instant MyMedia to "Disabled."

Changing a password

The password necessary for changing the parental lock level can be changed.

1. Press the [Menu] button to display the menu and select "Parental Control".
2. Select "Password change". When "****" is displayed in the column, an effective password has already been entered.
3. If a password has not been selected, select "Input password" and press the [Enter] button.
4. Input password with the (1)-(9) buttons of the remote control and press the [Enter] button.
   —The password entered here is effective until the menu screen is closed.
   —If a wrong password is entered, a message is displayed. Press the [Enter] button to erase the message, then proceed again from Step 1.
5. Select the "New password" and press the [Enter] button.
6. Input a new password with the (1)-(9) buttons of the remote control and press the [Enter] button.
7. Select "Confirm new password" and press the [Enter] button.

N6210.book Page 115 Wednesday, May 18, 2005 10:24 AM

8. Input a new password again with the (1)-(9) buttons of the remote control and press the [Enter] button. The password is changed. After this, the new password is required to change the parental lock level. If the passwords entered in the two steps do not match, a message is displayed. Press the [Enter] button to erase the message, then return to step 1.
9. Press the [Enter] button to erase the message.

ADJUSTING THE DISPLAY SETTING

This section describes how to adjust the setting of display quality when watching TV, a DVD, or a video, how to change screen types, and how to set an off-timer.

Changing display types

When you display pictures of vertically and horizontally different sizes from the LCD display of this notebook, display types can be selected.

Display Type	Display Method
Normal	Displays the image so that the vertical edges of the picture can be seen. When a picture is entered with a screen ratio of 4:3, a black strip is displayed on the left and right corners of the screen.
Pan & Scan	The picture is enlarged so the left and right edges extend to the screen edges. When the picture is displayed with a 4:3 screen ratio, the vertical sides are cut.

1. Press the [Menu] button to display the menu and select “Display Type”.
2. Select the screen type you like and press the [Enter] button.

Setting the Timer

With use of the timer, Instant MyMedia can be automatically terminated and the power to this notebook is turned off when the set time has been reached.

The timer can be set to one, two, or three hours.

1. Press the [Menu] button to display the menu and select “Off-timer”.
2. Select the duration for the power to be turned off and press the [Enter] button. The off-timer is set and the menu screen disappears.

—To change the setting to the off-timer, perform the same steps again.

—To cancel the off-timer, select “Disable”.

3. When the time specified has elapsed, Instant MyMedia is automatically terminated, powering off the notebook.

When DVD recording is being performed when the power is turned off using the off-timer, the off-timer is canceled, and the recording continues. When Instant MyMedia is terminated before the setting time, the off-timer is canceled.

Adjusting the display quality

The brightness and colors of the picture can be adjusted as you like. Each video adjustment is applied to all TV, DVD/CD and video play modes. The setting cannot be changed by each mode.

1. Press the [Menu] button to display the menu and select “Video Adjust”.
2. Select an item you would like to adjust from “Brightness,” “Hue” or “Contrast” (TV mode) or “Brightness,” “Color1” or “Color2” (DVD mode) and press the [Enter] button. A bar is indicated below the screen.
3. Adjust to a value you like using the up and down cursor buttons.

Returning to the initial state

The following procedure returns the display to the state it was in when purchased.

1. Press the [Menu] button to display the menu and select “Video Adjust”.
2. Select “Reset to default setting” and press the [Enter] button.

N6210.book Page 116 Wednesday, May 18, 2005 10:24 AM

TROUBLESHOOTING AND RECOVERY

Troubleshooting

Read this section if you encounter problems during the operation of this notebook. This section lists questions most frequently asked about troubles, and answers to each question that include causes and remedies.

If problems are not resolved, contact Fujitsu Computer Systems Service and Support. See "Technical Support" on page 120 for more information.

Symptom	Possible Cause	Remedies	Reference
The screen does not appear			
The power supply indicator does not light	The AC adapter is not connected properly.	Connect the AC adapter properly.	Refer to your notebook's user guide.
	The power supply is turned off	Turn on the power to the notebook.	Refer to your notebook's user guide.
The power supply indicator light blue.	Power to the device connected to the video input port is turned off.	Turn on the device.	See manufacturer's instructions.
	The video cable or the S-Video cable are not properly connected.	Properly connect the video cable or S-Video cable.	"Connecting the TV tuner" on page 103
The screen image is distorted			
Light or dark dots are displayed.	This is a characteristic of the LCD display, and is not a problem.	---	---
TV broadcast does not work.	The antenna cable is not connected properly.	Connect the antenna cable correctly.	"Connecting an Antenna" on page 103
	Channels are not set.	Set the channels.	"Setting Up/Skipping Channels" on page 105
TV broadcast pictures are not clear	The antenna cable is not connected properly.	Connect the antenna cable correctly.	"Connecting an Antenna" on page 103
The TV image appears as double or triple images	Objects in the environment (e.g., buildings or mountains) could have an influence on broadcast quality.	Adjust the position and direction of the antenna.	---
Stripes and dots appear during the TV broadcast.	The image can be affected by high-voltage cables, automobiles, or electric appliances like hair dryers.	Change the location of the notebook.	---
DVDs cannot be played or the DVD picture is distorted.	The disc is upside down.	Check the orientation of the disc.	---
	The disc is dirty.	Gently wipe off the disc.	---
	The disc is scratched or warped.	Do not use the disc.	---
Audio does not come on, or doesn't sound right			
No sound comes out of the speakers	The speaker settings are turned off.	Press the [Mute] button on the remote control.	"Remote Control Features" on page 102
	The volume is set too low.	Adjust the volume with the volume button on the remote control.	"Remote Control Features" on page 102
	Headphones are connected to the notebook.	The notebook's speakers are disabled when headphones are plugged in. Unplug the headphones.	"Left Side Features" on page 101
	The audio cable for video input is not connected.	Connect the audio cable properly.	"Connecting an External Audio Device" on page 104
Noise comes out of the speakers	Devices such as cell phones that generate radio waves are being used near the notebook.	Use the interfering device away from the notebook.	---

N6210.book Page 117 Wednesday, May 18, 2005 10:24 AM

Symptom	Possible Cause	Remedies	Reference
Noise momentarily switches while channels are changed.	The channels being selected cannot be received.	Select other channels.	"Setting Up/Skipping Channels" on page 105
Certain procedures don't work properly			
The remote control doesn't work	The remote control batteries are dead.	Change the batteries.	---
	The battery polarities (+, -) in the remote control are reversed.	Insert the batteries properly.	---
	AC adapter for the notebook is not connected properly.	Properly connect the AC adapter.	Refer to your notebook's user guide.
	Strong irradiated light from fluorescent lamps are exposed to the IR port.	Change the orientation or location of the notebook.	---
	The signals from the remote control do not reach the IR port on the notebook.	Position the remote control so it is in line-of-sight of the IR port.	"Top/Front Features" on page 100
When you attempt to start Instant MyMedia, the notebook starts instead	The notebook is in Standby mode.	Power down the notebook.	Refer to your notebook's user guide.
	The BIOS setting for Instant MyMedia is disabled.	Change the BIOS setting of Instant MyMedia.	Refer to your notebook's user guide.
Only certain remote control buttons respond	TV broadcasts are being recorded.	During recording, most buttons are disabled, with the exceptions of volume and pause.	---
Recording can't be performed			
Recording does not start, even when the [REC] button on the remote control is pressed.	The DVD-RAM disc is not recognized.	It takes time for the notebook to identify a DVD-RAM disc. Press the [REC] button again after the "loading the disc" message or the recordable time indicator has disappeared	---
A message indicating that no disc is inserted is displayed when the [REC] button on the remote control is pressed.	A disc other than a DVD-RAM disc is installed.	Instant MyMedia will only record on DVD-RAM discs. Use a DVD-RAM disc.	"Recording TV programs" on page 109
	The disc is not inserted correctly.	Verify that the disc is inserted properly	Refer to your notebook's user guide.
	The drive tray is not closed.	Check that the disc is lying flat in the media tray and close the tray.	Refer to your notebook's user guide.

Recovery of Instant MyMedia

If Instant MyMedia does not start or does not work properly, the problem may be solved by returning the notebook to the status when purchased by means of performing an Instant MyMedia recovery.

- Use of the recovery of Instant MyMedia enables the setting of current channels to be deleted.
- To recover Instant MyMedia, you will need to use the Restore DVD and the Instant MyMedia recovery disc.

Execute the recovery of Instant MyMedia

1. Turn off your notebook and locate the [F12] key on the keyboard. Be ready to press this key immediately after you turn on the notebook.
2. Press the power button and press the [F12] key as soon as the Fujitsu logo appears. The Boot Menu will appear.

If you don't press the [F12] at the proper time, Windows will start. Turn off the notebook, and proceed again from step 1.

N6210.book Page 118 Wednesday, May 18, 2005 10:24 AM

3. Insert the Restore DVD in your drive. Wait approximately 10 seconds so the disc can be identified, then proceed to the next step.
4. Press the cursor down key to select "CD-ROM drive" and press the [Enter] key.

If the recovery menu is not displayed, eject the disc to check that a proper disc is installed. After checking, press the [Delete] key while pressing the [Ctrl] key and the [Alt] key to restart the notebook.

5. Using the cursor keys, select "Restore the Instant MyMedia" and press the [Enter] key.

If you select "Restore Hard Disk to Original State" or "Delete All Data on the Hard Disk," the data saved in the notebook will be erased. If you mistakenly select these, press the [N] on the following screen to stop the recovery.

6. Following the instruction in the screen, eject the Restore DVD and insert the Instant MyMedia Restore disc.
7. Press the [Y] key. A message showing "Restore is in process" is displayed, and your notebook will start copying files.
8. When restore is complete, a message appears prompting you to remove the Restore disc. Remove the disc and press the [Y] key. The system will reboot.

N6210.book Page 119 Wednesday, May 18, 2005 10:24 AM

SPECIFICATIONS

Tuner Specifications

Item		Specifications
Monitor		17" WXGA+
Sound Function		Built-in stereo speakers plus subwoofer
Remote Control*		Infrared system, with IR port built into front of notebook.
TV Tuner**		VHF channels 2-13/A-5 - W+28 UHF channels 14-69/W+29 - W+28 CATV channels
Audio Output		Stereo, US voice multiplex output support
Interface	Headphones	3.5mm stereo, mini-jack (output 1 mW or more, load impedance 32 Ohm)
	Antenna Input	Mini-jack (RF adapter cable included), 75 ohm
	Video Input	S-Video(4 pins) x 1 and Composite Video x 1 NTSC 525line/60 Hz
	Audio Input	Left (white)/Right (red) RCA-type x 1 each, max 1 Vrms
Encoder		Video compression method: MPEG2 Bit rate: 2/4/6/8 Mbps selectable. Resolution 720 x 480 Audio compression method: MPEG-Audio Layer 2 Bit rate: Stereo 224 kbps required Resolution: 16 bit Sampling rate: 48 kHz required (32/44.1k)
Power		+5.0V, ±5%

* BS/CS broadcasting channels cannot be received.

** See table on next page for remote control specifications.

N6210.book Page 120 Wednesday, May 18, 2005 10:24 AM

Remote Control Specifications

Remote Control Feature	Specifications
Communications Scheme	Infrared rays
Effective Distance/location	(see figure below)
Battery	AA dry battery x 2
Battery Life	Approximately 6 months (when using dry manganese batteries)

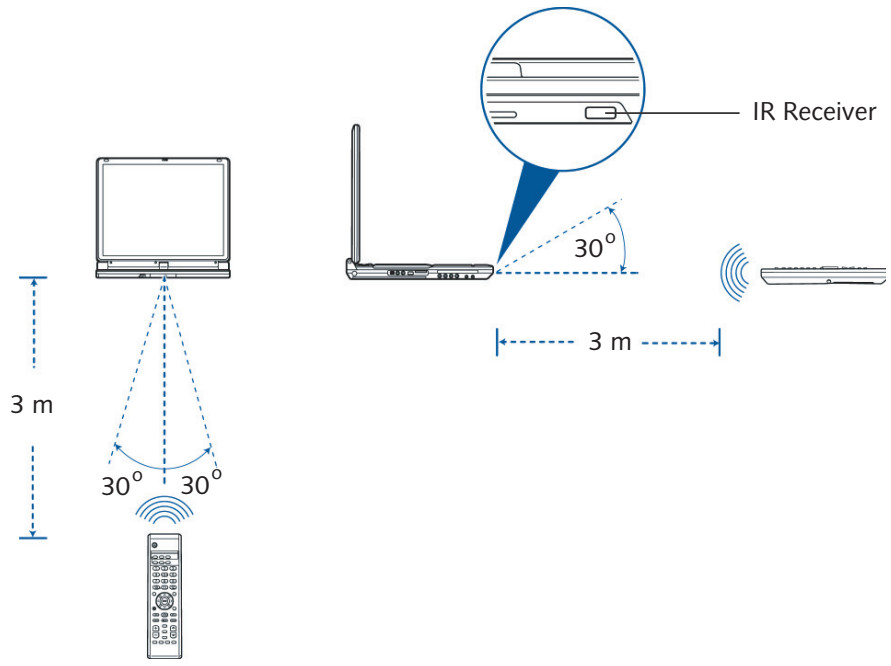

TECHNICAL SUPPORT

Fujitsu Computer Systems Contact Information

If you have problems you are unable to resolve, consult your support representative at:

- 1-800-8FUJITSU (1-800-838-5487)
- E-mail: 8fujitsu@us.fujitsu.com
- Web Site: http://www.computers.us.fujitsu.com/support

N6210.book Page 121 Wednesday, May 18, 2005 10:24 AM

Index

N6210.book Page 122 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 123 Wednesday, May 18, 2005 10:24 AM

Index

A

AC
- adapter 23, 72, 77
- plug adapters 66

Antenna Mini-Jack 101
Audio 71
Auto Insert Notification 39
Auto/Airline Adapter 23
Automatically Downloading Driver Updates 62

B

Battery 55, 56, 99
- bay 14
- care 66
- charging indicators 15
- conserving power 28
- dead 55
- faulty 55
- increasing life 66
- lithium ion battery 33, 78
- low 33
- recharging 33
- replacing 34
- shorted 34
- status indicator 15
- suspend mode 33

Battery Pack Lock 14
BIOS 77
- Guide 26
- memory 71
- setup utility 25

Boot 77
BOOT Priority Change 61
Boot Sequence 25
Built-in Speakers 52

C

Cache Memory 71, 77
CapsLock Indicator 15
Clicking 19
Color Resolution 71
Communications Port 47
copyright and trademark information 1
Cursor 19
Cursor Keys 16

D

DC In Jack 12, 23, 101
DC Output Cable 23
Desktop Control Panel 37
Device Ports 47, 72
Disk
- care 66

Display 57
Display Panel 9, 57
- adjusting 24
- brightness 24
- closing 24
- latch 9
- opening 24

Display quality 113
Display Timeout 29
Display types 115
Dolby Headphone 38
Double-Clicking 19
Dragging 20
Drivers and Application Restore CD 61
DVD/CD-ROM
- care 67
- drive 35

E

Error Messages 59
ExpressCards 43
Extended Memory 78
External Monitor Port 12, 48

F

FDU 27, 62
Floppy Disk Drive 71
- care 66

Fujitsu Driver Update utility 27, 62
Function Key
- F10 17
- F3 17
- F4 17
- F6 17
- F7 17
- FN 17

N6210.book Page 124 Wednesday, May 18, 2005 10:24 AM

G

Google Toolbar 73

H

Hard Disk Drive 42, 53, 71
formatting 42
internal 42
Hard Disk Timeout 29
Hard Disk/Optical Drive
access indicator 15
Headphone Jack 48, 101
Hibernation Feature 29

I

IEEE 1394 Port 12, 47
Installing a Memory Stick 40
Instant MyMedia
Disc 99
Exiting 106
Setting up 105
Setting up Channels 105
Skipping Channels 105
Starting with one button 106
Starting/closing 106
Integrated Pointing Device 71

K

Karoake 113
Keyboard 16, 53, 72
cursor keys 16
function keys 16
numeric keypad 16
windows keys 16

L

LAN port 13, 47
LifeBook
care 65
storing 65
traveling 65

M

Memory 71
capacity 46
compartment 14, 45
installing 45
removing 46
upgrade module 45
Memory Stick/SD Card 40
installing 40
removing 41
Memory Stick/SD Card Slot 11
Memory Upgrade Module 54
Microphone Jack 48
Modem Jack 13, 47
Modem Result Codes 60

N

Numeric Keypad 16
NumLk Indicator 15

O

Optical Drive 11, 35, 71, 101
Control Panel 36
loading 35
removing media 35
tray release 36
using 38
Optical Drive Eject Button 11

P

Parallel Port 79
Parental Control 113
PC Card 54
care 67
removing 43, 44
slot 10
PC Card Eject Button 10
POST 79
Power 72
AC adapter 23
failure 55
management 28
off 29
on 25
Power On Self Test 25, 59
Power/Suspend/Resume button 9, 25, 28, 56, 100
Pre-Installed Software 73
manuals 73
tutorials 73

N6210.book Page 125 Wednesday, May 18, 2005 10:24 AM

R

Registration 26, 27

Remote Control 99
- Angle 103
- Audio Switch 103
- Back 102
- Browse 102
- Channel Down 103
- Channel Up 103
- Cursor Move 102
- Display 103
- DVD 103
- Enter 103
- Fast Forward 103
- Fast Rewind 102
- List 103
- Live 102
- Menu 103
- Mute 103
- MyMedia 102
- Next 103
- Numeric Pad 102
- Play/Pause 102
- Power 102
- Record 102
- Return 103
- Screen 103
- Stop/Eject 102
- Subtitle 103
- TS 102
- TV 103
- TV/Video 103
- Volume Down 103
- Volume Up 102

Removing a Memory Stick 41

Restarting 29

Restoring the Factory Image 61

Restoring Your Pre-installed Software 61

RJ-11 47

S

ScrLk Indicator 15

Scrolling Button 9

SD Card
- Installing 40
- removing 41

Secure Digital Card
- removing 41

Serial Port 80

Shut Down 29

Software
- See Pre-installed Software

Specifications 71, 119

Status Indicator Panel 10, 15

Stereo Speakers 10, 100

Stop/Eject 111

Subwoofer 14

Suspend 80

Suspend Mode 28

S-Video Out Port 12

System Memory 71

T

Theft Prevention Lock Slot 71

TouchPad 19
- buttons 19
- controls 20

Touchpad 9

Touchpad Pointing Device 9

Troubleshooting 51, 116
- Audio does not come on or sound right 116
- Certain procedures don't work properly 117
- Recording can't be performed 117
- The screen does not appear 116
- The screen image is distorted 116

TV button 100

TV Tuner
- Adjusting the display quality 113
- Adjusting the display setting 115
- Adjusting the Volume 107, 111
- Air Vents 101
- Antenna Cable Adapter 99
- Audio Input Jacks 101
- Back button 100
- Bookmarks 113
- Changing a language 112
- Changing a password 114
- Changing angles 111
- Changing audio 111
- Changing Audio Mode 107
- Changing captions 111
- Changing display types 115
- Changing the parental lock setting 113
- Changing the play settings for DVDs 112
- Changing the region code 112
- Changing the screen setting 112
- Changing the setting to Karaoke 113
- Channel button 100
- Composite Video Cable Connection 104

N6210.book Page 126 Wednesday, May 18, 2005 10:24 AM

Connecting an Antenna 103
Connecting an External Audio Device 104
Connecting an External Video Device 104
Copying from an External Device to DVD 107
Discs 108
DVD/CD button 100
Fast-forward/Rewind 111
Full format 108
Initializing a DVD disc 108
Introducing the TV Tuner 99
Media Tray Eject Button 101
Muting the Volume 107
Next button 100
Passwords 114
Pause 111
Play/Pause button 100
Playing CD/DVDs 110
Playing programs from Instant MyMedia 112
Playing TV/videos recorded on notebook 109
Playing TV/videos recorded on other recorders 112
Quick Format 108
Recording TV programs 109
Recording TV Programs on a DVD 108
Recovery of Instant MyMedia 117
Region code 112
Remote Control Features 102
Remote Control IR Port 100
Selecting Channels 106
Setting the play start position 112
Setting the recording mode 109
Setting the Timer 115
Stop/Eject 111
S-Video Cable Connection 105
S-Video Input Port 101
Switching to TV Mode 106
Timer 115
Transfer of Chapter 111
Usable Disc Formats 108
Using bookmarks 113
Using the DVD menu 112
Video Input Jack (Composite) 101
Volume Control button 100
Watching Recorded TV Programs or Videos . . . 109
Watching Television 106
Watching TV/Video without Booting Up 106
Watching Video from External Devices 107
TV Tuner Applications 99
Instant MyMedia 99
TV Tuner Applications Disc 99
TV Tuner Features 99
Rear Panel Features 101
Right Side Features 101
Top/Front Features 100
TV Tuner Getting Started Guide 99

U

Universal Serial Bus Port 47
Unpacking 7
USB 14, 47, 54
ports 14

V

Video 71
Video RAM 71
Volume Control 18

W

Windows keys 16
Application key 16
Start keys 16
Windows Product Activation 26
Wireless LAN
Before Using the Wireless LAN 86
Connection using Wireless Zero Tool 88
Infrastructure Mode 86
IP address information 95
Specifications 96
Troubleshooting 92
Wireless LAN Glossary 93

N6210.book Page 127 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 128 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 129 Wednesday, May 18, 2005 10:24 AM

N6210.book Page 130 Wednesday, May 18, 2005 10:24 AM